
AFF3CT Documentation

Release v2.2.2

AFF3CT team

Jan 19, 2019

1	Introduction	1
2	Installation Guide	3
2.1	Get the Source Code	3
2.1.1	Git Installation	3
	Windows/macOS	3
	Linux	6
2.1.2	Clone AFF3CT from GitHub	6
2.2	Compilation	7
2.2.1	CMake Installation	7
	Windows/macOS	7
	Linux	8
2.2.2	C++ GNU Compiler Installation	8
	Windows	8
	macOS	9
	Linux	9
2.2.3	Compilation with a Makefile Project	9
	Windows	9
	macOS	9
	Linux	10
2.2.4	Compilation with a Visual Studio 2017 Solution	10
2.2.5	CMake Options	13
2.2.6	Compiler Options	13
	Build Type	13
	Specific Options	14
2.3	Installation	15
2.3.1	Makefile Project	15
2.3.2	Visual Studio Solution	15
2.3.3	Details	15
3	Simulation	17
3.1	Overview	17
3.1.1	Basic Arguments	17
3.1.2	Output	18
3.1.3	Philosophy	20
3.2	Parameters	20
3.2.1	Simulation parameters	20

--sim-type	21
-sim-cde-type, -C	21
--sim-prec, -p	22
--sim-noise-type, -E	23
-sim-noise-min, -m	23
-sim-noise-max, -M	24
--sim-noise-step, -s	24
-sim-noise-range, -R	24
--sim-pdf-path	24
--sim-meta	25
--sim-coded	25
--sim-coset, -c	25
--sim-dbg	25
--sim-dbg-hex	26
--sim-dbg-limit, -d	27
--sim-dbg-fra	27
--sim-dbg-prec	28
--sim-seed, -S	28
--sim-stats	29
--sim-threads, -t	30
--sim-crc-start	30
--sim-ite, -I	31
-sim-max-fra, -n	31
-sim-stop-time	31
-sim-crit-nostop	32
-sim-err-trk	32
-sim-err-trk-rev	32
-sim-err-trk-path	32
-sim-err-trk-thold	33
References	33
3.2.2 Source parameters	33
-src-info-bits, -K	33
--src-type	33
--src-implement	34
--src-fra, -F	34
--src-path	34
--src-start-idx	36
References	36
3.2.3 CRC parameters	36
--crc-type, --crc-poly	36
--crc-size	38
--crc-implement	38
References	38
3.2.4 Codec parameters	38
Codec Common	38
Common Encoder parameters	38
--enc-type	38
--enc-path	39
--enc-start-idx	39
Common Decoder parameters	40
--dec-type, -D	40
--dec-implement	40
--dec-flips	40
--dec-hamming	40

--dec-seed	41
References	41
Codec BCH (Bose, Ray-Chaudhuri and Hocquenghem)	41
BCH Encoder parameters	41
--enc-cw-size, -N	41
--enc-info-bits, -K	41
--enc-type	41
BCH Decoder parameters	42
--dec-type, -D	42
--dec-implement	42
--dec-corr-pow, -T	43
References	43
Codec LDPC (Low-Density Parity-Check)	43
LDPC Encoder parameters	43
--enc-cw-size, -N	43
--enc-info-bits, -K	43
--enc-type	44
--enc-g-path	44
--enc-g-method	44
--enc-g-save-path	45
LDPC Decoder parameters	45
--dec-h-path	45
--dec-type, -D	47
--dec-implement	47
--dec-simd	48
--dec-h-reorder	48
--dec-ite, -i	49
--dec-min	49
--dec-norm	50
--dec-off	50
--dec-mwbf	50
--dec-synd-depth	51
--dec-ppbf-proba	51
--dec-no-synd	51
References	51
LDPC Puncturer parameters	51
--pct-fra-size, -N	51
--pct-type	51
--pct-pattern	52
Codec Polar	52
Polar Encoder parameters	52
--enc-type	52
--enc-no-sys	52
--enc-fb-gen-method	53
--enc-fb-awgn-path	53
--enc-fb-sigma	54
References	54
Polar Decoder parameters	54
--dec-type, -D	54
--dec-implement	54
--dec-simd	55
--dec-ite, -i	55
--dec-lists, -L	56
--dec-partial-adaptive	56

--dec-polar-nodes	56
References	57
Polar Puncturer parameters	57
-pct-fra-size, -N	57
-pct-info-bits, -K	57
--pct-type	57
References	57
Codec RA (Repeat and Accumulate)	57
RA Encoder parameters	57
-enc-cw-size, -N	57
-enc-info-bits, -K	58
--enc-type	58
RA Decoder parameters	58
--dec-type, -D	58
--dec-implement	58
--dec-ite, -i	59
Codec Repetition	59
Repetition Encoder parameters	59
-enc-cw-size, -N	59
-enc-info-bits, -K	59
--enc-type	59
--enc-no-buff	60
Repetition Decoder parameters	60
--dec-type, -D	60
--dec-implement	60
Codec RS (Reed-Solomon)	61
RS Encoder parameters	61
-enc-cw-size, -N	61
-enc-info-bits, -K	61
--enc-type	61
RS Decoder parameters	62
--dec-type, -D	62
--dec-implement	62
--dec-corr-pow, -T	62
References	63
Codec RSC (Recursive Systematic Convolutional)	63
RSC Encoder parameters	63
-enc-info-bits, -K	63
--enc-type	63
--enc-no-buff	63
--enc-poly	64
--enc-std	64
RSC Decoder parameters	64
--dec-type, -D	64
--dec-implement	65
--dec-simd	65
--dec-max	66
References	66
Codec RSC DB (Double Binary)	66
RSC DB Encoder parameters	66
-enc-info-bits, -K	66
--enc-type	66
--enc-no-buff	67
--enc-std	67

RSC DB Decoder parameters	67
--dec-type, -D	67
--dec-implement	68
--dec-max	68
References	68
Codec Turbo	68
Turbo Encoder parameters	68
--enc-info-bits, -K	68
--enc-type	69
--enc-sub-type	69
--enc-json-path	69
--enc-sub-no-buff	69
--enc-sub-poly	70
--enc-sub-std	70
Turbo Decoder parameters	70
--dec-type, -D	70
--dec-implement	70
--dec-sub-type, -D	71
--dec-sub-implement	71
--dec-sub-simd	71
--dec-crc-start	71
--dec-fnc	71
--dec-fnc-ite-m	72
--dec-fnc-ite-M	72
--dec-fnc-ite-s	72
--dec-fnc-q	72
--dec-ite, -i	72
--dec-sc	73
--dec-sf-type	73
--dec-sub-max	74
References	74
Turbo Puncturer parameters	74
--pct-type	74
--pct-pattern	74
Codec Turbo DB	75
Turbo DB Encoder parameters	75
--enc-info-bits, -K	75
--enc-type	75
--enc-sub-type	75
--enc-sub-std	75
Turbo DB Decoder parameters	76
--dec-type, -D	76
--dec-implement	76
--dec-sub-type, -D	76
--dec-sub-implement	76
--dec-crc-start	76
--dec-fnc	77
--dec-fnc-ite-m	77
--dec-fnc-ite-M	77
--dec-fnc-ite-s	77
--dec-fnc-q	78
--dec-ite, -i	78
--dec-sf-type	78
--dec-sub-max	79

	References	79
	Turbo DB Puncturer parameters	79
	--pct-type	79
	--pct-fra-size, -N	79
	Codec TPC (Turbo Product Code)	79
	TPC Encoder parameters	80
	--enc-sub-cw-size, -N	80
	--enc-sub-info-bits, -K	80
	--enc-type	80
	--enc-sub-type	80
	--enc-ext	80
	TPC Decoder parameters	81
	--dec-sub-cw-size, -N	81
	--dec-sub-info-bits, -K	81
	--dec-type, -D	81
	--dec-implement	82
	--dec-ite, -i	83
	--dec-alpha	83
	--dec-beta	83
	--dec-c	83
	--dec-p	84
	--dec-t	84
	--dec-cp-coef	84
	--dec-sub-type, -D	84
	--dec-sub-corr-pow, -T	84
	--dec-sub-implement	84
	References	85
	Codec Uncoded	85
	Uncoded Encoder parameters	85
	Uncoded Decoder parameters	85
	--dec-type, -D	85
	--dec-implement	85
3.2.5	Interleaver parameters	85
	--itl-type	86
	--itl-cols	86
	--itl-path	86
	--itl-read-order	89
	--itl-uni	89
	References	89
3.2.6	Modem parameters	89
	--mdm-type	89
	--mdm-implement	92
	--mdm-bps	92
	--mdm-const-path	92
	--mdm-max	93
	--mdm-no-sig2	94
	--mdm-cpm-k	94
	--mdm-cpm-p	94
	--mdm-cpm-L	94
	--mdm-cpm-upf	94
	--mdm-cpm-map	95
	--mdm-cpm-ws	95
	--mdm-cpm-std	95
	--mdm-ite	96

	--mdm-psi	96
	--mdm-codebook	97
	--mdm-rop-est	98
	References	98
3.2.7	Channel parameters	98
	--chn-type	98
	--chn-implement	100
	--chn-blk-fad	102
	--chn-gain-occur	102
	--chn-path	102
	References	103
3.2.8	Quantizer parameters	103
	--qnt-type	103
	--qnt-implement	103
	--qnt-range	104
	--qnt-bits	104
	--qnt-dec	104
3.2.9	Monitor parameters	105
	--mnt-max-fe, -e	105
	--mnt-err-hist	105
	--mnt-err-hist-path	105
	--mnt-mutinfo	106
	--mnt-red-lazy	106
	--mnt-red-lazy-freq	106
	--mnt-mpi-comm-freq	107
3.2.10	Terminal parameters	107
	--ter-type	107
	--ter-freq	108
	--ter-no	108
3.2.11	Other parameters	108
	--help, -h	108
	--Help, -H	109
	--version, -v	109
	-keys, -k	110
	-except-a2l	111
	-except-no-bt	111
	-no-legend	111
	-full-legend	111
	--no-colors	111
3.3	PyBER	111
3.3.1	Install Python3	112
3.3.2	Run PyBER	112
4	Library API	113
5	Classes	115
6	Contributing Guidelines	117
6.1	Submitting changes	117
6.2	Regression Testing	117
6.3	Coding conventions	118
	Bibliography	119

AFF3CT (A Fast Forward Error Correction Toolbox!) is a toolbox dedicated to the **Forward Error Correction (FEC or channel coding)**. It is written in **C++** and it supports a large range of codes: from the well-spread **Turbo codes** to the new **Polar codes** including the **Low-Density Parity-Check (LDPC) codes**. AFF3CT includes many tools but the most important ones are:

- a **standalone simulator** to simulate communication chains (c.f. Fig. 1.1) based on a **Monte Carlo method**,
- a **toolbox** or a **library** that can be used through a well-documented API (Application Programming Interface).

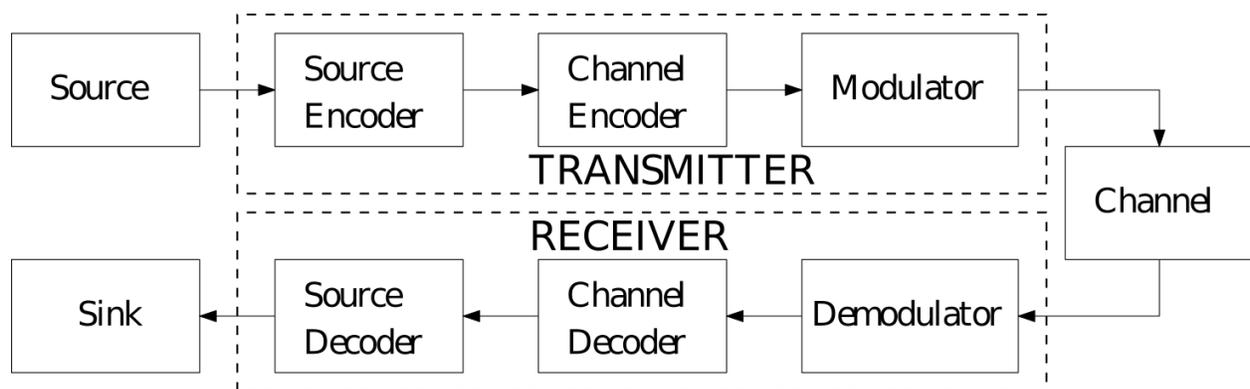


Fig. 1.1: The communication chain.

The simulator targets high speed simulations and extensively uses parallel techniques like SIMD (Single Instruction Multiple Data), multi-threading and multi-nodes programming models. Below, a list of the features that motivated the creation of the simulator:

1. **reproduce state-of-the-art decoding performances**,
2. **explore various channel code configurations**, find new trade-offs,
3. **prototype hardware implementation** (fixed-point receivers, hardware in the loop tools),
4. **reuse tried and tested modules** and add yours,

5. **alternative to MATLAB**, if you seek to reduce simulations time.

AFF3CT was first intended to be a simulator but as it developed, the need to reuse sub-parts of the code intensified: **the library was born**. Below is a list of possible applications for the library:

1. **build custom communication chains** that are not possible with the simulator,
2. **facilitate hardware prototyping**,
3. enable various modules to be used in SDR (Software-Defined Radio) contexts.

2.1 Get the Source Code

Important: If you do not plan to modify the AFF3CT source code and you want to use the simulator/library as is, you can **download one of the latest builds** from the [download page of the AFF3CT website](#) and skip this section.


This project uses [Git](#) as the version-control system to manage the source code. The AFF3CT repository is hosted on [GitHub](#). To get the source code, first install the Git software and secondly *clone* the [AFF3CT repository](#) locally.

2.1.1 Git Installation


Windows/macOS

Download [Git](#) from the [official web page](#) and launch the install. Just press the *Next* button until the installation is over.


Warning: On Windows, Git comes with the **Git Bash** terminal which is, to our mind, better suitable than the traditional **Windows Console**. We encourage you to use **Git Bash** instead of the **Windows Command Prompt** for the following steps.

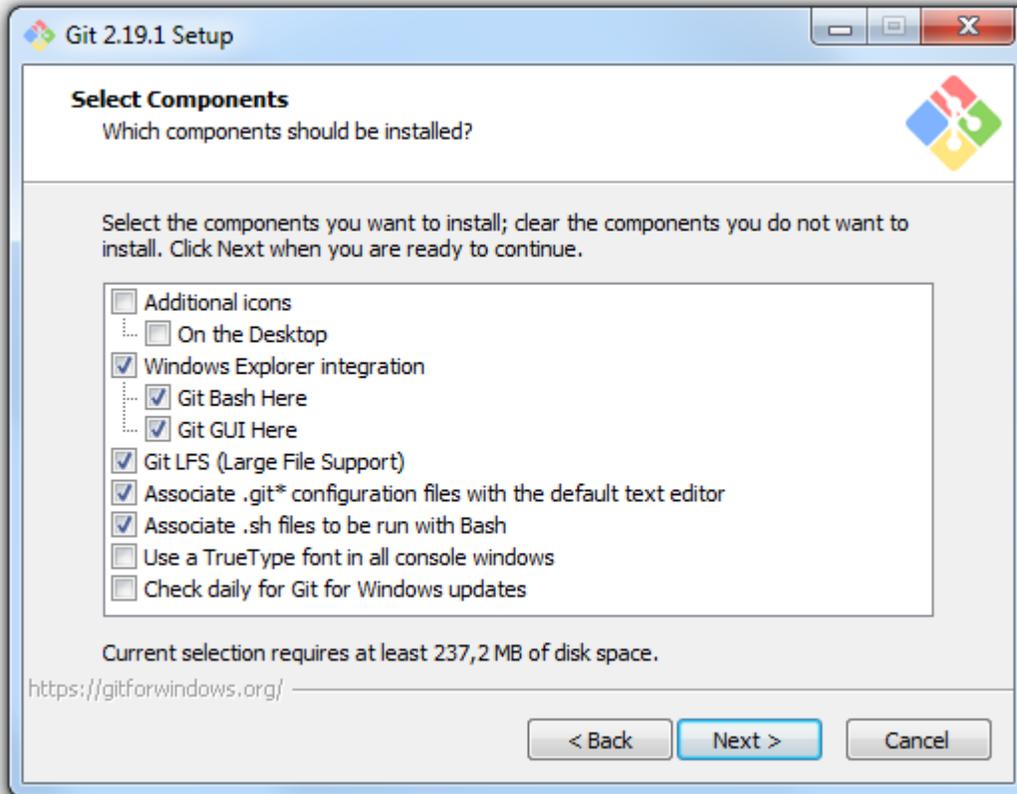

Warning: It is recommended to add Git to your system PATH during the installation.

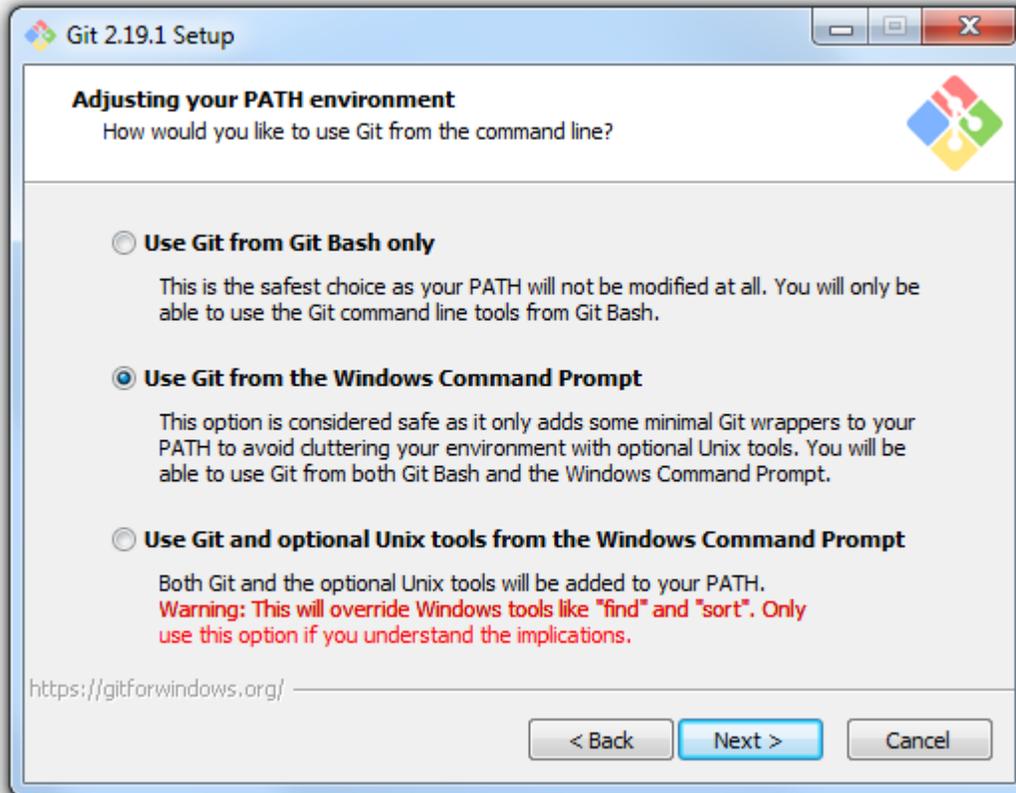

Note: On Windows, during the installation you may want to check the **Linux symbolic links** support.

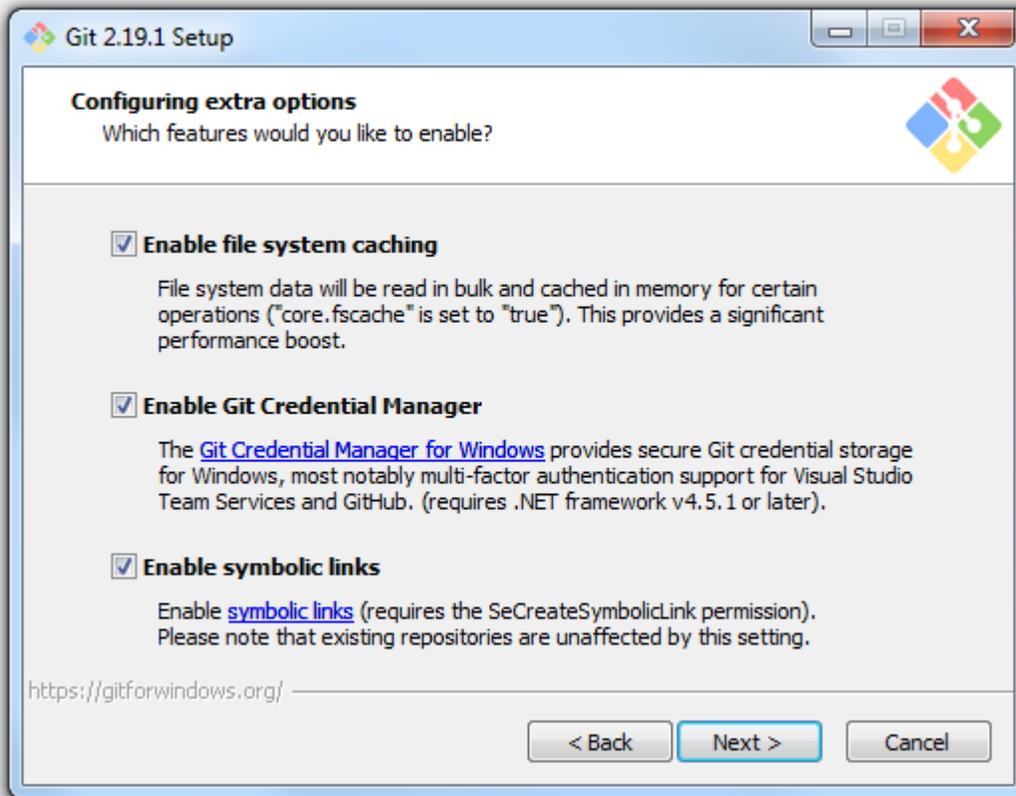

Linux

Install Git from the package manager:

```
sudo apt install git
```

Note: On CentOS-like systems you have to replace apt by yum.

2.1.2 Clone AFF3CT from GitHub

Get the source code from GitHub:

```
git clone --recursive https://github.com/aff3ct/aff3ct.git
cd aff3ct
```

The AFF3CT repository contains some dependencies to other repositories. Technically those dependencies are managed by the [Git submodule feature](#). By default the submodules are not downloaded during the `git clone` process this is why the `--recursive` option has been added.

Danger: On the [AFF3CT repository](#) you may want to directly download the source code without making a `git clone`. This will get you an archive without the AFF3CT dependencies and the build process will fail. **Do not directly download AFF3CT from GitHub and please make a clone!**

If you want to manually get or update the AFF3CT submodules, you can use the following command:

```
git submodule update --init --recursive
```

Warning: When `git pull` is used to get the last commits from the repository, the submodules are not automatically updated and it is required to call the previous `git submodule` command.

2.2 Compilation

Important: If you do not plan to modify the AFF3CT source code and you want to use the simulator/library as is, you can **download one of the latest builds** from the [download page of the AFF3CT website](#) and skip this section.

This project uses [CMake](#) in order to generate any type of projects (Makefile, Visual Studio, Eclipse, CLion, XCode, etc.).

AFF3CT is portable and can be compiled on Windows, macOS and Linux. Of course it works on traditional x86 architectures like Intel and AMD CPUs but it also works on embedded architectures like ARM CPUs.

AFF3CT supports many C++11 compliant compilers, until now the following compilers have been tested: GNU (`g++`), Clang (`clang++`), Intel (`icpc`) and Microsoft (`MSVC`). In this section, a focus is given to compile AFF3CT with:

1. the GNU compiler on Windows and Linux (Makefile project),
2. the Microsoft compiler on Windows (Visual Studio 2017 solution),
3. the Clang compiler on macOS (Makefile project).

2.2.1 CMake Installation

Windows/macOS


Download [CMake](#) from the official web page and launch the installer. Just press the *Next* button until the installation is over.

Important: On Windows, if you plan to build AFF3CT from the Visual Studio IDE you can skip the CMake installation and directly go to the [Compilation with Visual Studio](#) section.

Note: On Windows, it is recommended to download a version of CMake with an installer: it looks like `cmake-x.x.x-win64-x64.msi`.

Warning: It is recommended to add CMake to your system *PATH* during the installation.

Danger: The CMake minimal version requirement is **3.0.2**.

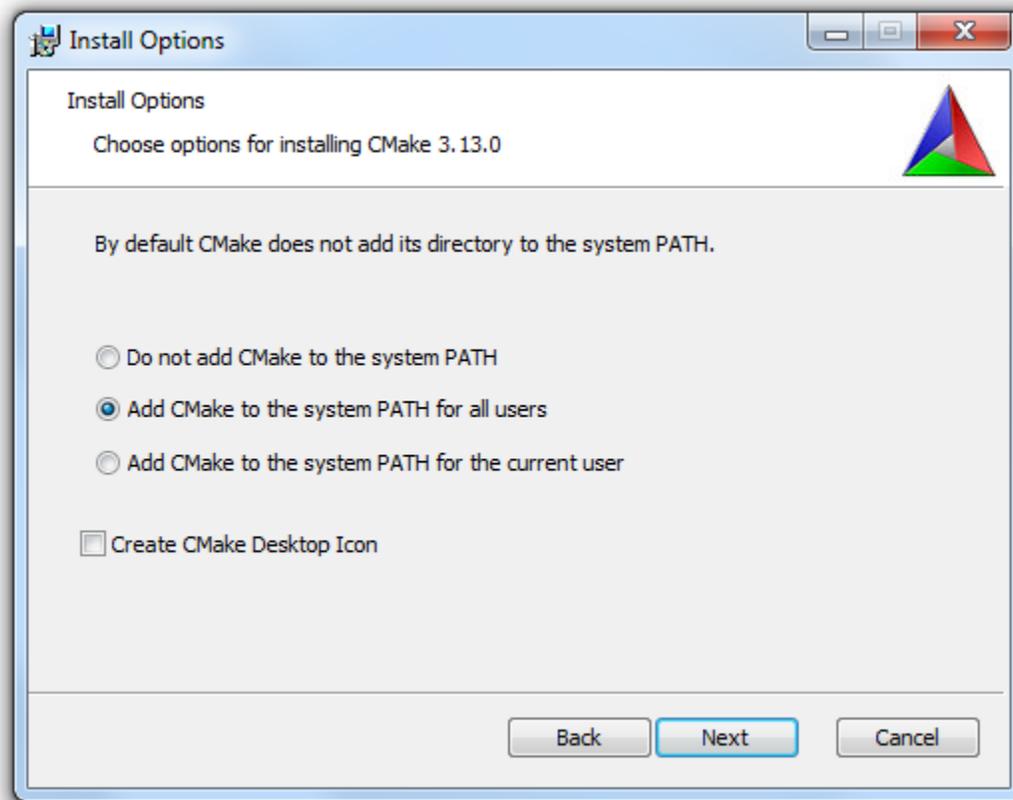

Linux

Install Make and CMake from the package manager:

```
sudo apt install make cmake
```

Note: On CentOS-like systems you have to replace `apt` by `yum`.

2.2.2 C++ GNU Compiler Installation

Windows

Download the latest MinGW build from the [official web page](#) (tested with MinGW x86_64-6.2.0). Unzip the archive. Copy the extracted `mingw64` folder in the `C:\Programs\Git\` folder (overwrite all the duplicated files).

Note: We suppose that you have installed Git for Windows as explained in the [Git Installation on Windows](#) section and consequently you have Git Bash installed.

macOS

The instructions to install the C++ GNU compiler are not given for macOS because the native Clang compiler will be used instead in the next steps. Directly go to the *Compilation with a Makefile project on macOS* section.

Linux

Install the C++ GNU compiler from the package manager:

```
sudo apt install g++
```

Note: On CentOS-like systems you have to replace `apt` by `yum`.

2.2.3 Compilation with a Makefile Project

Go into the directory where you cloned AFF3CT, this directory will be referred as `$AFF3CT_ROOT`.

Windows

Generate the Makefile from CMake:

```
mkdir build
cd build
cmake .. -G"MinGW Makefiles"
```

This last command line should fail but you can ignore it, continue with:

```
cmake .. -DCMAKE_CXX_COMPILER="g++.exe" -DCMAKE_BUILD_TYPE="Release" -DCMAKE_CXX_
↵FLAGS="-funroll-loops -march=native"
```

Build AFF3CT with the Makefile:

```
mingw32-make -j4
```

Once finished, the AFF3CT executable should be located in the `$AFF3CT_ROOT/build/bin` folder.

Danger: Run the previous commands on **Git Bash** (Start Menu > Git > Git Bash) and not on the **Windows Command Prompt**. If you try to run the previous commands on the **Windows Command Prompt**, CMake will not find the GNU compiler (`g++.exe` and `gcc.exe` commands) because it has not been added to the system PATH, same for the `mingw32-make` command.

macOS

Generate the Makefile from CMake:

```
mkdir build
cd build
cmake .. -G"Unix Makefiles" -DCMAKE_CXX_COMPILER="clang++" -DCMAKE_BUILD_TYPE="Release
↵" -DCMAKE_CXX_FLAGS="-funroll-loops -march=native"
```

Build AFF3CT with the Makefile:

```
make -j4
```

Once finished, the AFF3CT executable should be located in the `$AFF3CT_ROOT/build/bin` folder.

Linux

Generate the Makefile from CMake:

```
mkdir build
cd build
cmake .. -G"Unix Makefiles" -DCMAKE_CXX_COMPILER="g++" -DCMAKE_BUILD_TYPE="Release" -
↳DCMAKE_CXX_FLAGS="-funroll-loops -march=native"
```


Build AFF3CT with the Makefile:

```
make -j4
```


Once finished, the AFF3CT executable should be located in the `$AFF3CT_ROOT/build/bin` folder.

2.2.4 Compilation with a Visual Studio 2017 Solution


Since Microsoft Visual Studio 2017, Visual natively supports CMake. To generate the AFF3CT solution, open the `$AFF3CT_ROOT` folder from the IDE.

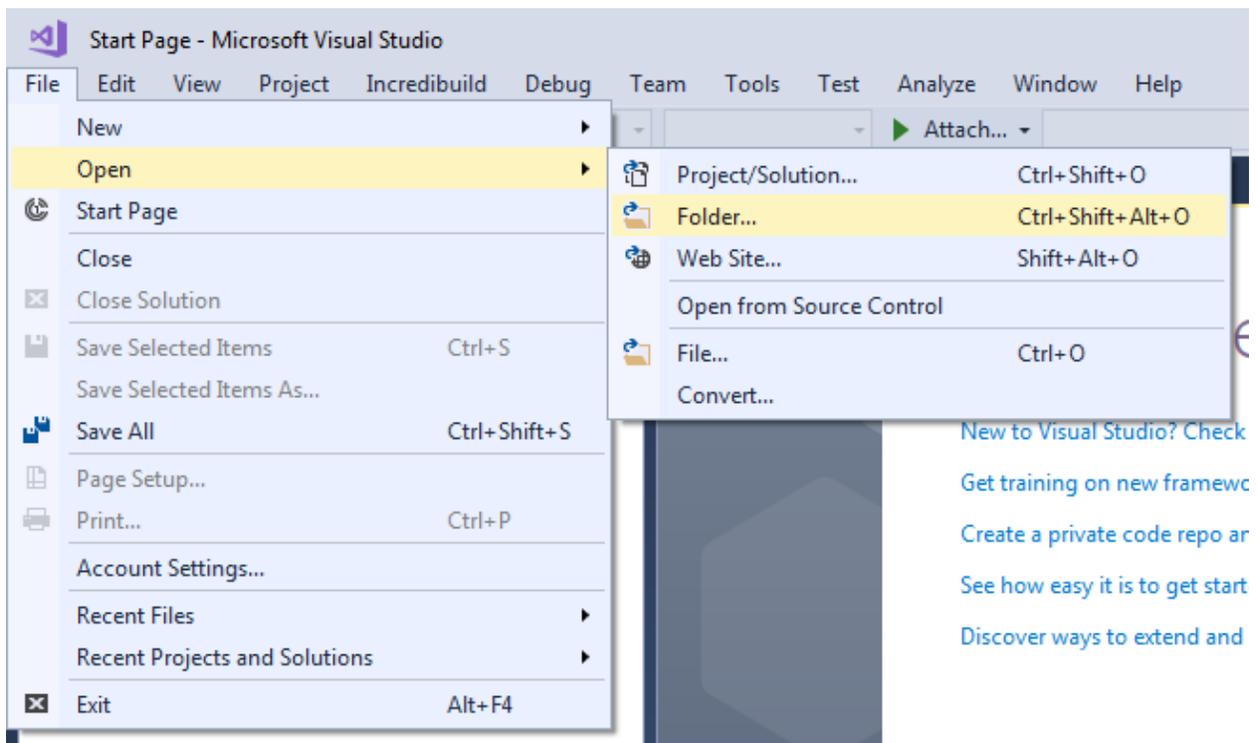

Select the *Release* target and press the green play button `aff3ct.exe` to start the compilation.

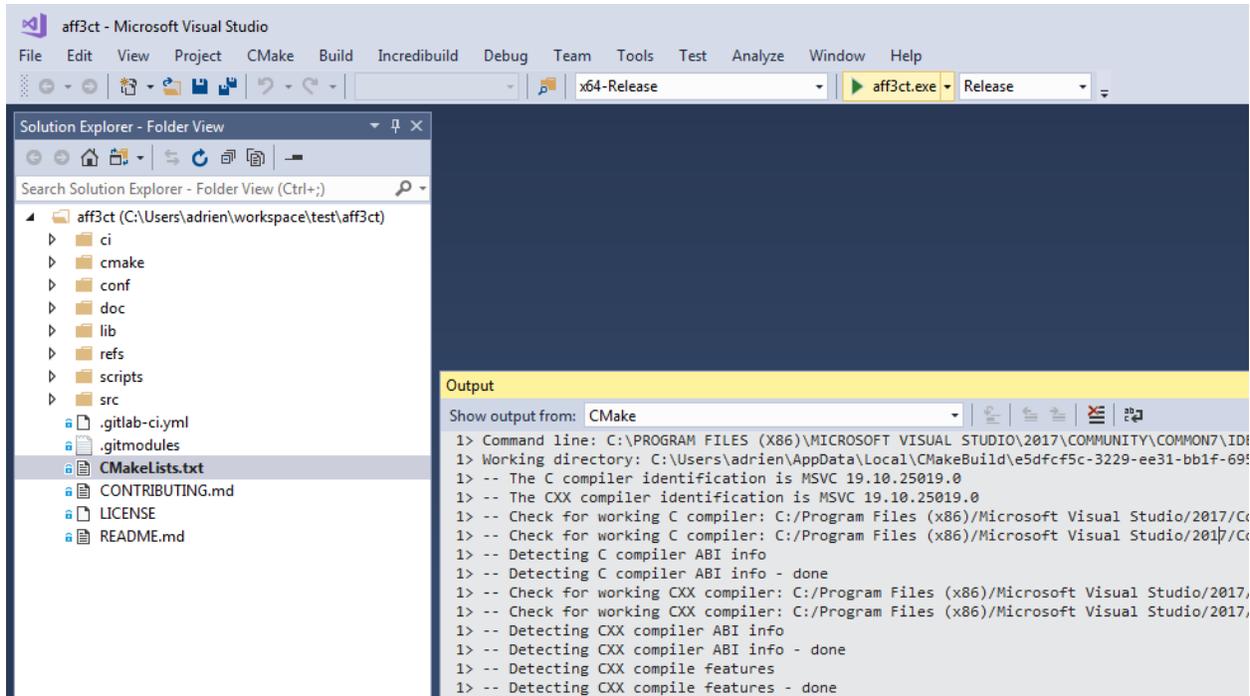

Once AFF3CT is compiled you can browse the build by right clicking on `CMakeList.txt` > Cache > Open Cache Folder.

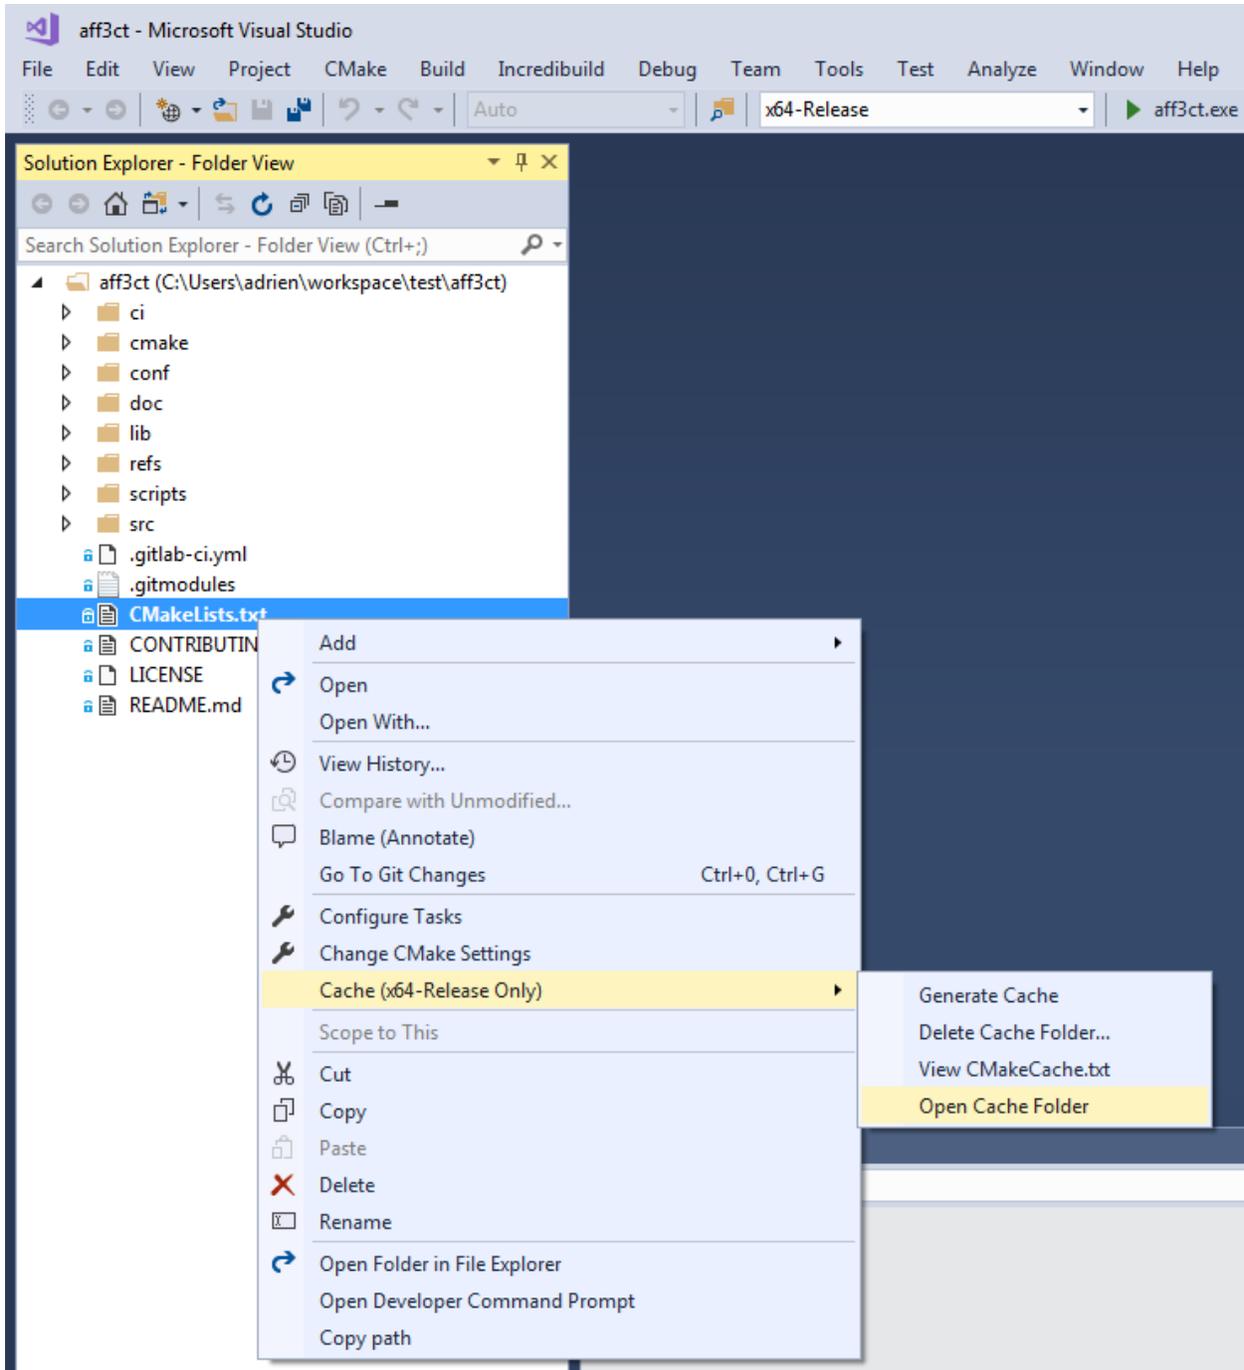

Note: Visual Studio should not be mixed up with Visual Studio Code. Visual Studio is the Windows native IDE and Visual Studio Code is a portable code editor.

Note: Visual Studio 2017 Community is free for Open-source contributors, students and freelance developers.

Warning: The Visual Studio default compiler (MSVC) is known to generate significantly slower AFF3CT executable than the GNU compiler. **If you target an high speed executable it is recommended to use the GNU compiler.**

The compilation can also be started from the command line after calling the %VS_PATH%\VC\Auxiliary\Build\vcvars64.bat batch script (where %VS_PATH% is the location of Visual Studio on your system):

```
devenv /build Release aff3ct.sln
```

2.2.5 CMake Options

CMake allows to define project specific options. AFF3CT takes advantage of this feature and provides the following options:

Option	Type	Default	Description
AFF3CT_COMPILE_EXECUTABLE	BOOLEAN	ON	Compile the executable.
AFF3CT_COMPILE_STATIC_LIBRARY	BOOLEAN	ON	Compile the static library.
AFF3CT_COMPILE_SHARED_LIBRARY	BOOLEAN	ON	Compile the shared library.
AFF3CT_LINK_GSL	BOOLEAN	ON	Link with the GSL library (used in the channels).
AFF3CT_LINK_MKL	BOOLEAN	ON	Link with the MKL library (used in the channels).
AFF3CT_SYSTEMC_SIMULATION	BOOLEAN	OFF	Enable the SystemC simulation (incompatible with the library compilation).
AFF3CT_SYSTEMC_SUPPORT	BOOLEAN	ON	Enable the SystemC support (only for the modules).
AFF3CT_MPI	BOOLEAN	ON	Enable the MPI support.
AFF3CT_POLAR_BIT_PACKING	BOOLEAN	ON	Enable the bit packing technique for Polar code SC decoding.
AFF3CT_COLORS	BOOLEAN	ON	Enable the colors in the terminal.
AFF3CT_BACKTRACE	BOOLEAN	ON	Enable the backtrace display when an exception is raised. On Windows and macOS this option is not available and automatically set to OFF.
AFF3CT_EXTERNAL_STRINGS	BOOLEAN	ON	Enable external strings for the help documentation. If ON the help doc will be parsed from the strings.rst external file. If OFF the strings will be self-contained in the binary. On MSVC (Microsoft Visual C++) this option is not available and automatically set to ON.
AFF3CT_PRECISION	STRING	MULTI	Select the precision in bits (can be '8', '16', '32', '64' or 'MULTI').

Considering an option AFF3CT_OPTION we want to set to ON, here is the syntax to follow:

```
cmake .. -DAFF3CT_OPTION="ON"
```

2.2.6 Compiler Options

Build Type

CMake allows to select the type of build through the CMAKE_BUILD_TYPE built-in variable. Release and Debug are the common values that the variable can get. For instance, to compile in release mode:

```
cmake .. -DCMAKE_BUILD_TYPE="Release"
```

Note: In CMake it is recommended to not explicitly set the compiler optimization level flags (`-O0`, `-O1`, `-O2`, `-O3`, etc.). Those compiler options will be set automatically by the `CMAKE_BUILD_TYPE` built-in variable. For instance, with the GNU compiler, if `CMAKE_BUILD_TYPE` is set to `Release`, the code will be compiled with the `-O3` flag.

Note: If you need to develop in AFF3CT it is recommended to compile in the `Debug` mode (or eventually `RelWithDebInfo` mode) during the development process to add the debug symbols in the binary files. It will certainly ease the debug process but be careful, the execution speed will be seriously affected in this mode, be sure to switch to the `Release` mode when the code is stable.

Note: In Visual Studio solutions, the `CMAKE_BUILD_TYPE` built-in variable has no effect and the build type is directly managed by Visual.

Specific Options

CMake has a built-in variable you can set to specify the compiler options: `CMAKE_CXX_FLAGS`. For instance, it can be used like this:

```
cmake .. -DCMAKE_CXX_FLAGS="-funroll-loops -march=native"
```

Many parts of the AFF3CT code use the SIMD parallelism and this type of instructions often requires additional compiler options to be enabled:

Option	Description
<code>-msse2</code>	Enable the SSE2 (Streaming SIMD Extensions 2) set of instructions on x86 CPUs (Central Process Units) (128-bit vector size, required for 32-bit and 64-bit data).
<code>-mssse3</code>	Enable the SSSE3 (Supplemental Streaming SIMD Extensions 3) set of instructions on x86 CPUs (128-bit vector size, specifically required for 32-bit data and the SC (Successive Cancellation) FAST decoder, see the <code>-dec-type</code> , <code>-D</code> and <code>-dec-implement</code> parameters).
<code>-msse4.1</code>	Enable the SSE4.1 (Streaming SIMD Extensions 4.1) set of instructions on x86 CPUs (128-bit vector size, required for 8-bit and 16-bit data).
<code>-mavx</code>	Enable the AVX (Advanced Vector Extensions) set of instructions on x86 CPUs (256-bit vector size, required for 32-bit and 64-bit data).
<code>-mavx2</code>	Enable the AVX2 (Advanced Vector Extensions 2) set of instructions on x86 CPUs (256-bit vector size, required for 8-bit and 16-bit data).
<code>-mavx512f</code>	Enable the AVX-512F (Advanced Vector Extensions 512-bit Foundation) set of instructions on x86 CPUs (512-bit vector size, required for 32-bit and 64-bit data).
<code>-mavx512bw</code>	Enable the AVX-512BW (Advanced Vector Extensions 512-bit Bytes-Words) set of instructions on x86 CPUs (512-bit vector size, required for 8-bit and 16-bit data).
<code>-mfpu=neon</code>	Enable the NEON (ARM SIMD instructions) set of instructions on ARMv7 (Advanced RISC (Reduced Instruction Set Computer) Machine Version 7) and ARMv8 (Advanced RISC (Reduced Instruction Set Computer) Machine Version 8) CPUs (128-bit vector size, required for 8-bit, 16-bit data and 32-bit data).
<code>-march=native</code>	Let the compiler choose the best set of instructions available on the current architecture (it does not work for ARMv7 architectures since the NEON instruction set is not IEEE (Institute of Electrical and Electronics Engineers) 754 compliant).

Warning: Previous options are only valid for the GNU (GNU's Not Unix!) and the Clang compilers but it exists similar options for the other compilers like the Microsoft compiler (MSVC) or the Intel compiler (icpc).

Danger: Some AFF3CT routines require the floating-point operations to be IEEE-compliant: numerical instabilities has been reported when compiling with the `--ffast-math` flag. Be aware that the `-Ofast` option is the combination of `-O3` and `--ffast-math`. **We recommend to avoid the `--ffast-math` option unless you know what you are doing.**

2.3 Installation

Important: If you do not plan to modify the AFF3CT source code and you want to use the simulator/library as is, you can **download one of the latest builds** from the [download page of the AFF3CT website](#) and skip this section.

Once AFF3CT has been compiled, it is possible (not mandatory) to install it on your system. On Unix-like systems, traditionally, the fresh build is installed in the `/usr/local` directory (this is the CMake default installation path). This location can be changed by setting the `CMAKE_INSTALL_PREFIX` built-in variable with an other path. For instance, to install AFF3CT in the current build:

```
cmake .. -DCMAKE_INSTALL_PREFIX="install"
```

This command do not install AFF3CT. It only prepares the project to be installed in the selected location.

2.3.1 Makefile Project

To install AFF3CT, call the *install* target on the current Makefile:

```
make install
```

Note: Depending on the chosen `CMAKE_INSTALL_PREFIX` location, the administrator privileges (**sudo**) can be required.

2.3.2 Visual Studio Solution

In case of a Visual Studio Solution, an *INSTALL* project is defined and ensures the installation when triggered. This can be done from the Visual Studio IDE or from the command line after calling the `%VS_PATH%\VC\Auxiliary\Build\vcvars64.bat` batch script (where `%VS_PATH%` is the location of Visual Studio on your system):

```
devenv /build Release aff3ct.sln /project INSTALL
```

2.3.3 Details

The installed package is organized as follow:

- bin/
 - `aff3ct-M.m.p` the AFF3CT executable binary.
- include/
 - `aff3ct-M.m.p/` contains all the includes required by AFF3CT.
- lib/
 - `libaff3ct-M.m.p.a` the AFF3CT static library.
 - `libaff3ct-M.m.p.so` the AFF3CT shared library.
 - `cmake/`
 - * `aff3ct-M.m.p/` contains the CMake configuration files required to link with AFF3CT.
- share/
 - `aff3ct-M.m.p`
 - * `conf/` contains some input files to configure the AFF3CT simulator.
 - * `refs/` many results from AFF3CT simulations.
 - * `doc/` contains the AFF3CT documentation.

M stands for the major number of the version, m the minor number and p the id of the last patch.

In this section, first an overview of the simulator capabilities is given, secondly the parameters of the simulator are describe and finally PyBER, a GUI (Graphical User Interface) tool dedicated to the display of BER/FER (Bit and Frame Error Rate) curves, is presented.

3.1 Overview

The AFF3CT toolbox comes with a simulator dedicated to the **communication chains**. The simulator focuses on **the channel coding level**. It can be used to reproduce/validate **state-of-the-art BER/FER performances** as well as an **exploration tool to bench various configurations**.

The AFF3CT simulator is based on a **Monte Carlo method**: the transmitter emits frames that are **randomly noised by the channel** and then the receiver try to decode the noised frames. The transmitter continues to emit frames until a fixed number of frame errors in achieved (typically 100 frame errors). A frame error occurs when the original frame from the transmitter differs from the the receiver decoded frame. As a consequence, when the SNR (Signal Noise Ratio) decreases, the number of frames to simulate increases as well as the simulation time.

3.1.1 Basic Arguments


The AFF3CT simulator is a **command line program** which can take many different arguments. The command line interface make possible to write scripts that run a battery of simulations for instance. Here is a minimalist command line using AFF3CT:

```
aff3ct -C "POLAR" -K 1723 -N 2048 -m 1.0 -M 4.0 -s 1.0
```

`-C` is a required parameter that defines the type of channel code that will be used in the communication chain (see the *-sim-cde-type*, *-C* section). `-K` is the number of information bits and `-N` is the frame size (bits transmitted over the channel). The Fig. 3.1 illustrates those parameters in a simplified communication chain.

The simulator computes the BER (Bit Error Rate) and the FER (Frame Error Rate) for a SNR range (by default the SNR is E_b/N_0 in dB). `-m` is the first SNR value to simulate with and `-M` is the last one (see the *-sim-noise-*

$$C = \{\text{POLAR, LDPC, TURBO, ...}\}$$

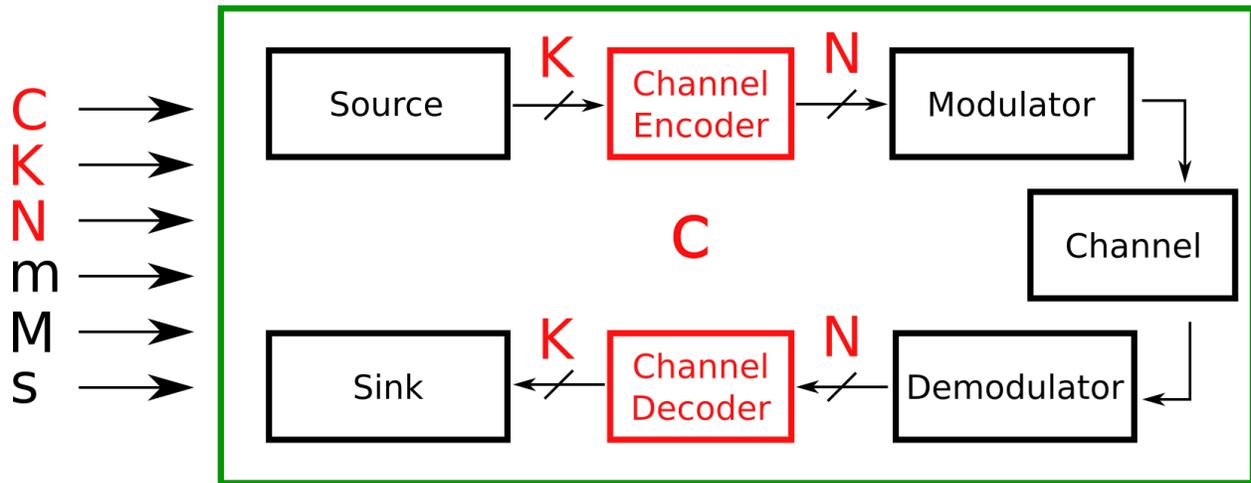

Simulation

Fig. 3.1: Code-related parameters in the communication chain.

min, *-m* and *-sim-noise-max*, *-M* sections for more information). *-s* is the step between each SNR (c.f. section *-sim-noise-step*, *-s*). The Fig. 3.2 shows the output BER for each simulated SNR values.

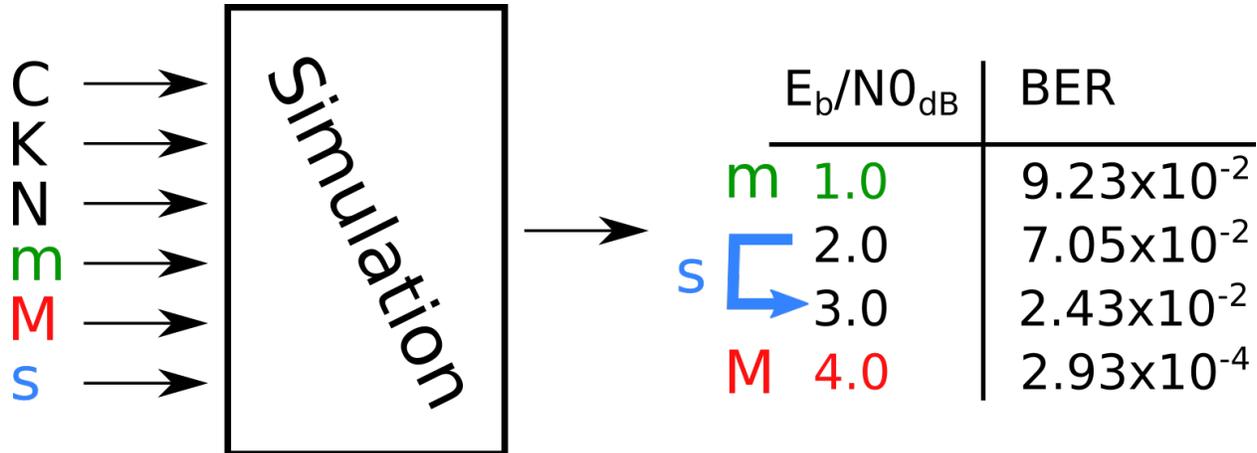


Fig. 3.2: SNR-related parameters in the communication chain.

3.1.2 Output

The output of following command will look like:

```
aff3ct -C "POLAR" -K 1723 -N 2048 -m 1.0 -M 4.0 -s 1.0
# -----
# ---- A FAST FORWARD ERROR CORRECTION TOOLBOX >> ----
# -----
```

(continues on next page)

3.1.3 Philosophy

To understand the organization of the parameters in the simulator, it is important to be aware of the simulator structure. As illustrated in the Fig. 3.3, a simulation contains a set of modules (*Source*, *Codec*, *Modem*, *Channel* and *Monitor* in the example). A module can contain one or more tasks. For instance, the *Source* module contains only one task: *generate()*. In contrast, the *Modem* module contains two tasks: *modulate()* and *demodulate()*. A task can be assimilated to a process which is executed at runtime.

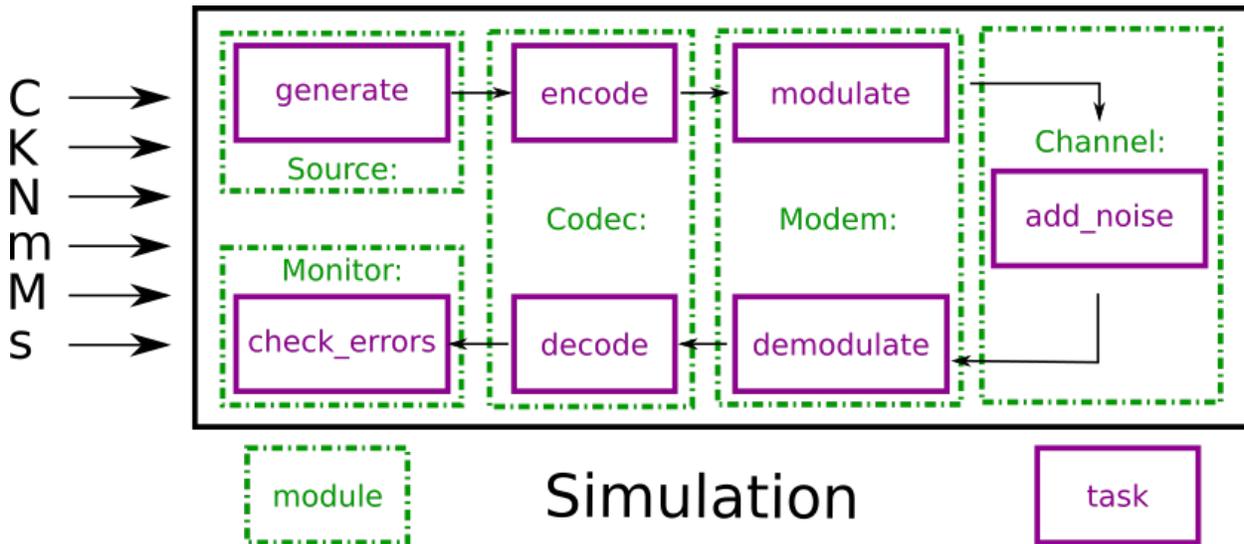


Fig. 3.3: Modules and tasks of in the simulation.

Each module or task has its own set of arguments. Still, some of the arguments are common to several modules and tasks:

- `--xxx-type` is often used to define the type of each module: the type of modulation, channel or channel decoder,
- `--xxx-implem` specifies the type of implementation used. The keywords `NAIVE` or `STD` are often used to denote a readable but unoptimized source code, whereas `FAST` stands for a source code that is optimized for a high throughput and/or low latency.

3.2 Parameters

The AFF3CT simulator is highly customizable and contains many arguments classified in three categories:

- Required** identified by the **REQUIRED** image, they are needed to launch a simulation.
- Optional** set up the simulation in many ways instead of the default configuration.
- Advanced** identified by the **ADVANCED** image, they lead to a more extensive use of the simulator.

3.2.1 Simulation parameters

The simulation parameters allow to customize the communication chain from an high level point of view. Various communication chain skeletons are available and can be selected as well as the channel code family to simulate, it is also possible to enable debug and benchmarking tools.

--sim-type**Type** text**Allowed values** BFER BFERI EXIT**Default** BFER**Examples** --sim-type BFERI

Select the type of simulation (or communication chain skeleton).

Description of the allowed values:

Value	Description
BFER	The standard BER/FER chain (Fig. 3.4).
BFERI	The iterative BER/FER chain (Fig. 3.5).
EXIT	The EXIT chart simulation chain (not documented at this time).

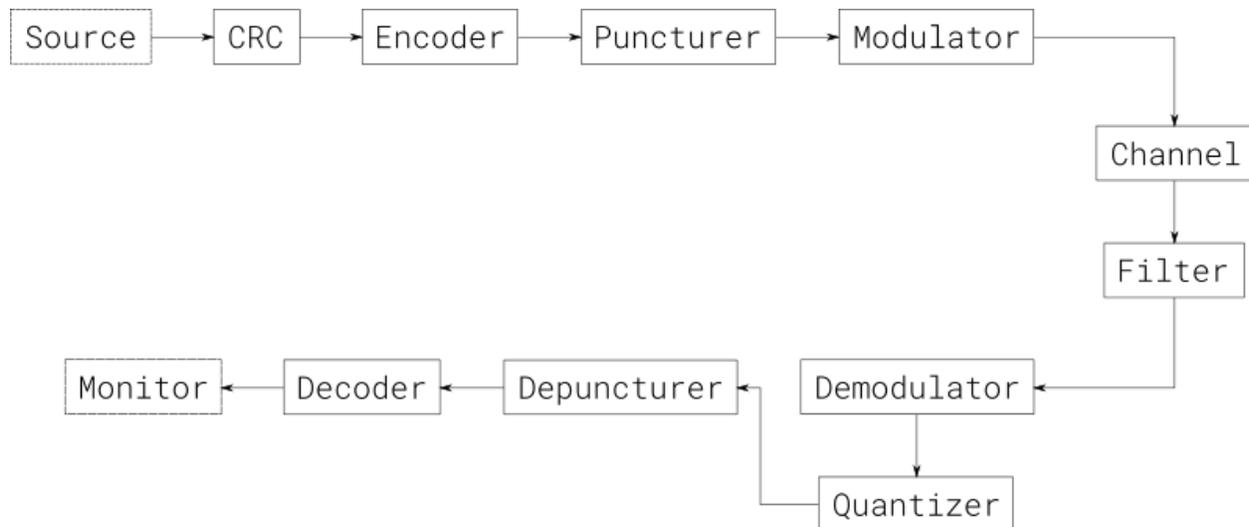


Fig. 3.4: The standard BER/FER chain.

--sim-cde-type, -C **REQUIRED****Type** text**Allowed values** BCH LDPC POLAR RA REP RS RSC RSC_DB TURBO TURBO_DB
TURBO_PROD UNCODED**Examples** -C BCH

Select the channel code family to simulate.

Description of the allowed values:

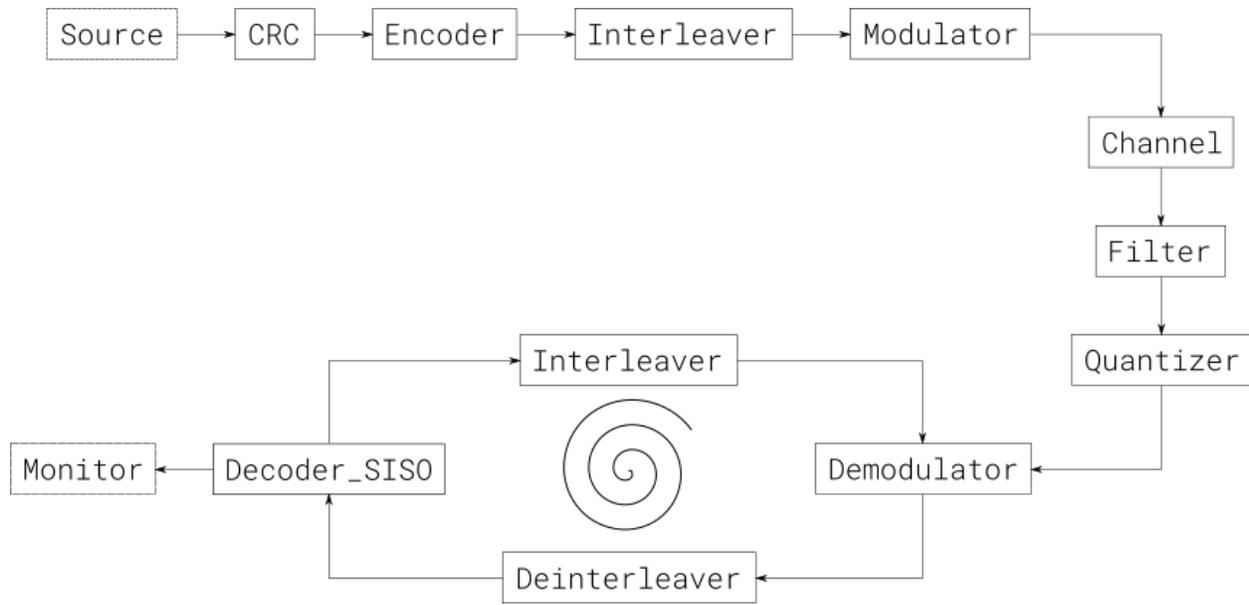


Fig. 3.5: The iterative BER/FER chain.

Value	Description
BCH	The Bose–Chaudhuri–Hocquenghem codes [BRC60].
LDPC	The Low-Density Parity-Check codes [Gal63][MN95].
POLAR	The Polar codes [Ari09].
RA	The Repeat Accumulate codes [DHJM98].
REP	The Repetition codes [RL09].
RS	The Reed-Solomon codes [RS60].
RSC	The Recursive Systematic Convolutional codes [RL09].
RSC_DB	The Recursive Systematic Convolutional codes with double binary symbols [RL09].
TURBO	The Turbo codes [BGT93].
TURBO_DB	The Turbo codes with double binary symbols [BGT93].
TURBO_PROD	The Turbo Product codes [RL09].
UNCODED	An uncoded simulation.

Note: Only POLAR, RSC, RSC_DB, LDPC and UNCODED codes are available in BFERI simulation type.

--sim-prec, -p

Type integer

Default 32

Allowed values 8 16 32 64

Examples --sim-prec 8

Specify the representation of the real numbers in the receiver part of the chain.

64-bit and 32-bit precisions imply a floating-point representation of the real numbers. 16-bit and 8-bit imply a fixed-point representation of the real numbers (see the *Quantizer parameters* to configure the quantization).

Description of the allowed values:

Value	Description
8	8-bit precision.
16	16-bit precision.
32	32-bit precision.
64	64-bit precision.

--sim-noise-type, -E

Type text

Allowed values EBNO ESN0 EP ROP

Default EBNO

Examples -E EBNO

Select the type of **noise** used to simulate.

Description of the allowed values:

Value	Description
EBNO	SNR per information bit
ESN0	SNR per transmitted symbol
EP	Event Probability
ROP	Received Optical Power

ESN0 is automatically calculated from EBNO and vice-versa with the following equation:

$$\frac{E_s}{N_0} = \frac{E_B}{N_0} + 10 \cdot \log(R \cdot bps),$$

where R is the bit rate and bps the number of bits per symbol.

Note: When selecting EP the simulator runs in reverse order, ie. from the greatest event probability to the smallest one.

Hint: When selecting a BEC or BSC channel the EP noise type is automatically set except if you give another one. This is the same for the OPTICAL channel with the ROP noise type. The channel type is set with the *-chn-type* argument.

--sim-noise-min, -m

REQUIRED

Type real number

Examples -m 0.0

Set the minimal noise energy value to simulate.

Attention: This argument is another way to set the noise range to simulate. It is ignored or not required if the *-sim-noise-range, -R* argument is given, so you may find other piece of information in its description.

`--sim-noise-max, -M` **REQUIRED**

Type real number

Examples `-M 5.0`

Set the maximal noise energy value to simulate.

Attention: This argument is another way to set the noise range to simulate. It is ignored or not required if the `--sim-noise-range, -R` argument is given, so you may find other piece of information in its description.

`--sim-noise-step, -s`

Type real number

Default 0.1

Examples `-s 1.0`

Set the noise energy step between each simulation iteration.

Attention: This argument is another way to set the noise range to simulate. It is ignored or not required if the `--sim-noise-range, -R` argument is given, so you may find other piece of information in its description.

`--sim-noise-range, -R` **REQUIRED**

Type MATLAB style vector

Default step of 0.1

Examples `-R "0.5:1,1:0.05:1.2,1.21"`

Set the noise energy range to run in a MATLAB style vector.

The above example will run the following noise points:

```
0.5, 0.6, 0.7, 0.8, 0.9, 1.0, 1.05, 1.1, 1.15, 1.2, 1.21
```

Attention: The numerical range for a noise point is `[-214.748; 213.952]` with a precision of 10^{-7} .

Note: If given, the `--sim-noise-min, -m`, `--sim-noise-max, -M`, and `--sim-noise-step, -s` parameters are ignored. But it is not required anymore if `--sim-noise-min, -m` and `--sim-noise-max, -M` are set.

`--sim-pdf-path`

Type file

Rights read only

Examples `--sim-pdf-path example/path/to/the/right/file`

Give a file that contains PDF (Probability Density Function) for different ROP (Received Optical Power).

To use with the OPTICAL *channel*. It sets the noise range from the given ones in the file. However, it is overwritten by `--sim-noise-range, -R` or limited by `--sim-noise-min, -m` and `--sim-noise-max, -M` with a minimum step of `--sim-noise-step, -s` between two values.

`--sim-meta`

Type text

Examples `--sim-meta "TITLE"`

Add meta-data at the beginning of the AFF3CT standard output (INI format is used). The value of the parameter will be affected to the *title* meta-data and the *command line* will be added.

Note: *PyBER*, our GUI tool, can take advantage of those meta-data to enhance the display of the simulated curves.

`--sim-coded`

Enable the coded monitoring.

By default, in the simulation, the information bits are extracted from the decoded codewords and then they are compared to the initially generated information bits. When this parameter is enabled, the decoded codewords are directly compared with the initially encoded codewords.

Note: This parameter can have a negative impact on the BER performance.

Note: In some rare cases, to enable this parameter can reduce the simulation time.

`--sim-coset, -c`

Enable the *coset* approach.

The *coset* approach is a “trick” to simulate BER/FER performance **without an encoder**. It is based on the AZCW (All Zero Code Word) technique (see the `--src-type` parameter). In the specific case of modulation with memory effect, AZCWs (All Zero Code Words) can lead to erroneous BER/FER performance. The *coset* approach solves this problem by randomly generating N bits, those bits represent a frame but there are **certainly not** a codeword. Then, those random bits (or symbols) can be modulated avoiding AZCW unexpected effects. On the receiver side, the idea is to force the decoder to work on an AZCW (because the N received LLRs (Log Likelihood Ratios) are not a valid codeword). Before the decoding process, knowing the initial bits sequence, when a bit is 1 then the corresponding input LLR (Log Likelihood Ratio) is replaced by its opposite. This way, the decoder “believe” it is decoding an AZCW which is a valid codeword. After the decoding process, knowing the initial bits sequence, when a bit is 1, then the corresponding output bit is flipped.

`--sim-debug`

Enable the debug mode. This print the input and the output frames after each task execution.

```

aff3ct -C "REP" -K 4 -N 8 -m 1.0 -M 1.0 --sim-dbg
# [...]
# Source_random::generate(int32 U_K[4])
# {OUT} U_K = [ 1, 1, 0, 1]
# Returned status: 0
#
# Encoder_repetition_sys::encode(const int32 U_K[4], int32 X_N[8])
# {IN} U_K = [ 1, 1, 0, 1]
# {OUT} X_N = [ 1, 1, 0, 1, 1, 1, 0, 1]
# Returned status: 0
#
# Modem_BPSK::modulate(const int32 X_N1[8], float32 X_N2[8])
# {IN} X_N1 = [ 1, 1, 0, 1, 1, 1, 0, 1]
# {OUT} X_N2 = [-1.00, -1.00, 1.00, -1.00, -1.00, -1.00, 1.00, -1.00]
# Returned status: 0
#
# Channel_AWGN_LLRL::add_noise(const float32 X_N[8], float32 Y_N[8])
# {IN} X_N = [-1.00, -1.00, 1.00, -1.00, -1.00, -1.00, 1.00, -1.00]
# {OUT} Y_N = [-0.29, -0.24, 1.55, -0.58, -0.33, -0.51, 0.80, -2.88]
# Returned status: 0
#
# Modem_BPSK::demodulate(const float32 Y_N1[8], float32 Y_N2[8])
# {IN} Y_N1 = [-0.29, -0.24, 1.55, -0.58, -0.33, -0.51, 0.80, -2.88]
# {OUT} Y_N2 = [-0.73, -0.61, 3.91, -1.45, -0.84, -1.28, 2.01, -7.26]
# Returned status: 0
#
# Decoder_repetition_std::decode_siho(const float32 Y_N[8], int32 V_K[4])
# {IN} Y_N = [-0.73, -0.61, 3.91, -1.45, -0.84, -1.28, 2.01, -7.26]
# {OUT} V_K = [ 1, 1, 0, 1]
# Returned status: 0
#
# Monitor_BFER::check_errors(const int32 U[4], const int32 V[4])
# {IN} U = [ 1, 1, 0, 1]
# {IN} V = [ 1, 1, 0, 1]
# Returned status: 0
# [...]

```

Note: By default, the debug mode runs the simulation on one thread. It is strongly advise to remove the `-sim-threads`, `-t` parameter from your command line if you use it.

Hint: To limit the size of the debug trace, use the `-mnt-max-fe`, `-e` or `-sim-max-fra`, `-n` parameters to reduce the number of simulated frames. You may also think about using `-sim-dbg-limit`, `-d` when the frame size is too long to be display on a screen line.

--sim-dbg-hex

Enable the debug mode and **print values in the hexadecimal format**. This mode is useful for having a fully accurate representation of floating numbers.

```

aff3ct -C "REP" -K 4 -N 8 -m 1.0 -M 1.0 --sim-dbg-hex
# [...]
# Modem_BPSK::modulate(const int32 X_N1[8], float32 X_N2[8])

```

(continues on next page)

(continued from previous page)

```
# {IN} X_N1 = [0x1, 0x1, 0x0, 0x1, 0x1, 0x1, 0x0, 0x1]
# {OUT} X_N2 = [-0x1p+0, -0x1p+0, 0x1p+0, -0x1p+0, -0x1p+0, -0x1p+0, 0x1p+0, -0x1p+0]
# Returned status: 0
#
# Channel_AWGN_LLR::add_noise(const float32 X_N[8], float32 Y_N[8])
# {IN} X_N = [-0x1p+0, -0x1p+0, 0x1p+0, -0x1p+0, -0x1p+0, -0x1p+0, 0x1p+0, -0x1p+0]
# {OUT} Y_N = [-0x1.28be1cp-2, -0x1.ec1ec8p-3, 0x1.8d242cp+0, -0x1.268a8p-1, -0x1.
↪54c3ccp-2, -0x1.04df9ap-1, 0x1.9905f8p-1, -0x1.71132cp+1]
# Returned status: 0
# [...]
```

--sim-dbg-limit, -d**Type** integer**Default** 0**Examples** --sim-dbg-limit 1

Enable the debug mode and **set the max number of elements** to display per frame. 0 value means there is no dump limit.

```
aff3ct -C "REP" -K 4 -N 8 -m 1.0 -M 1.0 --sim-dbg-limit 3
# [...]
# Modem_BPSK::modulate(const int32 X_N1[8], float32 X_N2[8])
# {IN} X_N1 = [ 1, 1, 0, ...]
# {OUT} X_N2 = [-1.00, -1.00, 1.00, ...]
# Returned status: 0
#
# Channel_AWGN_LLR::add_noise(const float32 X_N[8], float32 Y_N[8])
# {IN} X_N = [-1.00, -1.00, 1.00, ...]
# {OUT} Y_N = [-0.29, -0.24, 1.55, ...]
# Returned status: 0
# [...]
```

--sim-dbg-fra**Type** integer**Default** 0**Examples** --sim-dbg-fra 10

Enable the debug mode and **set the max number of frames** to display. 0 value means there is no frame limit. By default, a task works on one frame at a time.

This behavior can be overridden with the `-src-fra, -F` parameter and a task can be executed on many frames. In that case, you may want to reduce the number of displayed frames on screen:

```
aff3ct -C "REP" -K 4 -N 8 -m 1.0 -M 1.0 -F 8 --sim-dbg-fra 4
# [...]
# Modem_BPSK::modulate(const int32 X_N1[8x8], float32 X_N2[8x8])
# {IN} X_N1 = [f1( 1, 1, 0, 1, 1, 1, 1, 0, 1),
#             f2( 0, 1, 1, 1, 0, 0, 1, 1, 0),
#             f3( 1, 0, 1, 1, 1, 0, 1, 1, 1),
#             f4( 1, 0, 0, 0, 1, 0, 0, 0, 0),
```

(continues on next page)

(continued from previous page)

```

#           f5->f8:(...)]
# {OUT} X_N2 = [f1(-1.00, -1.00,  1.00, -1.00, -1.00, -1.00,  1.00, -1.00),
#           f2( 1.00, -1.00, -1.00,  1.00,  1.00, -1.00, -1.00,  1.00),
#           f3(-1.00,  1.00, -1.00, -1.00, -1.00,  1.00, -1.00, -1.00),
#           f4(-1.00,  1.00,  1.00,  1.00, -1.00,  1.00,  1.00,  1.00),
#           f5->f8:(...)]
# Returned status: 0
#
# Channel_AWGN_LLR::add_noise(const float32 X_N[8x8], float32 Y_N[8x8])
# {IN} X_N = [f1(-1.00, -1.00,  1.00, -1.00, -1.00, -1.00,  1.00, -1.00),
#           f2( 1.00, -1.00, -1.00,  1.00,  1.00, -1.00, -1.00,  1.00),
#           f3(-1.00,  1.00, -1.00, -1.00, -1.00,  1.00, -1.00, -1.00),
#           f4(-1.00,  1.00,  1.00,  1.00, -1.00,  1.00,  1.00,  1.00),
#           f5->f8:(...)]
# {OUT} Y_N = [f1(-0.29, -0.24,  1.55, -0.58, -0.33, -0.51,  0.80, -2.88),
#           f2( 0.15, -0.71, -1.85,  1.69, -0.02, -0.50,  0.07,  0.79),
#           f3(-1.03,  1.39, -1.03, -2.03, -0.67,  0.91, -0.45, -0.88),
#           f4(-0.37, -1.07,  1.49,  0.94, -0.21,  1.35,  1.06,  0.97),
#           f5->f8:(...)]
# Returned status: 0
# [...]

```

--sim-dbg-prec**Type** integer**Default** 2**Examples** --sim-dbg-prec 1

Enable the debug mode and **set the decimal precision** (number of digits for the decimal part) of the floating-point elements.

```

aff3ct -C "REP" -K 4 -N 8 -m 1.0 -M 1.0 --sim-dbg-prec 4
# [...]
# Modem_BPSK::modulate(const int32 X_N1[8], float32 X_N2[8])
# {IN} X_N1 = [ 0, 0, 1, 1, 0, 0, 1, 1]
# {OUT} X_N2 = [ 1.0000, 1.0000, -1.0000, -1.0000, 1.0000, 1.0000, -1.0000, -1.0000]
# Returned status: 0
#
# Channel_AWGN_LLR::add_noise(const float32 X_N[8], float32 Y_N[8])
# {IN} X_N = [ 1.0000, 1.0000, -1.0000, -1.0000, 1.0000, 1.0000, -1.0000, -1.0000]
# {OUT} Y_N = [ 1.4260, 0.4301, -1.5119, 0.1559, 0.0784, 1.6980, -1.6501, -0.0769]
# Returned status: 0
# [...]

```

--sim-seed, -S**Type** integer**Default** 0**Examples** --sim-seed 42

Set the PRNG (Pseudo Random Number Generator) seed used in the Monte Carlo simulation.

Note: AFF3CT uses PRNG to simulate the random. As a consequence the simulator behavior is reproducible from a run to another. It can be helpful to debug source code. However, when simulating in multi-threaded mode, the threads running order is not deterministic and so results will most likely be different from one execution to another.

--sim-stats

Display statistics for each task. Those statistics are shown after each simulated SNR point.

```
aff3ct -C "POLAR" -K 1723 -N 2048 -m 4.2 -M 4.2 -t 1 --sim-stats
# [...]
# -----||-----||-----
# Statistics for the given task || Basic statistics ||
↳ Measured throughput || Measured latency
# ('*' = any, '-' = same as previous) || on the task ||
↳ considering the last socket || considering the last socket
# -----||-----||-----
# -----||-----||-----||-----||-----||-----
# MODULE | TASK | TIMER || CALLS | TIME | PERC ||
↳ AVERAGE | MINIMUM | MAXIMUM || AVERAGE | MINIMUM | MAXIMUM
# | | | || | | | (s) | (%) || (Mb/
↳ s) | (Mb/s) | (Mb/s) || (us) | (us) | (us)
# -----||-----||-----||-----||-----||-----
# Channel | add_noise | * || 14909 | 0.72 | 37.59 || 42.
↳ 17 | 20.75 | 45.52 || 48.56 | 44.99 | 98.69
# Source | generate | * || 14909 | 0.60 | 31.13 || 42.
↳ 84 | 8.72 | 44.34 || 40.22 | 38.86 | 197.63
# Encoder | encode | * || 14909 | 0.37 | 19.06 || 83.
↳ 17 | 16.00 | 86.10 || 24.62 | 23.79 | 127.97
# Decoder | decode_siho | * || 14909 | 0.22 | 11.32 || 117.
↳ 80 | 36.67 | 126.75 || 14.63 | 13.59 | 46.99
# Monitor | check_errors | * || 14909 | 0.01 | 0.42 || 3186.
↳ 81 | 120.63 | 3697.42 || 0.54 | 0.47 | 14.28
# Modem | demodulate | * || 14909 | 0.00 | 0.25 || 6350.
↳ 57 | 160.24 | 7876.92 || 0.32 | 0.26 | 12.78
# Modem | modulate | * || 14909 | 0.00 | 0.23 || 6962.
↳ 61 | 184.84 | 8291.50 || 0.29 | 0.25 | 11.08
# -----||-----||-----||-----||-----||-----
# TOTAL | * | * || 14909 | 1.93 | 100.00 || 13.
↳ 34 | 3.38 | 14.10 || 129.19 | 122.21 | 509.42
# [...]
```

Each line corresponds to a task. The tasks are sorted by execution time in the simulation (descending order). The first column group **identifies the task**:

- **MODULE:** the module type,
- **TASK:** the task name,
- **TIMER:** the name of the current task timer (it is possible to put timers inside a task to measure sub-parts of this task), * indicates that the whole task execution time is considered.

The second column group gives **basic statistics**:

- **CALLS**: the number of times this task has been executed,
- **TIME**: the cumulative time of all the task executions,
- **PERC**: the percentage of time taken by the task in the simulation.

The third column group shows **the average, the minimum and the maximum throughputs**. Those throughputs are calculated considering the size of the output frames. If the task does not have outputs (c.f the *check_errors* routine from the monitor) then the number of input bits is used instead. For instance, the *encode* task takes K input bits and produces N output bits, so N bits will be considered in the throughput computations.

The last column group shows **the average, the minimum and the maximum latencies**.

The **TOTAL** line corresponds to the full communication chain. For the throughput computations, the last socket of the last task determines the number of considered bits. In a standard BER/FER simulation the last task is the *check_errors* routine from the monitor and consequently the number of information bits (K) is considered. However, if the *-sim-coded* parameter is enabled, it becomes the codeword size (N).

Note: Enabling the statistics can increase the simulation time due the measures overhead. This is especially true when short frames are simulated.

Warning: In multi-threaded mode the reported time is the cumulative time of all the threads. This time is bigger than the real simulation time because it does not consider that many tasks have been executed in parallel.

Warning: The task throughputs will not increase with the number of threads: the statistics consider the performance on one thread.

`--sim-threads, -t`

Type integer

Default 0

Examples `--sim-threads 1`

Specify the number of threads used in the simulation. The 0 default value will automatically set the number of threads to the hardware number of threads available on the machine.

Note: **Monte Carlo methods are known to be embarrassingly parallel**, which is why, in most cases, the simulation throughput will increase linearly with the number of threads (unless this number exceeds the number of cores available). However, in some cases, especially for large frames, when the number of threads is high, the memory footprint can exceeds the size of the CPU caches and it becomes less interesting to use a large number of threads.

`--sim-crc-start`

Type integer

Default 2

Examples `--sim-crc-start 1`

Set the number of simulation iterations to proceed before starting the CRC (Cyclic Redundancy Check) checking in the turbo demodulation process. It reduces the number of false positive CRC detections.

Note: Available only for BFERI simulation type (c.f. the `--sim-type` parameter).

`--sim-ite, -I`

Type integer

Default 15

Examples `--sim-ite 10`

Set the number of global iterations between the demodulator and the decoder.

Note: Available only for BFERI simulation type (c.f. the `--sim-type` parameter).

`--sim-max-fra, -n` **ADVANCED**

Type integer

Default 0

Examples `--sim-max-fra 1`

Set the maximum number of frames to simulate per noise point. When a noise point reaches the maximum frame limit, the simulation is stopped. 0 value means no limit.

Note: The default behavior is to stop the simulator when the limit is reached but it is possible to override it with the `--sim-crit-nostop` parameter. In this case, the remaining noise points will also be simulated and the limit will be applied for each of them.

`--sim-stop-time` **ADVANCED**

Type integer

Default 0

Examples `--sim-stop-time 1`

Set the maximum time (in seconds) to simulate per noise point. When a noise point reaches the maximum time limit, the simulation is stopped. 0 value means no limit.

Note: The default behavior is to stop the simulator when the limit is reached but it is possible to override it with the `--sim-crit-nostop` parameter. In this case, the remaining noise points will also be simulated and the limit will be applied for each of them.

`--sim-crit-nostop` **ADVANCED**

Stop only the current noise point instead of the whole simulation.

To combine with the `--sim-max-fra`, `-n` and/or the `--sim-stop-time` parameters.

`--sim-err-trk` **ADVANCED**

Track the erroneous frames. When an error is found, the information bits from the source, the codeword from the encoder and the applied noise from the channel are dumped in several files.

Tip: When working on the design of a new decoder or when improving an existing one, it can be very interesting to have a database of erroneous frames to work on (especially if those errors occur at low BER/FER when the simulation time is important). This way it is possible to focus only on those erroneous frames and quickly see if the decoder improvements have an impact on them. It is also interesting to be able to easily extract the erroneous frames from the simulator to characterize the type of errors and better understand why the decoder fails.

Note: See the `--sim-err-trk-rev` argument to replay the erroneous dumped frames.

`--sim-err-trk-rev` **ADVANCED**

Replay dumped frames. By default this option reverts the `--sim-err-trk` parameter by replaying the erroneous frames that have been dumped.

Tip: To play back the erroneous frames, just add `-rev` to the `--sim-err-trk` argument and change nothing else to your command line.

`--sim-err-trk-path` **ADVANCED**

Type file

Rights read/write

Default error_tracker

Examples `--sim-err-trk-path errors/err`

Specify the base path for the `--sim-err-trk` and `--sim-err-trk-rev` parameters.

For the above example, the dumped or read files will be:

- errors/err_0.64.src
- errors/err_0.64.enc
- errors/err_0.64.chn

Note: For SNR noise type, the value used to define the filename is the noise variance σ .

Danger: Be careful, if you give a wrong path you will not have a warning message at the beginning of the simulation. It can be frustrating when running a very long simulation...

`--sim-err-trk-thold` **ADVANCED**

Type integer

Default 0

Examples `--sim-err-trk-thold 1`

Specify a threshold value in number of erroneous bits before which a frame is dumped.

References

3.2.2 Source parameters

The source generates K information bits: it is the simulation starting point.

`--src-info-bits, -K` **REQUIRED**

Type integer

Examples `--src-info-bits 64 -K 128`

Select the number of information bits K .

Warning: This argument is required only with the UNCODED simulation code type (cf. the `--sim-cde-type, -C` parameter).

`--src-type`

Type text

Allowed values AZCW RAND USER

Default RAND

Examples `--src-type AZCW`

Method used to generate the K information bits.

Description of the allowed values:

Value	Description
AZCW	Set all the information bits to 0.
RAND	Generate randomly the information bits based on the MT 19937 (Mersenne Twister 19937) PRNG [MN98].
USER	Read the information bits from a given file, the path can be set with the <code>--src-path</code> parameter.

Note: For the `USER` type, when the number of simulated frames exceeds the number of frames contained in the files, the frames are replayed from the beginning of the file and this is repeated until the end of the simulation.

`--src-implement`

Type text

Allowed values FAST STD

Default STD

Examples `--src-implement FAST`

Select the implementation of the algorithm to generate the information bits.

Description of the allowed values:

Value	Description
STD	Standard implementation working for any source type.
FAST	Fast implementation, only available for the <code>RAND</code> source type.

`--src-fra`, `-F`

Type integer

Default 1

Examples `--src-fra 8`

Set the number of frames to process for each task execution.

The default behavior is to generate one frame at a time. This parameter enables to process more than one frame when the `generate` task (from the source module) is called.

The number of frames consumed and produced when a task is executed is called the **inter frame level** or IFL (Inter Frame Level). Setting the IFL in the source module will automatically affect the IFL level in all the other simulation modules (c.f. Fig. 3.6).

The IFL also allows multi-user configurations to be simulated (see Fig. 3.7). This configurations is used when using SCMA (Sparse Code Multiple Access) modulation (see the `--mdm-type SCMA` parameter).

Note: For short frames, increase the IFL can **increase the simulation throughput**, it can hide task call overheads.

Note: For large frames, increase the IFL can **decrease the simulation throughput** due the CPU cache size limitation.

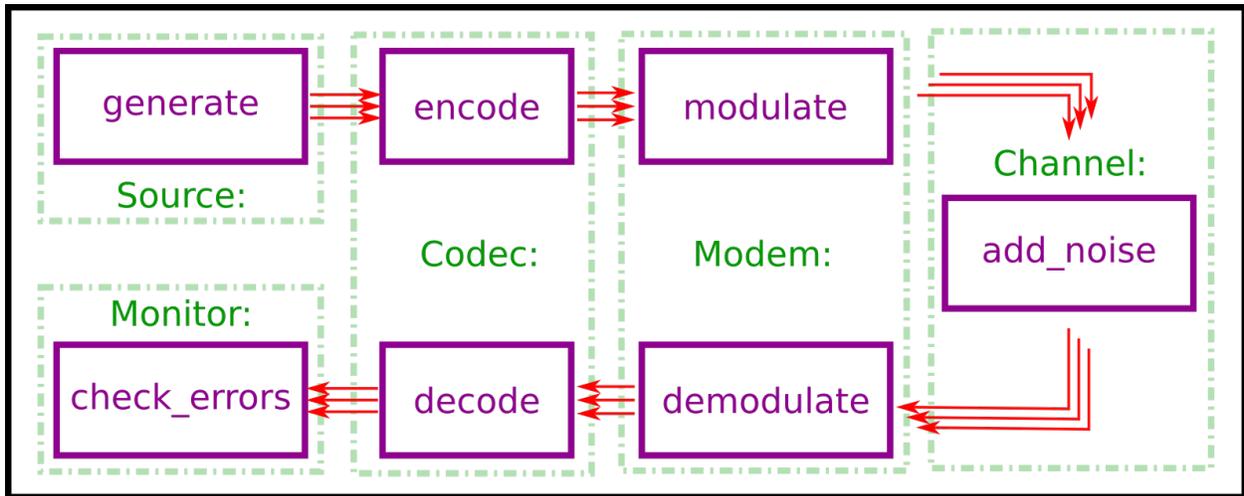


Fig. 3.6: 3-way inter frame level in the communication chain.

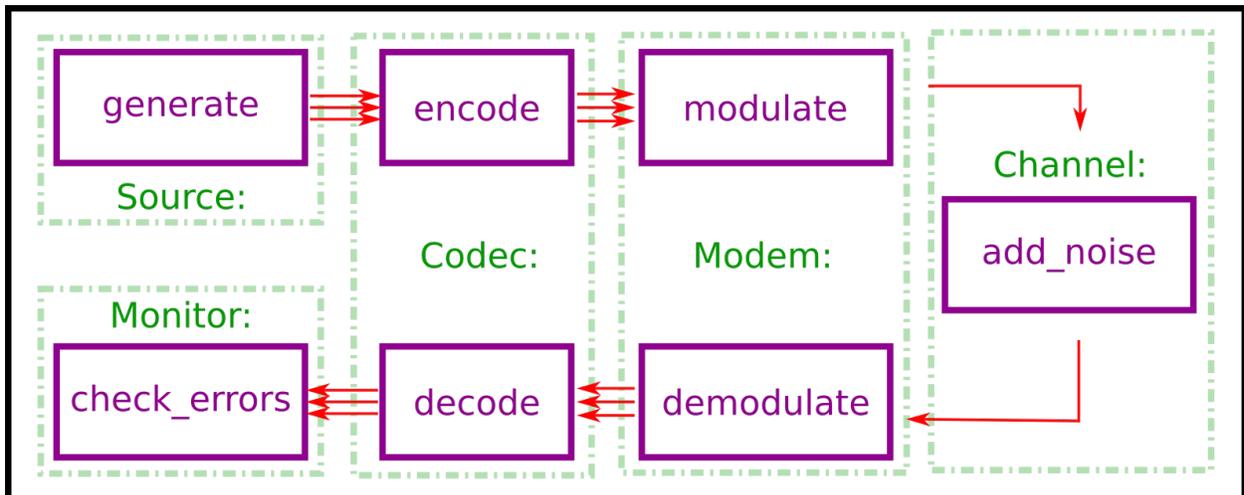


Fig. 3.7: 3-way inter frame level with multi-user channel in the communication chain.

--src-path**Type** file**Rights** read only**Examples** `--src-path conf/src/GSM-LDPC_2112.src`

Set the path to a file containing one or more frames (informations bits), to use with the USER source type.

An ASCII (American Standard Code for Information Interchange) file is expected:

```
# 'F' has to be replaced by the number of contained frames.
F

# 'K' has to be replaced by the number of information bits.
K

# a sequence of 'F * K' bits (separated by spaces)
B_0 B_1 B_2 B_3 B_4 B_5 [...] B_{(F*K)-1}
```

--src-start-idx**Type** integer**Default** 0**Examples** `--src-start-idx 42`

Give the start index to use in the USER source type. It is the index of the first frame to read from the given file.

References**3.2.3 CRC parameters**

The following parameters concern the Cyclic Redundancy Check (CRC) module. CRC bits can be concatenated to the information bits in order to help the decoding process to know if the decoded bit sequence is valid or not.

Note: The CRC is only available for some specific decoders that have been designed to take advantage of the CRC like in [LST12][TLLeGal+16].

Warning: Using a CRC does not guarantee to know if the decoded frame is the good one, it can be a *false positive*. It is important to adapt the size of the CRC with the frame size and the targeted FER.

--crc-type, --crc-poly**Type** text**Default** NO**Examples**

```
--crc-type "32-GZIP"
--crc-poly "0x04C11DB7" --crc-size 32
```

Select the CRC type you want to use among the predefined (or not) polynomials.

Table 3.1 shows a list of the predefined polynomials. If you want a specific polynomial that it is not available in the table you can directly put the polynomial in hexadecimal. In this case you have to specify explicitly the size of the polynomial with the `-crc-size` parameter. The type `NO` deactivates the CRC.

Table 3.1: List of the predefined CRC polynomials.

Type	Polynomial	Size
32-GZIP	0x04C11DB7	32
32-CASTAGNOLI	0x1EDC6F41	32
32-AIXM	0x814141AB	32
32-KOOPMAN	0x32583499	32
30-CDMA	0x2030B9C7	30
24-LTEA	0x864CFB	24
24-RADIX-64	0x864CFB	24
24-FLEXRAY	0x5D6DCB	24
21-CAN	0x102899	21
17-CAN	0x1685B	17
16-IBM	0x8005	16
16-CCITT	0x1021	16
16-PROFIBUS	0x1DCF	16
16-OPENSAFETY-B	0x755B	16
16-OPENSAFETY-A	0x5935	16
16-DNP	0x3D65	16
16-T10-DIF	0x8BB7	16
16-DECT	0x0589	16
16-CDMA2000	0xC867	16
16-ARINC	0xA02B	16
16-CHAKRAVARTY	0x2F15	16
15-MPT1327	0x6815	15
15-CAN	0x4599	15
14-DARC	0x0805	14
13-BBC	0x1CF5	13
12-CDMA2000	0xF13	12
12-TELECOM	0x80F	12
11-FLEXRAY	0x385	11
10-CDMA2000	0x3D9	10
10-ATM	0x233	10
8-WCDMA	0x9B	8
8-SAE-J1850	0x1D	8
8-DARC	0x39	8
8-DALLAS	0x31	8
8-CCITT	0x07	8
8-AUTOSAR	0x2F	8
8-DVB-S2	0xD5	8
7-MVB	0x65	7
7-MMC	0x09	7
6-CDMA2000-A	0x27	6
6-CDMA2000-B	0x07	6
6-DARC	0x19	6
6-ITU	0x03	6

Continued on next page

Table 3.1 – continued from previous page

5-ITU	0x15	5
5-EPC	0x09	5
5-USB	0x05	5
4-ITU	0x3	4
1-PAR	0x1	1

--crc-size**Type** integer**Range**]0 → ∞[**Examples** --crc-size 8

Size the CRC (divisor size in bits minus one), required if you selected an unknown CRC.

--crc-implem**Type** text**Allowed values** STD FAST INTER**Default** FAST**Examples** --crc-implem FAST

Select the CRC implementation you want to use.

Description of the allowed values:

Value	Description
STD	The standard implementation is generic and support any size of CRCs (Cyclic Redundancy Checks). On the other hand the throughput is limited.
FAST	This implementation is much faster than the standard one. This speedup is achieved thanks to the bit packing technique: up to 32 bits can be computed in parallel. This implementation does not support polynomials higher than 32 bits.
INTER	The inter-frame implementation should not be used in general cases. It allow to compute the CRC on many frames in parallel that have been reordered.

References**3.2.4 Codec parameters****Codec Common****Common Encoder parameters**

This section describes the parameters common to all encoders.

--enc-type**Type** text**Allowed values** NO AZCW COSET USER**Examples** --enc-type AZCW

Select the encoder type.

Description of the allowed values:

Value	Description
AZCW	Select the AZCW encoder which is optimized to encode K information bits all set to 0.
COSET	Select the coset encoder (see the <code>-sim-coset</code> , <code>-c</code> parameter), this encoder add random bits from X_K to X_N .
USER	Read the codewords from a given file, the path can be set with the <code>-enc-path</code> parameter.

Tip: The AZCW encoder allows to have a working communication chain without implementing an encoder. This technique can also reduce the simulation time especially when the `encode` task is time consuming.

Danger: Be careful, the AZCW technique can lead to unexpected behaviors with broken decoders.

Note: Only use the COSET encoder if know what you are doing. This encoder is set by default when the simulation is run with the `-sim-coset`, `-c` parameter.

Note: For the USER type, when the number of simulated frames exceeds the number of codewords contained in the files, the codewords are replayed from the beginning of the file and this is repeated until the end of the simulation.

--enc-path**Type** file**Rights** read only**Examples** --enc-path example/path/to/the/right/file

Set the path to a file containing one or more codewords, to use with the USER encoder.

An ASCII file is expected:

```
# 'F' has to be replaced by the number of contained frames.
F

# 'N' has to be replaced by the codeword size.
N

# a sequence of 'F * N' bits (separated by spaces)
B_0 B_1 B_2 B_3 B_4 B_5 [...] B_{(F*N)-1}
```

--enc-start-idx

Type integer

Examples `--enc-start-idx 1`

Give the start index to use in the USER encoder. It is the index of the first codeword to read from the given file.

Common Decoder parameters

This section describes the parameters common to all decoders.

--dec-type, -D

Type text

Allowed values CHASE ML

Examples `--dec-type ML`

Select the decoder algorithm.

Description of the allowed values:

Value	Description
CHASE	Select the Chase decoder from [Cha72].
ML	Select the perfect ML (Maximum Likelihood) decoder.

Note: The Chase and the ML decoders have a very high computational complexity and cannot be used for large frames.

--dec-implement

Type text

Allowed values NAIVE STD

Examples `--dec-implement STD`

Select the implementation of the decoder algorithm.

Description of the allowed values:

Value	Description
NAIVE	Select the naive implementation (very slow and only available for the ML decoder).
STD	Select the standard implementation.

--dec-flips

Type integer

Examples `--dec-flips 1`

Set the maximum number of bit flips in the Chase decoder.

`--dec-hamming`

Compute the [Hamming distance](#) instead of the [Euclidean distance](#) in the ML and Chase decoders.

Note: Using the [Hamming distance](#) will heavily degrade the BER/FER performances. The BER/FER performances will be the same as an hard input decoder.

`--dec-seed`

Type integer

Examples `--dec-seed 1`

Specify the decoder PRNG seed (if the decoder uses one).

References

Codec BCH (Bose, Ray-Chaudhuri and Hocquenghem)

BCH Encoder parameters

`--enc-cw-size, -N` **REQUIRED**

Type integer

Examples `--enc-cw-size 127`

Set the codeword size N .

$N = 2^m - 1$, where m is an integer from 3.

`--enc-info-bits, -K` **REQUIRED**

Type integer

Examples `--enc-info-bits 92`

Set the number of information bits K .

This argument is not required if `--dec-corr-pow, -T` is given, as it is calculated automatically.

`--enc-type`

Type text

Allowed values BCH AZCW COSET USER

Default BCH

Examples `--enc-type AZCW`

Select the encoder type.

Description of the allowed values:

Value	Description
BCH	Select the standard BCH encoder.
AZCW	See the common <code>--enc-type</code> parameter.
COSET	See the common <code>--enc-type</code> parameter.
USER	See the common <code>--enc-type</code> parameter.

BCH Decoder parameters

`--dec-type, -D`

Type text

Allowed values ALGEBRAIC CHASE ML

Default ALGEBRAIC

Examples `--dec-type ALGEBRAIC`

Select the decoder algorithm.

Description of the allowed values:

Value	Description
ALGEBRAIC	Select the Berlekamp-Massey algorithm [Ber15][Mas69] followed by a Chien search [Chi64].
CHASE	See the common <code>--dec-type, -D</code> parameter.
ML	See the common <code>--dec-type, -D</code> parameter.

`--dec-implement`

Type text

Allowed values FAST GENIUS STD

Default STD

Examples `--dec-implement FAST`

Select the implementation of the decoder algorithm.

Description of the allowed values:

Value	Description
STD	A standard implementation of the BCH.
FAST	Select the fast implementation optimized for SIMD architectures.
GENIUS	SA really fast implementation that compare the input to the original codeword and correct it only when the number of errors is less or equal to the BCH correction power.

Note: In the `STD` implementation, the Chien search finds roots of the error location polynomial. If the number of found roots does not match the number of found errors by the BM (Berlekamp-Massey) algorithm, then the frame is not modified.

However, in the `FAST` implementation the correction of the bits is done at the same time as the execution of the Chien search. Then when the latter fails, the frame can be modified.

Note: When a frame is very corrupted and when the above `STD` and `FAST` implementations can be wrong in the correction by converging to another codeword, the `GENIUS` implementation cannot fail. Results may then differ from a real word implementation.

`--dec-corr-pow, -T`

Type integer

Default 5

Examples `--dec-corr-pow 18`

Set the correction power of the BCH decoder. This value corresponds to the number of errors that the decoder is able to correct.

References

Codec LDPC (Low-Density Parity-Check)

LDPC Encoder parameters

`--enc-cw-size, -N` **REQUIRED**

Type integer

Examples `--enc-cw-size 1024`

Set the codeword size N .

Note: This parameter value is automatically deduced if the H parity matrix is given with the `--dec-h-path` parameter or if the G generator matrix is given with the `--enc-g-path` parameter.

`--enc-info-bits, -K` **REQUIRED**

Type integer

Examples `--enc-info-bits 512`

Set the number of information bits K .

Note: This parameter value is automatically deduced if the G generator matrix is given with the `-enc-g-path` parameter.

Note: In some cases, this parameter value can be automatically deduced if the H parity matrix is given with the `-dec-h-path` parameter. For regular matrices, $K = N - M$ where N and M are the H parity matrix dimensions. For *non-regular matrices*, K has to be given.

--enc-type

Type text

Allowed values LDPC LDPC_H LDPC_DVBS2 LDPC_IRA LDPC_QC AZCW COSET USER

Default AZCW

Examples `--enc-type AZCW`

Select the encoder type.

Description of the allowed values:

Value	Description
LDPC	Select the generic encoder that encode from a given G generator matrix (to use with the <code>-enc-g-path</code> parameter).
LDPC_H	Build the G generator matrix from the given H parity matrix and then encode with the LDPC method (to use with the <code>-dec-h-path</code> parameter).
LDPC_DVBS2	Select the optimized encoding process for the DVB-S2 (Digital Video Broadcasting - Satellite 2) H matrices (to use with the <code>-enc-cw-size</code> , <code>-N</code> and <code>-enc-info-bits</code> , <code>-K</code> parameters).
LDPC_IRA	Select the optimized encoding process for the IRA (Irregular Repeat Accumulate) H parity matrices (to use with the <code>-dec-h-path</code> parameter).
LDPC_QC	Select the optimized encoding process for the QC (Quasi-Cyclic) H parity matrices (to use with the <code>-dec-h-path</code> parameter).
AZCW	See the common <code>-enc-type</code> parameter.
COSET	See the common <code>-enc-type</code> parameter.
USER	See the common <code>-enc-type</code> parameter.

Note: The LDPC_DVBS2 encoder type allow the simulation of the DVB-S2 standard but without the BCH code. All matrices described by the standard (Tables 5a/5b page 22-23) are available. You just need to give to the arguments `-enc-info-bits`, `-K` and `-enc-cw-size`, `-N` the real K and N LDPC dimensions, respectively.

--enc-g-path

Type file

Rights read only

Examples `--enc-g-path example/path/to/the/G_matrix.alist`

Give the path to the G generator matrix in an AList or QC formatted file.

--enc-g-method**Type** text**Allowed values** IDENTITY LU_DEC**Default** IDENTITY**Examples** --enc-g-method IDENTITY

Specify the method used to build the G generator matrix from the H parity matrix when using the LDPC_H encoder.

Description of the allowed values:

Value	Description
IDENTITY	Generate an identity on H to get the parity part.
LU_DEC	Generate a hollow G thanks to the LU decomposition with a guarantee to have the systematic identity. Do not work with irregular matrices.

LU_DEC method is faster than IDENTITY.

--enc-g-save-path**Type** file**Rights** write only**Examples** --enc-g-save-path example/path/to/the/generated/
G_matrix.alist

Set the file path where the G generator matrix will be saved (AList file format). To use with the LDPC_H encoder.

Hint: When running the LDPC_H encoder, the generation of the G matrix can take a non-negligible part of the simulation time. With this option the G matrix can be saved once for all and used in the standard LDPC decoder after.

Warning: This option is not thread-safe, please run it on a single thread with the `-sim-threads, -t` parameter.

LDPC Decoder parameters**--dec-h-path** REQUIRED**Type** file**Rights** read only**Examples** --dec-h-path conf/dec/LDPC/AR4JA_4096_8192.qc
--dec-h-path conf/dec/LDPC/MACKAY_504_1008.alist

Give the path to the H parity matrix. Support the AList and the QC formats.

This argument is not required if the encoder type `-enc-type` is LDPC_DVBS2.

For the AList format, an ASCII file composed by positive integers is expected:

```

# -- Part 1 --
# 'nVN' is the total number of variable nodes and 'nCN' is the total number of check_
↪nodes
nVN nCN
# 'dmax_VN' is the higher variable node degree and 'dmax_CN' is the higher check node_
↪degree
dmax_VN dmax_CN
# list of the degrees for each variable nodes
d_VN_{1} d_VN_{2} [...] d_VN_{nVN}
# list of the degrees for each check nodes
d_CN_{1} d_CN_{2} [...] d_CN_{nCN}
#
# -- Part 2 --
# each following line describes the check nodes connected to a variable node, the_
↪first
# check node index is '1' (and not '0')
# variable node '1'
VN_{1}_CN_{idx_1} [...] VN_{1}_CN_{idx_d_VN_{1}}
# variable node '2'
VN_{2}_CN_{idx_1} [...] VN_{2}_CN_{idx_d_VN_{2}}
[...]
# variable node 'nVN'
VN_{nVN}_CN_{idx_1} [...] VN_{nVN}_CN_{idx_d_VN_{nVN}}
#
# -- Part 3 --
# each following line describes the variables nodes connected to a check node, the_
↪first
# variable node index is '1' (and not '0')
# check node '1'
CN_{1}_VN_{idx_1} [...] CN_{1}_VN_{idx_d_CN_{1}}
# check node '2'
CN_{2}_VN_{idx_1} [...] CN_{2}_VN_{idx_d_CN_{2}}
[...]
# check node 'nCN'
CN_{nCN}_VN_{idx_1} [...] CN_{nCN}_VN_{idx_d_CN_{nCN}}

```

In the part 2 and 3, it is possible to pad, at the end of the indexes list, with zeros when the current node degree is smaller than the maximum node degree. AFF3CT will be able to read the file even if it is padded with zeros.

For the QC format, an ASCII file composed by integers is expected:

```

# 'C' is the number of columns (there is 'C * Z' variable nodes)
# 'R' is the number of rows (there is 'R * Z' check nodes)
# 'Z' is the expansion factor
C R Z

# each 'B_r_{y}_c_{x}' is a sub-matrix bloc of size 'Z * Z'
# 'B_r_{y}_c_{x} = -1' means a zero matrix
# 'B_r_{y}_c_{x} = 0' means an identity matrix
# 'B_r_{y}_c_{x} = s' with 's' between '1' and 'Z-1' means an identity matrix shifted
↪'s' times
#
# to the right
B_r_{1}_c_{1} B_r_{1}_c_{2} [...] B_r_{1}_c_{C}
B_r_{2}_c_{1} B_r_{2}_c_{2} [...] B_r_{2}_c_{C}
[...]
B_r_{R}_c_{1} B_r_{R}_c_{2} [...] B_r_{R}_c_{C}

# puncturing pattern (optional)

```

(continues on next page)

(continued from previous page)

```
# 'T_c_{x}' can be '0' or '1'
# - if 'T_c_{x} = 0', does not transmit the 'Z' consecutive bits
# - if 'T_c_{x} = 1', transmits the 'Z' consecutive bits
T_c_{1} T_c_{2} [...] T_c_{C}
```

--dec-type, -D**Type** text**Allowed values** BIT_FLIPPING BP_PEELING BP_FLOODING
BP_HORIZONTAL_LAYERED BP_VERTICAL_LAYERED CHASE ML**Default** BP_FLOODING**Examples** --dec-type BP_HORIZONTAL_LAYERED

Select the decoder algorithm.

Description of the allowed values:

Value	Description
BIT_FLIPPING	Select the BF (Bit Flipping) category of algorithms.
BP_PEELING	Select the BP-P (Belief Propagation Peeling) algorithm from [Spi01].
BP_FLOODING	Select the BP-F (Belief Propagation with Flooding scheduling) algorithm from [MN95].
BP_HORIZONTAL_LAYERED	Select the BP-HL (Belief Propagation with Horizontal Layered scheduling) algorithm from [YPNA01].
BP_VERTICAL_LAYERED	Select the BP-VL (Belief Propagation with Vertical Layered scheduling) algorithm from [ZF02].
CHASE	See the common <i>--dec-type, -D</i> parameter.
ML	See the common <i>--dec-type, -D</i> parameter.

--dec-implement**Type** text**Allowed values** STD GALA GALB GALE WBF PPBF SPA LSPA AMS MS NMS OMS**Default** SPA**Examples** --dec-implement AMS

Select the implementation of the decoder algorithm.

Description of the allowed values:

Value	Description
STD	Select the STD (Standard) implementation.
GALA	Select the GALA (Gallager A) algorithm [RL09].
GALB	Select the GALB (Gallager B) algorithm [DDB14] with majority vote.
GALE	Select the GALE (Gallager E) algorithm [DDB14] with extended alphabet.
PPBF	Select the PPBF (Probabilistic Parallel Bit-Flipping) algorithm [LGK+19].
WBF	Select the WBF (Weighted Bit Flipping) algorithm [WNY+10].
SPA	Select the SPA (Sum-Product Algorithm) update rules [MN95].
LSPA	Select the LSPA (Logarithmic Sum-Product Algorithm) update rules [MN95].
AMS	Select the AMS (Approximate Min-Star) update rule.
MS	Select the MS (Min-Sum) update rule [FMI99].
NMS	Select the NMS (Normalized Min-Sum) update rule [CF02].
OMS	Select the OMS (Offset Min-Sum) update rule [CF02].

Table 3.2 shows the different decoder types and their corresponding available implementations.

Table 3.2: LDPC decoder types and available implementations.

De-coder	STD	GALA	GALB	GALE	PPBF	WBF	SPA	LSPA	AMS	MS	NMS	OMS
BF					✓	✓						
BP-P	✓											
BP-F		✓	✓	✓			✓**+	✓**	✓**	✓**	✓**	✓**
BP-HL							✓**	✓**	✓**	✓*	✓*	✓*
BP-VL							✓**	✓**	✓**	✓**	✓**	✓**

*/**: compatible with the `-dec-simd` INTER parameter.

** : require the C++ compiler to support the **dynamic memory allocation for over-aligned data**, see the [P0035R4 paper](#). This feature is a part of the C++17 standard (working on the C++ GNU compiler version 8.1.0). When compiling with the GNU compiler in C++11 mode, the `-faligned-new` option enables specifically the required feature.

+ : compatible with the `-dec-simd` INTRA parameter.

`--dec-simd`

Type text

Allowed values INTER

Examples `--dec-simd` INTER

Select the SIMD strategy.

Table 3.2 shows the decoders and implementations that support SIMD.

Description of the allowed values:

Value	Description
INTRA	Select the intra-frame strategy.
INTER	Select the inter-frame strategy.

Note: In the **intra-frame strategy**, SIMD units process several LLRs in parallel within a single frame decoding. In the **inter-frame strategy**, SIMD units decodes several independent frames in parallel in order to saturate the SIMD unit. This approach improves the throughput of the decoder but requires to load several frames before starting to decode, increasing both the decoding latency and the decoder memory footprint.

Note: When the inter-frame SIMD strategy is set, the simulator will run with the right number of frames depending on the SIMD length. This number of frames can be manually set with the `-src-fra, -F` parameter. Be aware that running the simulator with the `-src-fra, -F` parameter set to 1 and the `-dec-simd` parameter set to INTER will completely be counterproductive and will lead to no throughput improvements.

`--dec-h-reorder`

Type text

Allowed values ASC DSC NONE

Default NONE

Examples `--dec-h-reorder ASC`

Specify the order of execution of the CNS (Check Nodes) in the decoding process depending on their degree.

The degree of a CN (Check Node) is the number of VNS (Variable Nodes) that are connected to it.

Description of the allowed values:

Value	Description
ASC	Reorder from the smallest CNS degree to the biggest CNS degree.
DSC	Reorder from the biggest CNS degree to the smallest CNS degree.
NONE	Do not change the order.

`--dec-ite, -i`

Type integer

Default 10

Examples `--dec-ite 30`

Set the maximal number of iterations in the LDPC decoder.

Note: By default, in order to speedup the decoding time, the decoder can stop the decoding process if all the parity check equations are verified (also called **the syndrome detection**). In that case the decoder can perform less decoding iterations than the given number. To force the decoder to make all the iterations, use the `-dec-no-synd` parameter.

`--dec-min`

Type text

Allowed values MIN MINL MINS

Default MINL

Examples --dec-min MIN

Define the \min^* operator approximation used in the AMS update rule.

Description of the allowed values:

Value	Description
MINS	$\min^*(a, b) = \min(a, b) + \log(1 + \exp(-(a+b))) - \log(1 + \exp(- a-b)).$
MINL	$\min^*(a, b) \approx \min(a, b) + \text{corr}(a+b) - \text{corr}(a-b)$ <p>with</p> $\text{corr}(x) = \begin{cases} 0 & \text{if } x \geq 2.625 \\ -0.375x + 0.6825 & \text{if } x < 1.0 \\ -0.1875x + 0.5 & \text{else} \end{cases}.$
MIN	$\min^*(a, b) \approx \min(a, b).$

MINS for *Min Star* is the exact \min^* operator. MINL for *Min Linear* is a linear approximation of the \min^* function. MIN for *Min* is the simplest approximation with only a min function.

--dec-norm

Type real number

Default 1.0

Examples --dec-norm 0.75

Set the normalization factor used in the NMS update rule.

--dec-off

Type real number

Default 0.0

Examples --dec-off 0.25

Set the offset used in the OMS update rule.

--dec-mwbf**Type** real number**Default** 0.0**Examples** `--dec-mwbf 1.0`

Give the factor used in the modified WBF algorithm. Set to 0 for basic WBF algorithm.

--dec-synd-depth**Type** integer**Default** 1**Examples** `--dec-synd-depth 2`

Set the number of iterations to process before enabling the syndrome detection. In some cases, it can help to avoid false positive detections.

--dec-ppbf-proba**Type** list of real numbers**Examples** `--dec-ppbf-proba "0,0.001,0.1,0.3,1,1,1"`

Give the probabilities of the Bernoulli distribution of the PPBF. The number of given values must be equal to the biggest variable node degree plus two.

Thus, with a parity matrix that has its largest variable node at 5, you must give 7 values. Each value corresponds to an energy level as described in [LGK+19].

--dec-no-synd

Disable the syndrome detection, all the LDPC decoding iterations will be performed.

References**LDPC Puncturer parameters****--pct-fra-size, -N** **REQUIRED****Type** integer**Examples** `--pct-fra-size 912`

Set the frame size N . This is not necessarily the codeword size if a puncturing pattern is used.

--pct-type**Type** text**Allowed values** LDPC NO**Default** LDPC**Examples** --pct-type LDPC

Select the puncturer type.

Description of the allowed values:

Value	Description
NO	Disable the puncturer.
LDPC	Puncture the LDPC codeword.

--pct-pattern**Type** binary vector**Examples** --pct-pattern "1,1,1,0"

Give the puncturing pattern following the LDPC code.

The number P of values given in this pattern must be as $N_{cw} = P \times Z$ where Z is the number of bits represented by a single value in the pattern.

This LDPC puncturer behavior is such as, for the above example, the first three quarter bits are kept and the last quarter is removed from the frame.

Codec Polar**Polar Encoder parameters****--enc-type****Type** text**Allowed values** POLAR AZCW COSET USER**Default** POLAR**Examples** --enc-type AZCW

Select the encoder type.

Description of the allowed values:

Value	Description
POLAR	Select the standard Polar encoder.
AZCW	See the common <i>--enc-type</i> parameter.
COSET	See the common <i>--enc-type</i> parameter.
USER	See the common <i>--enc-type</i> parameter.

--enc-no-sys

Enable non-systematic encoding. By default the encoding process is systematic.

--enc-fb-gen-method

Type text

Allowed values FILE GA TV

Examples --enc-fb-gen-method FILE

Select the frozen bits generation method.

Description of the allowed values:

Value	Description
GA	Select the GA (Gaussian Approximation) method from [Tri12].
TV	Select the TV (Tal & Vardy) method which is based on Density Evolution (DE (Density Evolution)) approach from [TV13], to use with the <i>--enc-fb-awgn-path</i> parameter.
FILE	Read the best channels from an external file, to use with the <i>--enc-fb-awgn-path</i> parameter.

Note: By default, when using the GA or the TV method, the frozen bits are optimized for each SNR point. To override this behavior you can use the *--enc-fb-sigma* parameter.

Note: When using the FILE method, the frozen bits are always the same regardless of the SNR value.

--enc-fb-awgn-path

Type path

Rights read only

Examples --enc-fb-awgn-path example/path/to/the/right/place/

Set the path to a file or a directory containing the best channels to select the frozen bits.

An ASCII file is expected, for instance, the following file describes the most reliable channels optimized for a codeword of size $N = 8$ and for an AWGN (Additive White Gaussian Noise) channel where the noise variance is $\sigma = 0.435999$:

```
8
awgn
0.435999
7 6 5 3 4 2 1 0
```

Given the previous file, if we suppose a Polar code of size $N = 8$ with $K = 4$ information bits, the frozen bits are at the 0, 1, 2, 4 positions in the codeword. The strategy is to freeze the less reliable channels.

Warning: The FILE frozen bits generator expects a file and not a directory.

Warning: The TV frozen bits generator expects a directory and not a file. AFF3CT comes with input configuration files, a part of those configuration files are a set of best channels pre-generated with the TV method (see `conf/cde/awgn_polar_codes/TV/`).

--enc-fb-sigma**Type** real number**Examples** `--enc-fb-sigma 1.0`

Selects the noise variance σ for which the frozen bits will be optimized. All the noise points in the simulation will use the same frozen bits configuration.

References**Polar Decoder parameters****--dec-type, -D****Type** text**Allowed values** SC SCAN SCL SCL_MEM ASCL ASCL_MEM CHASE ML**Default** SC**Examples** `--dec-type ASCL`

Select the decoder algorithm.

Description of the allowed values:

Value	Description
SC	Select the original SC algorithm from [Ari09].
SCAN	Select the SCAN (Soft CANCEllation) algorithm from [FB14].
SCL	Select the SCL (Successive Cancellation List) algorithm from [TV11], also support the improved CA (CRC Aided)-SCL algorithm.
SCL_MEM	Select the SCL algorithm, same as the previous one but with an implementation optimized to reduce the memory footprint.
ASCL	Select the A-SCL (Adaptive Successive Cancellation List) algorithm from [LST12], PA-SCL (Partially Adaptive Successive Cancellation List) and FA-SCL (Fully Adaptive Successive Cancellation List) variants from [LeonardonCL+17] are available (see the <code>--dec-partial-adaptive</code> parameter).
ASCL_MEM	Select the A-SCL algorithm, same as the previous one but with an implementation optimized to reduce the memory footprint.
CHASE	See the common <code>--dec-type, -D</code> parameter.
ML	See the common <code>--dec-type, -D</code> parameter.

--dec-implement**Type** text**Allowed values** NAIVE FAST**Default** FAST

Examples `--dec-implement FAST`

Select the implementation of the decoder algorithm.

Description of the allowed values:

Value	Description
NAIVE	Select the naive implementation which is typically slow (not supported by the A-SCL decoders).
FAST	Select the fast implementation, available only for the SC, SCL, SCL-MEM, A-SCL and A-SCL-MEM decoders.

Warning: FAST implementations only support systematic encoding of Polar codes.

Note: The SC FAST implementation has been presented in [LeGalLJego15][CLeGalL+15][CAL+16].

Note: The SCL, CA-SCL and A-SCL FAST implementations have been presented in [LeonardonCL+17].

`--dec-simd`

Type text

Allowed values INTER INTRA

Examples `--dec-simd INTER`

Select the SIMD strategy.

Description of the allowed values:

Value	Description
INTER	Select the inter-frame strategy, only available for the SC FAST decoder (see [LeGalLJego15][CLeGalL+15][CAL+16]).
INTRA	Select the intra-frame strategy, only available for the SC (see [CLeGalL+15][CAL+16]), SCL and A-SCL decoders (see in [LeonardonCL+17]).

Note: In the **intra-frame strategy**, SIMD units process several LLRs in parallel within a single frame decoding. This approach is efficient in the upper layers of the tree and in the specialized nodes, but more limited in the lowest layers where the computation becomes more sequential. In the **inter-frame strategy**, SIMD units decodes several independent frames in parallel in order to saturate the SIMD unit. This approach improves the throughput of the decoder but requires to load several frames before starting to decode, increasing both the decoding latency and the decoder memory footprint.

Note: When the inter-frame SIMD strategy is set, the simulator will run with the right number of frames depending on the SIMD length. This number of frames can be manually set with the `-src-fra, -F` parameter. Be aware that running the simulator with the `-src-fra, -F` parameter set to 1 and the `--dec-simd` parameter set to INTER will completely be counterproductive and will lead to no throughput improvements.

--dec-ite, -i

Type integer

Examples `--dec-ite 1`

Set the number of decoding iterations in the SCAN decoder.

--dec-lists, -L

Type integer

Examples `--dec-lists 1`

Set the number of lists to maintain in the SCL and A-SCL decoders.

--dec-partial-adaptive

Select the partial adaptive (PA-SCL) variant of the A-SCL decoder (by default the FA-SCL is selected).

--dec-polar-nodes

Type text

Default `"{R0,R1,R0L,REP,REPL,SPC}"`

Examples `--dec-polar-nodes "{R0,R1}"`

Set the rules to enable in the tree simplifications process. This parameter is compatible with the SC FAST, the SCL FAST, SCL-MEM FAST, the A-SCL FAST and the the A-SCL-MEM FAST decoders.

Here are the available node types (or rules):

- R0: Rate 0, all the bits are frozen,
- R0L: Rate 0 left, the next left node in the tree is a R0,
- R1: Rate 1, all the bits are information bits,
- REP: Repetition code,
- REPL: Repetition left, the next left node in the tree is REP,
- SPC: SPC (Single Parity Check) code.

Those node types are well explained in [SGV+14][CLeGalL+15]. It is also possible to specify the level in the tree where the node type will be recognized. For instance, the following value `"{R0,R1,R0L,REP_2-8,REPL,SPC_4+}"` matches:

- R0: all the Rate 0 nodes,
- R0L: all the Rate 0 left nodes,
- R1: all the Rate 1 nodes,
- REP_2-8: the repetition nodes with a size between 2 and 8 (including 2 and 8),
- REPL: all the repetition left nodes (will be automatically limited by the REP_2-8 rule),
- SPC_4+: the SPC nodes with a size equal or higher than 4.

To disable the tree cuts you can use the following value: `"{R0_1,R1_1}"`.

References

Polar Puncturer parameters

`--pct-fra-size, -N` **REQUIRED**

Type integer

Examples `--pct-fra-size 1`

Set the frame size N . This is not necessarily the codeword size if a puncturing pattern is used.

`--pct-info-bits, -K` **REQUIRED**

Type integer

Examples `--pct-info-bits 1`

Set the number of information bits K .

`--pct-type`

Type text

Allowed values NO SHORTLAST

Default NO

Examples `--pct-type NO`

Select the puncturer type.

Description of the allowed values:

Value	Description
NO	Disable the puncturer.
SHORTLAST	Select the short last puncturing strategy from [NCL13][WL14][Mil15].

References

Codec RA (Repeat and Accumulate)

RA Encoder parameters

`--enc-cw-size, -N` **REQUIRED**

Type integer

Examples `--enc-cw-size 1`

Set the codeword size N .

`--enc-info-bits, -K` **REQUIRED**

Type integer

Examples `--enc-info-bits 1`

Set the number of information bits K .

`--enc-type`

Type text

Allowed values RA AZCW COSET USER

Default RA

Examples `--enc-type AZCW`

Select the encoder type.

Description of the allowed values:

Value	Description
RA	Select the standard RA encoder.
AZCW	See the common <code>--enc-type</code> parameter.
COSET	See the common <code>--enc-type</code> parameter.
USER	See the common <code>--enc-type</code> parameter.

RA Decoder parameters

`--dec-type, -D`

Type text

Allowed values RA CHASE ML

Default RA

Examples `--dec-type CHASE`

Select the decoder algorithm.

Description of the allowed values:

Value	Description
RA	Select the RA decoder based on the MS update rule in the CNS.
CHASE	See the common <code>--dec-type, -D</code> parameter.
ML	See the common <code>--dec-type, -D</code> parameter.

`--dec-implement`

Type text

Allowed values STD

Default STD

Examples --dec-implem STD

Select the implementation of the decoder algorithm.

Description of the allowed values:

Value	Description
STD	Select the STD implementation.

--dec-ite, -i

Type integer

Examples --dec-ite 1

Set the number of iterations to perform in the decoder.

Codec Repetition

Repetition Encoder parameters

--enc-cw-size, -N **REQUIRED**

Type integer

Examples --enc-cw-size 1

Set the codeword size N .

N has to be divisible by K .

--enc-info-bits, -K **REQUIRED**

Type integer

Examples --enc-info-bits 1

Set the number of information bits K .

--enc-type

Type text

Allowed values REP AZCW COSET USER

Examples --enc-type AZCW

Select the encoder type.

Description of the allowed values:

Value	Description
REP	Select the standart repetition decoder.
AZCW	See the common <i>-enc-type</i> parameter.
COSET	See the common <i>-enc-type</i> parameter.
USER	See the common <i>-enc-type</i> parameter.

`--enc-no-buff`

Disable the buffered encoding.

Without the buffered encoding, considering K information bits U_0, U_1, \dots, U_{K-1} , the corresponding sequence of bits in the codeword is organized as follow: $X_0^0, X_0^1, \dots, X_0^{rep-1}, X_1^0, X_1^1, \dots, X_1^{rep-1}, \dots, X_{K-1}^0, X_{K-1}^1, \dots, X_{K-1}^{rep-1}$, with $rep = N/K$.

With the buffered encoding, considering K information bits U_0, U_1, \dots, U_{K-1} , the corresponding sequence of bits in the codeword is organized as follow: $X_0^0, X_1^0, \dots, X_{K-1}^0, X_0^1, X_1^1, \dots, X_{K-1}^1, \dots, X_0^{rep-1}, X_1^{rep-1}, \dots, X_{K-1}^{rep-1}$, with $rep = N/K$.

Repetition Decoder parameters

`--dec-type, -D`

Type text

Allowed values REPETITION CHASE ML

Default REPETITION

Examples `--dec-type CHASE`

Select the decoder algorithm.

Description of the allowed values:

Value	Description
REPETITION	Select the repetition decoder.
CHASE	See the common <i>-dec-type, -D</i> parameter.
ML	See the common <i>-dec-type, -D</i> parameter.

`--dec-implem`

Type text

Allowed values STD FAST

Default STD

Examples `--dec-implem FAST`

Select the implementation of the decoder algorithm.

Description of the allowed values:

Value	Description
STD	Select the STD implementation.
FAST	Select the fast implementation, much more faster without the <code>-enc-no-buff</code> parameter.

Codec RS (Reed-Solomon)

RS Encoder parameters

`--enc-cw-size, -N` **REQUIRED**

Type integer

Examples `--enc-cw-size 127`

Set the codeword size N .

$N = 2^m - 1$, where m is an integer from 3 that represents also the number of bits per symbol. Thus, the binary codeword size is $N \times m$.

`--enc-info-bits, -K` **REQUIRED**

Type integer

Examples `--enc-info-bits 1`

Set the number of information bits K .

This argument is not required if the correction power T is given with `-dec-corr-pow, -T`, as it is calculated automatically with the formula $K = N - 2.T$.

`--enc-type`

Type text

Allowed values RS AZCW COSET USER

Default RS

Examples `--enc-type AZCW`

Select the encoder type.

Description of the allowed values:

Value	Description
RS	Select the standard RS encoder.
AZCW	See the common <code>-enc-type</code> parameter.
COSET	See the common <code>-enc-type</code> parameter.
USER	See the common <code>-enc-type</code> parameter.

RS Decoder parameters

The RS decoder was described by Reed and Solomon in 1960 [ISR60].

`--dec-type, -D`

Type text

Allowed values ALGEBRAIC CHASE ML

Default ALGEBRAIC

Examples `--dec-type ALGEBRAIC`

Select the decoder algorithm.

Description of the allowed values:

Value	Description
ALGEBRAIC	Select the Berlekamp-Massey algorithm [Ber15][Mas69] followed by a Chien search [Chi64].
CHASE	See the common <code>--dec-type, -D</code> parameter.
ML	See the common <code>--dec-type, -D</code> parameter.

`--dec-implement`

Type text

Allowed values STD GENIUS

Default STD

Examples `--dec-implement GENIUS`

Select the implementation of the decoder algorithm.

Description of the allowed values:

Value	Description
STD	A standard implementation of the RS.
GENIUS	A really fast implementation that compare the input to the original codeword and correct it only when the number of symbols errors is less or equal to the RS correction power.

Note: In the STD implementation, the Chien search finds roots of the error location polynomial. If the number of found roots does not match the number of found errors by the Berlekamp–Massey algorithm, then the frame is not modified.

When a frame is very corrupted and when the above algorithms can be wrong in the correction by converging to another codeword, the GENIUS implementation cannot fail. Results may then differ from a real word implementation.

`--dec-corr-pow, -T`

Type integer

Default 5**Examples** `-T 18`

Set the correction power of the RS decoder. This value corresponds to the number of symbols errors that the decoder is able to correct.

It is automatically calculated from the input and codeword sizes. See also the argument `--enc-info-bits, -K`.

References

Codec RSC (Recursive Systematic Convolutional)

RSC Encoder parameters

`--enc-info-bits, -K` **REQUIRED**

Type integer**Examples** `--enc-info-bits 1`

Set the number of information bits K .

The codeword size N is automatically deduced: $N = 2 \times (K + \log_2(ts))$ where ts is the trellis size.

`--enc-type`

Type text**Allowed values** RSC AZCW COSET USER**Default** RSC**Examples** `--enc-type AZCW`

Select the encoder type.

Description of the allowed values:

Value	Description
RSC	Select the standard RSC encoder.
AZCW	See the common <code>--enc-type</code> parameter.
COSET	See the common <code>--enc-type</code> parameter.
USER	See the common <code>--enc-type</code> parameter.

`--enc-no-buff`

Disable the buffered encoding.

Without the buffered encoding, considering the following sequence of K information bits: $U_0, U_1, [\dots], U_{K-1}$, the encoded bits will be organized as follow: $X_0^s, X_0^p, X_1^s, X_1^p, [\dots], X_{K-1}^s, X_{K-1}^p, X_0^t, X_0^p, X_1^s, X_1^p, [\dots], X_{\log_2(ts)-1}^s, X_{\log_2(ts)-1}^p$, where s and p are respectively *systematic* and *parity* bits, t the *tail bits* and ts the *trellis size*.

With the buffered encoding, considering the following sequence of K information bits: $U_0, U_1, [\dots], U_{K-1}$, the encoded bits will be organized as follow: $X_0^s, X_1^s, [\dots], X_{K-1}^s, X_0^t, X_1^t, [\dots], X_{\log_2(ts)-1}^t, X_0^p, X_1^p, [\dots], X_{K-1}^p, X_0^{p^t}, X_1^{p^t}, [\dots], X_{\log_2(ts)-1}^{p^t}$, where s and p are respectively *systematic* and *parity* bits, t the *tail bits* and ts the *trellis size*.

--enc-poly

Type text

Default "{013, 015}"

Examples --enc-poly "{023, 033}"

Set the polynomials that define the RSC code (or the trellis structure). The expected form is $\{A, B\}$ where A and B are given in octal.

--enc-std

Type text

Allowed values CCSDS LTE

Examples --enc-std CCSDS

Select a standard: set automatically some parameters (can be overwritten by user given arguments).

Description of the allowed values:

Value	Description
CCSDS	Set the <i>--enc-poly</i> parameter to {023, 033} according to the CCSDS (Consultative Committee for Space Data Systems) standard (16-stage trellis).
LTE	Set the <i>--enc-poly</i> parameter to {013, 015} according to the LTE (Long Term Evolution) standard (8-stage trellis).

RSC Decoder parameters

--dec-type, -D

Type text

Allowed values BCJR CHASE ML

Examples --dec-type BCJR

Select the decoder algorithm.

Description of the allowed values:

Value	Description
BCJR	Select the BCJR (Bahl, Cocke, Jelinek and Raviv algorithm or Maximum A Posteriori (MAP)) algorithm from [BCJR74].
CHASE	See the common <i>--dec-type, -D</i> parameter.
ML	See the common <i>--dec-type, -D</i> parameter.

--dec-implement**Type** text**Allowed values** GENERIC STD FAST VERY_FAST**Default** STD**Examples** --dec-implement FAST

Select the implementation of the decoder algorithm.

Description of the allowed values:

Value	Description
GENERIC	Select the generic BCJR implementation that can decode any trellis (slow compared to the other implementations).
STD	Select the STD BCJR implementation, specialized for the {013, 015} polynomials (c.f. the <i>-enc-poly</i> parameter).
FAST	Select the fast BCJR implementation, specialized for the {013, 015} polynomials (c.f. the <i>-enc-poly</i> parameter).
VERY_FAST	Select the very fast BCJR implementation, specialized for the {013, 015} polynomials (c.f. the <i>-enc-poly</i> parameter).

--dec-simd**Type** text**Allowed values** INTER INTRA**Examples** --dec-simd INTER

Select the SIMD strategy.

Description of the allowed values:

Value	Description
INTER	Select the inter-frame strategy, only available for the BCJR STD, FAST and VERY_FAST implementation (see [CTL+16]).
INTRA	Select the intra-frame strategy, only available for the BCJR STD and FAST implementations (see [WWY+13]).

Note: In the **intra-frame strategy**, SIMD units process several LLRs in parallel within a single frame decoding. In the **inter-frame strategy**, SIMD units decodes several independent frames in parallel in order to saturate the SIMD unit. This approach improves the throughput of the decoder but requires to load several frames before starting to decode, increasing both the decoding latency and the decoder memory footprint.

Note: When the inter-frame SIMD strategy is set, the simulator will run with the right number of frames depending on the SIMD length. This number of frames can be manually set with the *-src-fra*, *-F* parameter. Be aware that running the simulator with the *-src-fra*, *-F* parameter set to 1 and the *-dec-simd* parameter set to INTER will completely be counterproductive and will lead to no throughput improvements.

--dec-max**Type** text**Allowed values** MAXS MAXL MAX**Examples** --dec-max MAX

Select the approximation of the \max^* operator used in the trellis decoding.

Description of the allowed values:

Value	Description
MAXS	$\max^*(a, b) = \max(a, b) + \log(1 + \exp(- a - b))$.
MAXL	$\max^*(a, b) \approx \max(a, b) + \max(0, 0.301 - (0.5 a - b))$.
MAX	$\max^*(a, b) \approx \max(a, b)$.

MAXS for *Max Star* is the exact \max^* operator. MAXL for *Max Linear* is a linear approximation of the \max^* function. MAX for *Max* is the simplest \max^* approximation with only a max function.

Note: The BCJR with the max approximation is also called the max-log-MAP (Maximum A Posteriori) algorithm.

References

Codec RSC DB (Double Binary)

RSC DB Encoder parameters

--enc-info-bits, -K **REQUIRED****Type** integer**Examples** --enc-info-bits 1

Set the number of information bits K .

The codeword size N is automatically deduced: $N = 2 \times K$.

--enc-type**Type** text**Allowed values** RSC_DB AZCW COSET USER**Default** RSC_DB**Examples** --enc-type AZCW

Select the encoder type.

Description of the allowed values:

Value	Description
RSC_DB	Select the standard RSC DB encoder.
AZCW	See the common <i>-enc-type</i> parameter.
COSET	See the common <i>-enc-type</i> parameter.
USER	See the common <i>-enc-type</i> parameter.

--enc-no-buff

Disable the buffered encoding.

--enc-std

Type text

Allowed values DVB-RCS1 DVB-RCS2

Default DVB-RCS1

Examples --enc-std DVB-RCS2

Select a standard.

Description of the allowed values:

Value	Description
DVB-RCS1	Select the configuration of the DVB-RCS1 (Digital Video Broadcasting - Return Channel via Satellite 1) standard.
DVB-RCS2	Select the configuration of the DVB-RCS2 (Digital Video Broadcasting - Return Channel via Satellite 2) standard.

RSC DB Decoder parameters**--dec-type, -D**

Type text

Allowed values BCJR CHASE ML

Default BCJR

Examples --dec-type BCJR

Select the decoder algorithm.

Description of the allowed values:

Value	Description
BCJR	Select the BCJR DB decoder [BCJR74].
CHASE	See the common <i>-dec-type, -D</i> parameter.
ML	See the common <i>-dec-type, -D</i> parameter.

--dec-implem

Type text

Allowed values GENERIC DVB-RCS1 DVB-RCS2

Default DVB-RCS1

Examples --dec-implem DVB-RCS1

Select the implementation of the decoder algorithm.

Description of the allowed values:

Value	Description
GENERIC	Select a generic implementation that works on any trellis.
DVB-RCS1	Select an implementation dedicated to the DVB-RCS1 trellis (faster than the GENERIC implementation).
DVB-RCS2	Select an implementation dedicated to the DVB-RCS2 trellis (faster than the GENERIC implementation).

--dec-max

Type text

Allowed values MAXS MAXL MAX

Examples --dec-max MAX

Select the approximation of the \max^* operator used in the trellis decoding.

Description of the allowed values:

Value	Description
MAXS	$\max^*(a, b) = \max(a, b) + \log(1 + \exp(- a - b))$.
MAXL	$\max^*(a, b) \approx \max(a, b) + \max(0, 0.301 - (0.5 a - b))$.
MAX	$\max^*(a, b) \approx \max(a, b)$.

MAXS for *Max Star* is the exact \max^* operator. MAXL for *Max Linear* is a linear approximation of the \max^* function. MAX for *Max* is the simplest \max^* approximation with only a max function.

Note: The BCJR with the max approximation is also called the max-log-MAP algorithm.

References

Codec Turbo

Turbo Encoder parameters

--enc-info-bits, -K REQUIRED

Type integer

Examples `--enc-info-bits 1`

Set the number of information bits K .

The codeword size N is automatically deduced: $N = 3 \times K + 4 \times \log_2(ts)$ where ts is the trellis size.

`--enc-type`

Type text

Allowed values TURBO AZCW COSET USER

Default TURBO

Examples `--enc-type AZCW`

Select the encoder type.

Description of the allowed values:

Value	Description
TURBO	Select the standard Turbo encoder.
AZCW	See the common <code>-enc-type</code> parameter.
COSET	See the common <code>-enc-type</code> parameter.
USER	See the common <code>-enc-type</code> parameter.

`--enc-sub-type`

Please refer to the RSC `-enc-type` parameter.

`--enc-json-path`

Type file

Rights write only

Examples `--enc-json-path example/path/to/the/right/file`

Select the file path to dump the encoder and decoder internal values (in JSON (JavaScript Object Notation) format).

Those values can be observed with the dedicated *Turbo Code Reader* available on the AFF3CT website: http://aff3ct.github.io/turbo_reader.html.

Note: Using this parameter will **slowdown considerably the encoder and decoder throughputs**.

`--enc-sub-no-buff`

Disable the buffered encoding.

Without the buffered encoding, considering the following sequence of K information bits: $U_0, U_1, [\dots], U_{K-1}$, the encoded bits will be organized as follow: $X_0^{sn}, X_0^{pn}, X_0^{pi}, [\dots], X_{K-1}^{sn}, X_{K-1}^{pn}, X_{K-1}^{pi}, X_0^{sn^t}, X_0^{pn^t}, [\dots], X_{\log_2(ts)-1}^{sn^t}, X_{\log_2(ts)-1}^{pn^t}, X_0^{si^t}, X_0^{pi^t}, [\dots], X_{\log_2(ts)-1}^{si^t}, X_{\log_2(ts)-1}^{pi^t}$, where sn and pn are respectively *systematic* and *parity* bits in the *natural domain*, si and pi are respectively *systematic* and *parity* bits in the *interleaved domain*, t the *tail bits* and ts the *trellis size*.

With the buffered encoding, considering the following sequence of K information bits: $U_0, U_1, [\dots], U_{K-1}$, the encoded bits will be organized as follow: $X_0^{sn}, [\dots], X_{K-1}^{sn}, X_0^{sn^t}, [\dots], X_{\log_2(ts)-1}^{sn^t}, X_0^{pn}, [\dots], X_{K-1}^{pn}, X_0^{pn^t}, [\dots], X_{\log_2(ts)-1}^{pn^t}, X_0^{si^t}, [\dots], X_{\log_2(ts)-1}^{si^t}, X_0^{pi}, [\dots], X_{K-1}^{pi}, X_0^{pi^t}, [\dots]$, where sn and pn are respectively *systematic* and *parity* bits in the *natural domain*, si and pi are respectively *systematic* and *parity* bits in the *interleaved domain*, t the *tail bits* and ts the *trellis size*.

--enc-sub-poly

Please refer to the RSC *-enc-poly* parameter.

--enc-sub-std

Type text

Allowed values CCSDS LTE

Examples --enc-sub-std CCSDS

Select a standard: set automatically some parameters (can be overwritten by user given arguments).

Description of the allowed values:

Value	Description
CCSDS	Set the <i>-enc-sub-poly</i> parameter to {023, 033} according to the CCSDS standard (16-stage trellis) and select the CCSDS interleaver (see the <i>-itl-type</i> parameter).
LTE	Set the <i>-enc-sub-poly</i> parameter to {013, 015} according to the LTE standard (8-stage trellis) and select the LTE interleaver (see the <i>-itl-type</i> parameter).

Turbo Decoder parameters

--dec-type, -D

Type text

Allowed values TURBO CHASE ML

Default TURBO

Examples --dec-type CHASE

Select the decoder algorithm.

Description of the allowed values:

Value	Description
TURBO	Select the Turbo decoder, the two sub-decoders are from the RSC code family.
CHASE	See the common <i>-dec-type, -D</i> parameter.
ML	See the common <i>-dec-type, -D</i> parameter.

--dec-implem

Type text

Allowed values STD FAST

Default FAST

Examples `--dec-implement FAST`

Select the implementation of the decoder algorithm.

Description of the allowed values:

Value	Description
STD	Select the STD implementation.
FAST	Select the fast implementation from [CTL+16].

`--dec-sub-type, -D`

Please refer to the RSC `-dec-type, -D` parameter.

`--dec-sub-implement`

Please refer to the RSC `-dec-implement` parameter.

`--dec-sub-simd`

Please refer to the RSC `-dec-simd` parameter.

`--dec-crc-start`

Type integer

Default 2

Examples `--dec-fnc-crc-ite 1`

Set the first iteration to start the CRC checking.

Note: This parameter requires the Turbo code to be concatenated with a CRC to work, see the *CRC parameters*.

`--dec-fnc`

Enable the FNC (Flip aNd Check) post processing technique.

Note: The FNC post processing technique is detailed in [TLLeGal+16].

Note: This parameter requires the Turbo code to be concatenated with a CRC to work, see the *CRC parameters*.

--dec-fnc-ite-m

Type integer

Default 3

Examples `--dec-fnc-ite-m 2`

Set the first iteration at which the FNC is used.

See the `-dec-fnc` parameter.

--dec-fnc-ite-M

Type integer

Default 10

Examples `--dec-fnc-ite-M 6`

Set the last iteration at which the FNC is used.

See the `-dec-fnc` parameter.

--dec-fnc-ite-s

Type integer

Default 1

Examples `--dec-fnc-ite-s 2`

Set the iteration step for the FNC technique.

See the `-dec-fnc` parameter.

--dec-fnc-q

Type integer

Default 10

Examples `--dec-fnc-q 6`

Set the search space for the FNC technique.

See the `-dec-fnc` parameter.

--dec-ite, -i

Type integer

Default 6

Examples `--dec-ite 8`

Set the maximal number of iterations in the Turbo decoder.

If the Turbo code is concatenated with a CRC and if the CRC is checked, the decoder can stop before making all the iterations.

--dec-sc

Enable the Self-Corrected (SC) decoder.

Note: The SC decoder is detailed in [Ton17] (in French).

Note: This parameter requires the Turbo code to be concatenated with a CRC to work, see the *CRC parameters*.

--dec-sf-type

Type text

Allowed values ADAPTIVE ARRAY CST LTE LTE_VEC

Examples

```
--dec-sf-type ADAPTIVE
--dec-sf-type CST 0.5
```

Select a scaling factor (SF (Scaling Factor)) to be applied to the extrinsic values after each half iteration.

This is especially useful with the max-log-MAP sub-decoders (BCJR with the max approximation): the SF helps to recover a part of the decoding performance loss compare to the MAP algorithm (BCJR with the max* operator).

Note: The SF technique is detailed in [VF00].

Description of the allowed values:

Value	Description
ADAPTIVE	Select the adaptive SF, for the first and second iterations a SF of 0.5 is applied, for the other iterations the SF is 0.85.
ARRAY	Select an hard-coded array of SFs (Scaling Factors) (c.f. Table 3.3).
CST	Set the same SF to be applied for each iterations.
LTE	Select a 0.75 SF.
LTE_VEC	Select a 0.75 vectorized SF (faster than LTE), used in [CTL+16].

Table 3.3: Hard-coded array of SFs.

Iteration	Value
1	0.15
2	0.25
3	0.30
4	0.40
5	0.70
6	0.80
7	0.90
8	0.95

`--dec-sub-max`

Please refer to the RSC `-dec-max` parameter.

References

Turbo Puncturer parameters

`--pct-type`

Type text

Allowed values NO TURBO

Default NO

Examples `--pct-type NO`

Select the puncturer type.

Description of the allowed values:

Value	Description
NO	Disable the puncturer.
TURBO	Enable the puncturing patterns.

Note: The frame size will be automatically set from the given puncturing pattern (c.f. the `-pct-pattern` parameter).

`--pct-pattern`

Type list of (list of (boolean:including set={011}):limited length [1;inf]):limited length [3;3], elements of same length

Examples `--pct-pattern "11,10,01"`

Define the puncturing pattern.

Considering the "11,10,01" puncturing pattern, the first sub-pattern 11 defines the emitted systematic bits, the second sub-pattern 10 defines the emitted parity bits in the natural domain and the third sub-pattern 01 defines the emitted parity bits in the interleaved domain. 1 means that the bit has to be transmitted and 0 means that the bit transmission has to be erased.

Given the following frame: $X_0^{sn}, X_1^{pn}, X_2^{pi}, X_3^{sn}, X_4^{pn}, X_5^{pi}, X_6^{sn}, X_7^{pn}, X_8^{pi}$, with the "11,10,01" puncturing pattern, the underlined bits will not be emitted. In the previous example, tail bits are not taken into account but in reality they are always emitted.

Codec Turbo DB

Turbo DB Encoder parameters

`--enc-info-bits, -K` **REQUIRED**

Type integer

Examples `--enc-info-bits 40`

Set the number of information bits K .

The codeword size N is automatically deduced: $N = 3 \times K$.

`--enc-type`

Type text

Allowed values TURBO_DB AZCW COSET USER

Default TURBO_DB

Examples `--enc-type AZCW`

Select the encoder type.

Description of the allowed values:

Value	Description
TURBO_DB	Select the standard Turbo DB encoder.
AZCW	See the common <i>-enc-type</i> parameter.
COSET	See the common <i>-enc-type</i> parameter.
USER	See the common <i>-enc-type</i> parameter.

`--enc-sub-type`

Please refer to the RSC DB *-enc-type* parameter.

`--enc-sub-std`

Type text

Allowed values DVB-RCS1 DVB-RCS2

Default DVB-RCS1

Examples `--enc-sub-std DVB-RCS2`

Select a standard.

Description of the allowed values:

Value	Description
DVB-RCS1	Set the DVB-RCS1 trellis and select the DVB-RCS1 interleaver (see the <i>-itl-type</i> parameter).
DVB-RCS2	Set the DVB-RCS2 trellis and select the DVB-RCS2 interleaver (see the <i>-itl-type</i> parameter).

Turbo DB Decoder parameters

`--dec-type, -D`

Type text

Allowed values TURBO_DB CHASE ML

Default TURBO_DB

Examples `--dec-type CHASE`

Select the decoder algorithm.

Description of the allowed values:

Value	Description
TURBO_DB	Select the standard Turbo decoder.
CHASE	See the common <code>--dec-type, -D</code> parameter.
ML	See the common <code>--dec-type, -D</code> parameter.

`--dec-implement`

Type text

Allowed values STD

Default STD

Examples `--dec-implement STD`

Select the implementation of the decoder algorithm.

Description of the allowed values:

Value	Description
STD	Select the STD implementation.

`--dec-sub-type, -D`

Please refer to the RSC DB `--dec-type, -D` parameter.

`--dec-sub-implement`

Please refer to the RSC DB `--dec-implement` parameter.

`--dec-crc-start`

Type integer

Default 2

Examples `--dec-fnc-crc-ite 1`

Set the first iteration to start the CRC checking.

Note: This parameter requires the Turbo code to be concatenated with a CRC to work, see the *CRC parameters*.

`--dec-fnc`

Enable the FNC post processing technique.

Note: The FNC post processing technique is detailed in [TLLeGal+16].

Note: This parameter requires the Turbo code to be concatenated with a CRC to work, see the *CRC parameters*.

`--dec-fnc-ite-m`

Type integer

Default 3

Examples `--dec-fnc-ite-m 2`

Set the first iteration at which the FNC is used.

See the `--dec-fnc` parameter.

`--dec-fnc-ite-M`

Type integer

Default 10

Examples `--dec-fnc-ite-M 6`

Set the last iteration at which the FNC is used.

See the `--dec-fnc` parameter.

`--dec-fnc-ite-s`

Type integer

Default 1

Examples `--dec-fnc-ite-s 2`

Set the iteration step for the FNC technique.

See the `--dec-fnc` parameter.

--dec-fnc-q

Type integer

Default 10

Examples `--dec-fnc-q 6`

Set the search space for the FNC technique.

See the `-dec-fnc` parameter.

--dec-ite, -i

Type integer

Default 6

Examples `--dec-ite 8`

Set the maximal number of iterations in the Turbo decoder.

If the Turbo code is concatenated with a CRC and if the CRC is checked, the decoder can stop before making all the iterations.

--dec-sf-type

Type text

Allowed values ADAPTIVE ARRAY CST LTE LTE_VEC

Examples

`--dec-sf-type ADAPTIVE`

`--dec-sf-type CST 0.5`

Select a scaling factor (SF) to be applied to the extrinsic values after each half iteration.

This is especially useful with the max-log-MAP sub-decoders (BCJR with the max approximation): the SF helps to recover a part of the decoding performance loss compare to the MAP algorithm (BCJR with the max* operator).

Note: The SF technique is detailed in [VF00].

Description of the allowed values:

Value	Description
ADAPTIVE	Select the adaptive SF, for the first and second iterations a SF of 0.5 is applied, for the other iterations the SF is 0.85.
ARRAY	Select an hard-coded array of SFs (c.f. Table 3.3).
CST	Set the same SF to be applied for each iterations.
LTE	Select a 0.75 SF.
LTE_VEC	Select a 0.75 vectorized SF (faster than LTE).

Table 3.4: Hard-coded array of SFs.

Iteration	Value
1	0.15
2	0.25
3	0.30
4	0.40
5	0.70
6	0.80
7	0.90
8	0.95

`--dec-sub-max`

Please refer to the RSC `-dec-max` parameter.

References

Turbo DB Puncturer parameters

`--pct-type`

Type text

Allowed values NO TURBO_DB

Default NO

Examples `--pct-type NO`

Select the puncturer type.

Description of the allowed values:

Value	Description
NO	Disable the puncturer.
TURBO_DB	Enable the puncturer.

`--pct-fra-size, -N`

Type integer

Examples `--pct-fra-size 1`

Set the frame size N . This is not necessarily the codeword size if a puncturing pattern is used.

The puncturer supports $R = 2/5$, $R = 1/2$, $R = 2/3$ and $R = 4/5$ with $R = K/N$.

Codec TPC (Turbo Product Code)

The TPC is an alliance of two crossed BCH codes. The same BCH code is used for columns and rows.

TPC Encoder parameters

`--enc-sub-cw-size, -N` **REQUIRED**

Type integer

Examples `--enc-sub-cw-size 127`

Set the codeword size N .

Give the *sub-encoder code* codeword size. You can extend this codeword with a parity bit with the `-enc-ext` option. Then the codeword size of the TPC is the square of this value.

`--enc-sub-info-bits, -K` **REQUIRED**

Type integer

Examples `--enc-sub-info-bits 120`

Set the number of information bits K .

Give the *sub-encoder code* input size (number of information bits). Then the number of information bits of the TPC is the square of this value.

`--enc-type`

Type text

Allowed values TPC AZCW COSET USER

Default TPC

Examples `--enc-type AZCW`

Select the encoder type.

Description of the allowed values:

Value	Description
TPC	The TPC encoder.
AZCW	See the common <code>-enc-type</code> parameter.
COSET	See the common <code>-enc-type</code> parameter.
USER	See the common <code>-enc-type</code> parameter.

`--enc-sub-type`

Please refer to the BCH `-enc-type` parameter.

`--enc-ext`

Extend the *sub-encoder* codeword with a parity bit in order to increase the distance of the code.

TPC Decoder parameters

The TPC decoder first decodes columns once with the Chase-Pyndiah algorithm, then rows, and columns again then rows again and so on.

Let's say C is the $N \times N$ *a priori* matrix from the demodulator.

Let's say R_{i+1}^c is the $N \times N$ *a posteriori* matrix computed by this decoder after the i^{th} iteration on the columns. Initially, $R_0^c = C$.

Let's say R_{i+1}^r is the $N \times N$ *a posteriori* matrix computed by this decoder after the i^{th} iteration on the rows, with $R_i^r = R_{i+1}^c$.

The process of the columns for the i^{th} iteration gives:

$$R_{i+1}^c = \alpha_{2i+0} W_i^c + C$$

with W_i^c the extrinsic from the Chase-Pyndiah decoder computed on R_i^c .

The process of the rows for the i^{th} iteration gives:

$$R_{i+1}^r = \alpha_{2i+1} W_i^r + C$$

with W_i^r the extrinsic from the Chase-Pyndiah decoder computed on R_i^r .

Parameter α is set with the argument `-dec-alpha`.

`--dec-sub-cw-size, -N` **REQUIRED**

Type integer

Examples `--dec-sub-cw-size 1`

Set the codeword size N .

`--dec-sub-info-bits, -K` **REQUIRED**

Type integer

Examples `--dec-sub-info-bits 1`

Set the number of information bits K .

`--dec-type, -D`

Type text

Allowed values CHASE CP ML

Default CP

Examples `--dec-type CP`

Select the decoder algorithm.

This algorithm will decode each column and row of the TPC.

Description of the allowed values:

Value	Description
CP	Decode with the Chase-Pyndiah algorithm of the TPC
CHASE	See the common <i>-dec-type</i> , <i>-D</i> parameter.
ML	See the common <i>-dec-type</i> , <i>-D</i> parameter.

The CP algorithm is the implementation of [Pyndiah1998] but in a more generic way in order to let the user chose its configuration:

- **Chase step: find the more reliable codeword D :**
 - Take hard decision H on input R .
 - Select the p (set with *-dec-p*) least reliable positions from R to get a metric set P of p elements.
 - Create t (set with *-dec-t*) test vectors from test patterns.
 - Hard decode with the sub-decoder to get the competitors with good syndrome set C .
 - Remove competitors from C to keep c of them (set with *-dec-c*).
 - Compute the metrics C_m (euclidean distance) of each competitor compared to H .
 - Select the competitors with the smallest metric to get the decided word D with a metric D_m and where

$$D_j = \begin{cases} +1 & \text{when } H_j = 0 \\ -1 & \text{when } H_j = 1 \end{cases}$$
- **Pyndiah step: compute reliabilities of each bit of D**
 - a, b, c, d and e are simulation constants changeable by the user with *-dec-cp-coef*
 - Compute the reliability F of D for each bit D_j of the word:
 - * Find C^s the competitor with the smallest metric C_m that have $C_j^s \neq D_j$.
 - * when C^s exists:

$$F_j = b.D_j.[C_m - D_m]$$
 - * when C^s does not exist and if *-dec-beta* is given:

$$F_j = D_j.beta$$
 - * else:

$$F_j = D_j. \left[\sum_{i=0}^e P_i - c.D_m + d.|R_j| \right]$$
 where P is considered sorted, $0 < e < p$, and when $e == 0 \implies e = p - 1$.
 - Compute extrinsic $W = F - a.R$

--dec-imlem

Type text

Allowed values STD

Default STD

Examples --dec-imlem STD

Select the implementation of the decoder algorithm.

Description of the allowed values:

Value	Description
STD	A standard implementation

`--dec-ite, -i`

Type integer

Default 4

Examples `--dec-ite 8`

Set the number of iterations in the turbo decoding process.

`--dec-alpha`

Type list of real numbers

Default all at 0.5

Examples `--dec-alpha "0.1, 0.1, 0.2, 0.25, 0.3, 0.35, .5, .5, 1.2"`

Give the *weighting factor* alpha, one by half iteration (so twice more than the number of iterations).

The first one is for the first columns process, the second for the first rows process, the third for the second columns process, the fourth for the second rows process, and so on.

If there are not enough values, then the last one given is automatically extended to the rest of the half-iterations. Conversely, if there are too many, the surplus is truncated.

`--dec-beta`

Type list of real numbers

Examples `--dec-beta "0.1, 0.1, 0.2, 0.25, 0.3, 0.35, .5, .5, 1.2"`

Give the *reliability factor* beta, one by half iteration (so twice more than the number of iterations).

The first one is for the first columns process, the second for the first rows process, the third for the second columns process, the fourth for the second rows process, and so on.

If there are not enough values, then the last one given is automatically extended to the rest of the half-iterations. Conversely, if there are too many, the surplus is truncated.

If not given, then beta is dynamically computed as described in `-dec-type, -D`.

`--dec-c`

Type integer

Default 0

Examples `--dec-c 3`

Set the *number of competitors*. A value of 0 means that the latter is set to the number of test vectors, 1 means only the decided word.

--dec-p

Type integer

Default 2

Examples --dec-p 1

Set the number of *least reliable positions*.

--dec-t

Type integer

Default 0

Examples --dec-t 1

Set the *number of test vectors*. A value of 0 means equal to 2^p where p is the number of least reliable positions.

--dec-cp-coef

Type list of real numbers

Default "1, 1, 1, 1, 0"

Examples --dec-cp-coef "0, 0.25, 0, 0, 3"

Give the 5 CP constant coefficients a, b, c, d, e .

See the *-dec-type, -D* parameter.

--dec-sub-type, -D

Please refer to the BCH *-dec-type, -D* parameter.

--dec-sub-corr-pow, -T

Please refer to the BCH *-dec-corr-pow, -T* parameter.

--dec-sub-implem

Please refer to the BCH *-dec-implem* parameter.

References

Codec Uncoded

Uncoded Encoder parameters

There is no encoder when running an uncoded simulation.

Uncoded Decoder parameters

`--dec-type, -D`

Type text

Allowed values NONE CHASE ML

Default NONE

Examples `--dec-type CHASE`

Select the decoder algorithm.

Description of the allowed values:

Value	Description
NONE	Select the NONE decoder.
CHASE	See the common <code>--dec-type, -D</code> parameter.
ML	See the common <code>--dec-type, -D</code> parameter.

`--dec-implem`

Type text

Allowed values HARD_DECISION

default HARD_DECISION

Examples `--dec-implem HARD_DECISION`

Select the implementation of the decoder algorithm.

Description of the allowed values:

Value	Description
HARD_DECISION	Take the hard decision on the input LLRS.

3.2.5 Interleaver parameters

The interleaving process is frequent in coding schemes. It can be found directly in the code definition (for instance in Turbo or Turbo Product codes) or in larger schemes like for the turbo demodulation in the receiver (see the iterative BER/BER chain in [Fig. 3.5](#)).

--itl-type

Type text

Allowed values CCSDS COL_ROW DVB-RCS1 DVB-RCS2 GOLDEN LTE NO RANDOM
 RAND_COL ROW_COL USER

Default RANDOM

Examples --itl-type RANDOM

Select the interleaver type.

Description of the allowed values:

Value	Description
NO	Disable the interleaving process: the output is the input (Fig. 3.8).
COL_ROW	Fill the interleaver by column, read it by row (can be customized with the <i>-itl-read-order</i> parameter) (Fig. 3.9).
ROW_COL	Fill the interleaver by row, read it by column (can be customized with the <i>-itl-read-order</i> parameter) (Fig. 3.10).
RANDOM	Generate a random sequence for the entire frame (based on the MT 19937 PRNG [MN98]) (Fig. 3.11).
RAND_COL	Generate multiple random sequences decomposed in independent columns (based on the MT 19937 PRNG [MN98]) (Fig. 3.12).
GOLDEN	Select the interleaver described in [CLGH99].
CCSDS	Select the interleaver defined in the CCSDS standard.
LTE	Select the interleaver defined in the LTE standard.
DVB-RCS1	Select the interleaver defined in the DVB-RCS1 standard.
DVB-RCS2	Select the interleaver defined in the DVB-RCS2 standard.
USER	Select the interleaver sequence (LUT (Look Up Table)) from an external file (to use with the <i>-itl-path</i> parameter) (Fig. 3.13).

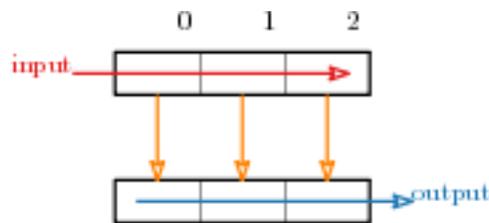


Fig. 3.8: Interleaver NO.

--itl-cols

Type integer

Default 4

Examples --itl-cols 1

Specify the number of columns used for the RAND_COL, ROW_COL or COL_ROW interleavers.

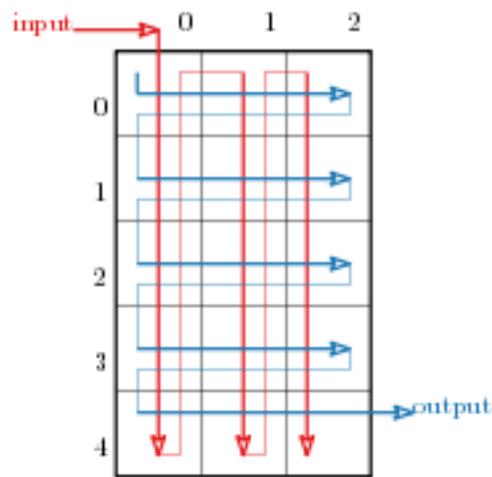


Fig. 3.9: Interleaver COL_ROW.

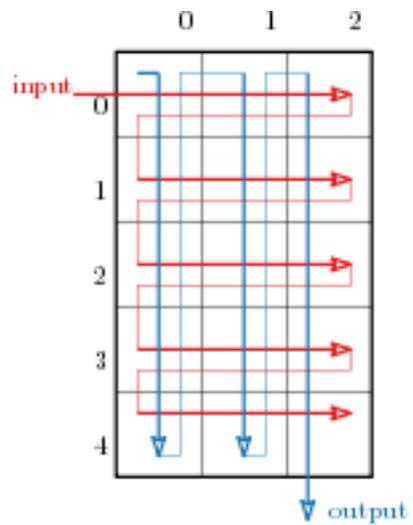


Fig. 3.10: Interleaver ROW_COL.

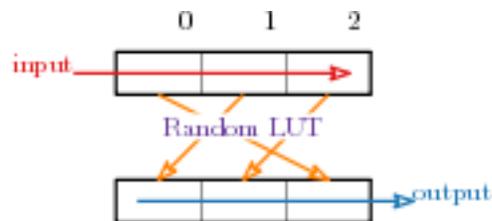


Fig. 3.11: Interleaver RANDOM.

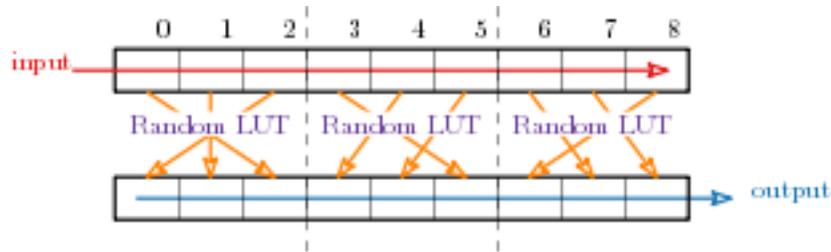


Fig. 3.12: Interleaver RAND_COL.

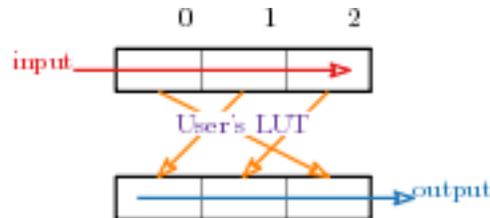


Fig. 3.13: Interleaver USER.

--itl-path**Type** file**Rights** read only**Examples** --itl-path conf/itl/GSM-LDPC_4224.itl

Set the file path to the interleaver LUT (to use with the USER interleaver).

An ASCII file is expected:

```
# the number of LUTs contained in the file (only one LUT here)
1

# the frame size 'N'
16

# the LUT definition (here the frame is reversed, 0 becomes 15, 1 becomes 14, etc.)
15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
```

If there is more than one interleaved sequence then for each new frame a new LUT is used in the natural order given by the file. Here is an example with two LUTs (Look Up Tables):

```
# the number of LUTs contained in this file
2

# the frame size 'N'
16

# first and second LUTs definition
15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
7 6 5 4 3 2 1 0 15 14 13 12 11 10 9 8
```

Note: When the number of simulated frames exceeds the number of LUT contained in the files, the LUTs from the

beginning of the file are reused and this is repeated until the end of the simulation.

`--itl-read-order`

Type text

Allowed values BOTTOM_LEFT BOTTOM_RIGHT TOP_LEFT TOP_RIGHT

Examples `--itl-read-order BOTTOM_LEFT`

Change the read order of the COL_ROW and ROW_COL interleavers.

The read starts from the given corner of the array to the diagonally opposite one. The read is made row by row for the COL_ROW interleaver and column by column for the ROW_COL one.

Description of the allowed values (see also the figures just bellow):

Value	Description
TOP_LEFT	Read is down from the top left corner to the bottom right corner.
TOP_RIGHT	Read is down from the top right corner to the bottom left corner.
BOTTOM_LEFT	Read is down from the bottom left corner to the top right corner.
BOTTOM_RIGHT	Read is down from the bottom right corner to the top left corner.

Fig. 3.14 depicts the read order options on the COL_ROW interleaver.

Fig. 3.15 depicts the read order options on the ROW_COL interleaver.

`--itl-uni`

Enable to generate a new LUT *for each new frame* (i.e. uniform interleaver).

By default, if this parameter is not used, the random interleavers generate the LUT only once for the whole simulation.

Note: This parameter has no effect if the selected interleaver is not randomly generated.

References

3.2.6 Modem parameters

AFF3CT comes with a set of predefined MODEMS (modulators/demodulators). A MODEM (modulator/demodulator) transforms a sequence of bits into a suitable form for the transmission on a physical medium. In the AFF3CT “philosophy”, the MODEM is a **module** containing three **tasks**: *modulate*, *filter* and *demodulate* (read the *Philosophy* section for more information about modules and tasks).

`--mdm-type`

Type text

Allowed values BPSK CPM OOK PAM PSK QAM SCMA USER

Default BPSK

Examples `--mdm-type SCMA`

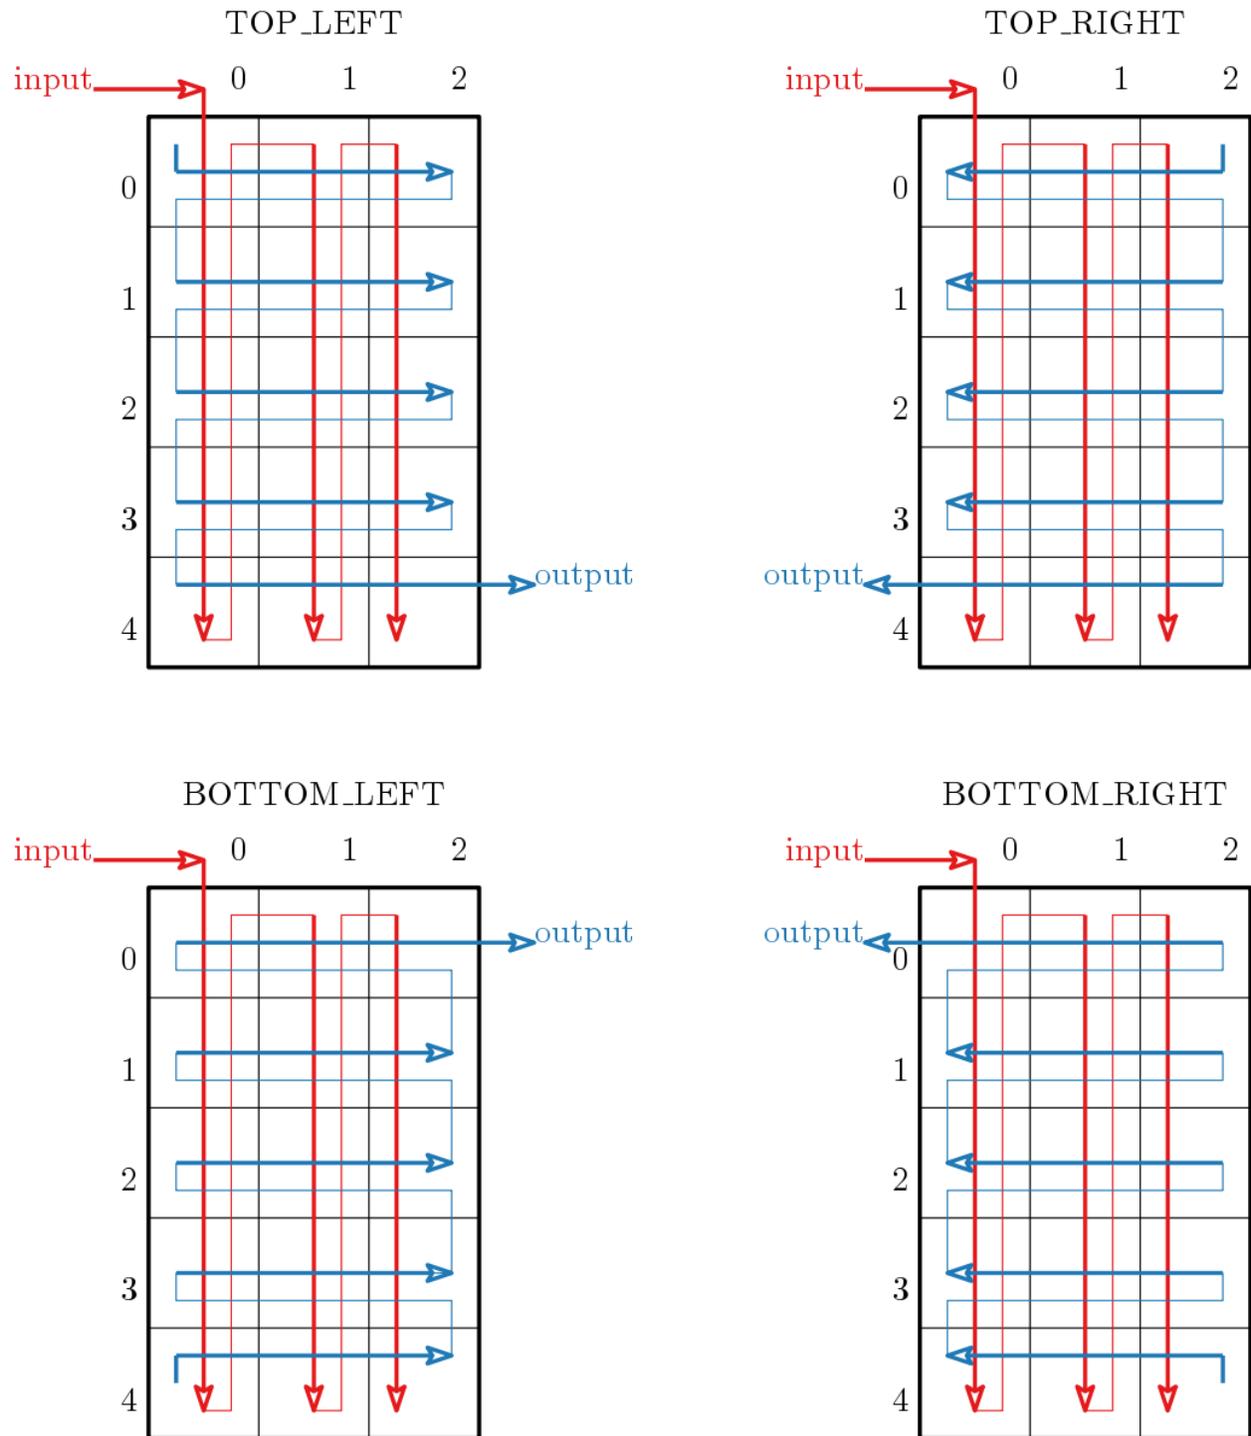


Fig. 3.14: Interleaver COL_ROW read orders.

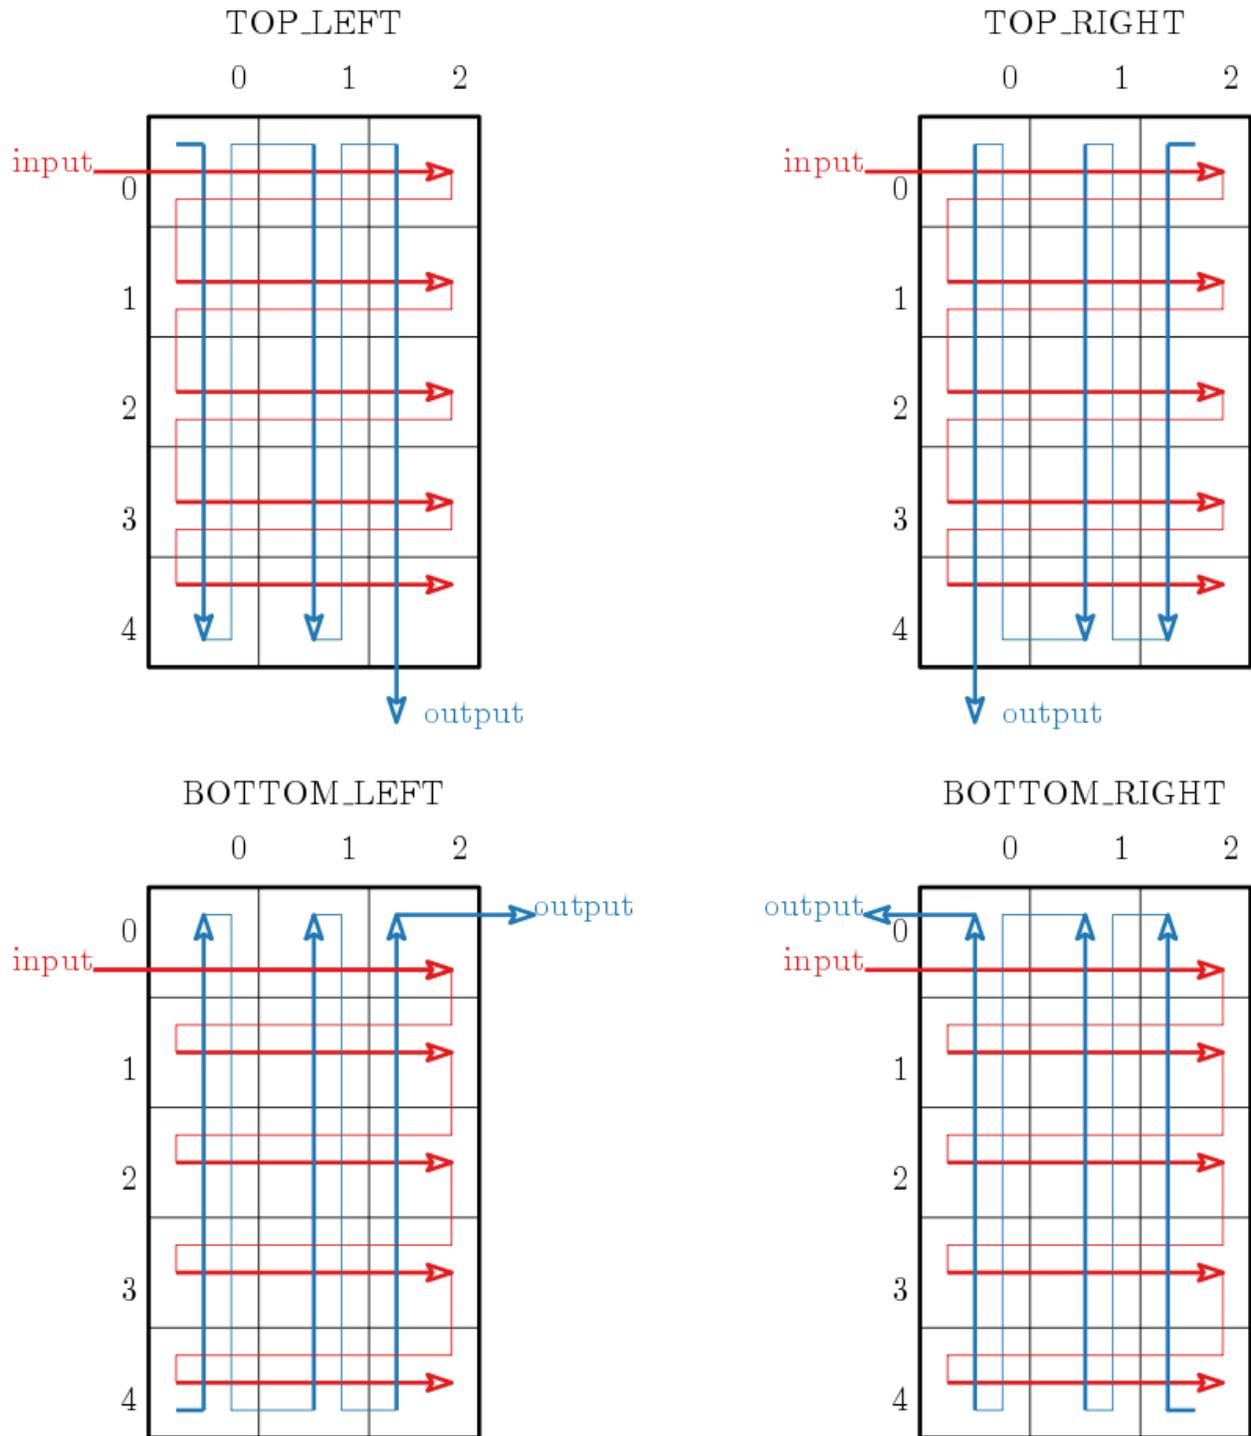


Fig. 3.15: Interleaver ROW_COL read orders.

Select the modulation type.

Description of the allowed values:

Value	Description
BPSK	Select a BPSK (Bit Phase-Shift Keying) modulation.
CPM	Select a Continuous Phase Modulation (CPM (Continuous Phase Modulation)) [AS81][ARS81].
OOK	Select an On-Off Keying (OOK (On-Off Keying)) modulation.
PAM	Select a Pulse-Amplitude Modulation (PAM (Pulse-Amplitude Modulation)).
PSK	Select a Phase-Shift Keying (PSK (Phase-Shift Keying)) modulation.
QAM	Select a rectangular Quadrature-Amplitude Modulation (QAM (Quadrature Amplitude Modulation)).
SCMA	Select a Sparse Code Multiple Access (SCMA) modulation [NB13].
USER	Select a user defined constellation (to use with the <code>-mdm-const-path</code> parameter).

`--mdm-implement`

Type text

Allowed values FAST STD

Default STD

Examples `--mdm-implement FAST`

Select the MODEM implementation.

Description of the allowed values:

Value	Description
STD	Select a standard implementation working for any MODEM.
FAST	Select a fast implementation, only available for the BPSK MODEM at this time.

`--mdm-bps`

Type integer

Default 1

Examples `--mdm-bps 1`

Set the number of bits used to generate a symbol (BPS (Bit Per Symbol)).

This parameter has no effect on the BPSK and OOK MODEMS where the BPS is forced to 1. This is the same for the SCMA MODEM where the BPS is forced to 3.

Note: For the QAM MODEM, only even BPS values are supported.

`--mdm-const-path`

Type file

Rights read/write

Examples `--mdm-const-path conf/mod/16QAM_ANTI_GRAY.mod`

Give the path to the ordered modulation symbols (constellation), to use with the `USER MODEM`.

An ASCII file is expected, for instance here is the definition of a 16-QAM with an anti-Gray mapping (the lines starting with a `#` are ignored):

```
# 0000
 3  3
# 0001
-3 -3
# 0010
-1  3
# 0011
 1 -3
# 0100
-3  1
# 0101
 3 -1
# 0110
 1  1
# 0111
-1 -1
# 1000
 1 -1
# 1001
-1  1
# 1010
-3 -1
# 1011
 3  1
# 1100
-1 -3
# 1101
 1  3
# 1110
 3 -3
# 1111
-3  3
```

Note: The number of bits per symbol is automatically computed from the number of given symbols. The latter has to be a power of 2.

--mdm-max

Type text

Allowed values MAXS MAXSS MAXL MAX

Examples --mdm-max MAX

Select the approximation of the `max*` operator used in the PAM, QAM, PSK, CPM and user demodulators.

Description of the allowed values:

Value	Description
MAXS	$\max^*(a, b) = \max(a, b) + \log(1 + \exp(- a - b))$.
MAXSS	$\max^*(a, b) \approx \max(a, b) + d$ with $d = \begin{cases} 0 & \text{if } d \geq 37 \\ \exp(- a - b) & \text{if } 9 \leq d < 37. \\ \log(1 + \exp(- a - b)) & \text{else} \end{cases}$.
MAXL	$\max^*(a, b) \approx \max(a, b) + \max(0, 0.301 - (0.5 a - b))$.
MAX	$\max^*(a, b) \approx \max(a, b)$.

MAXS for *Max Star* is the exact \max^* operator. MAXSS for *Max Star Safe* allows to avoid numeric instabilities due the exponential operation and the limited precision of the floating-point representation. MAXL for *Max Linear* is a linear approximation of the \max^* function. MAX for *Max* is the simplest \max^* approximation with only a max function.

`--mdm-no-sig2`

Turn off the division by σ^2 in the demodulator where σ is the Gaussian noise variance.

`--mdm-cpm-k`

Type integer

Default 1

Examples `--mdm-cpm-k 1`

Set the CPM *index numerator*.

`--mdm-cpm-p`

Type integer

Default 2

Examples `--mdm-cpm-p 1`

Set the CPM *index denominator*.

`--mdm-cpm-L`

Type integer

Default 2

Examples `--mdm-cpm-L 1`

Set the CPM *pulse width* (also called *memory depth*).

`--mdm-cpm-upf`

Type integer

Default 1

Examples `--mdm-cpm-upf 1`

Select the symbol upsampling factor in the CPM.

--mdm-cpm-map**Type** text**Allowed values** GRAY NATURAL**Default** NATURAL**Examples** --mdm-cpm-map GRAYSelect the CPM *symbols mapping layout*.

Description of the allowed values:

Value	Description
GRAY	Gray code switching only one bit at a time from a symbol to the following.
NATURAL	The natural binary code incrementing the value from a symbol to the next one.

--mdm-cpm-ws**Type** text**Allowed values** GMSK RCOS REC**Default** GMSK**Examples** --mdm-cpm-ws GMSKSelect the CPM *wave shape*.

Description of the allowed values:

Value	Description
GMSK	Gaussian Minimum Shift Keying.
RCOS	Raised COSinus.
REC	RECTangular.

--mdm-cpm-std**Type** text**Allowed values** GSM**Examples** --mdm-cpm-std GSM

Set the CPM parameters according to a standard.

Description of the allowed values:

Value	Parameter	Value	Description
GSM	<i>-mdm-bps</i>	1	Bit per symbol.
	<i>-mdm-cpm-upf</i>	5	Upsampling factor.
	<i>-mdm-cpm-k</i>	1	Modulation index numerator.
	<i>-mdm-cpm-p</i>	2	Modulation index denominator.
	<i>-mdm-cpm-L</i>	3	Memory depth.
	<i>-mdm-cpm-map</i>	NATURAL	Mapping layout.
	<i>-mdm-cpm-ws</i>	GMSK	Wave shape.

Note: When this parameter is used, if you set any of the other MODEM parameters, it will override the configuration from the standard.

`--mdm-ite`

Type integer

Default 1

Examples `--mdm-ite 5`

Set the number of iterations in the SCMA demodulator.

`--mdm-psi`

Type text

Allowed values PSI0 PSI1 PSI2 PSI3

Examples `--mdm-psi PSI0`

Select the ψ function used in the SCMA demodulator.

Description of the allowed values:

Value	Description
PSI0	$\psi_0 = \exp\left(-\frac{ d }{n_0}\right)$
PSI1	$\psi_1 \approx \psi_0 \approx \frac{1}{ d +n_0}$
PSI2	$\psi_2 \approx \psi_0 \approx \frac{1}{8 \cdot d ^2 + n_0}$
PSI3	$\psi_3 \approx \psi_0 \approx \frac{1}{4 \cdot d ^2 + n_0}$

Where $n_0 = \begin{cases} 1 & \text{if } \sigma^2 \text{ is disabled} \\ 4\sigma^2 & \text{else} \end{cases}$.

See the `-mdm-no-sig2` parameter to disable the division by σ^2 .

--mdm-codebook

Type file

Rights read/write

Examples --mdm-codebook conf/mod/SCMA/CS1.cb

Give the path to the codebook, to use with the SCMA MODEM.

Note: Only 3 BPS codebook symbols are supported at this time.

Codebook format

A codebook is designed for a **number_of_users** V , a **number_of_orthogonal_resources** K and **codebook_size** M . The codebook file then looks as a table of $V \times K$ rows and $2.M$ columns (real and imaginary parts):

V	K	M
Re(User 1, Resource 1, Code 1)	Im(User 1, Resource 1, Code 1)	...
↪Resource 1, Code M	Im(User 1, Resource 1, Code M)	...
...
↪
Re(User 1, Resource K, Code 1)	Im(User 1, Resource K, Code 1)	...
↪Resource K, Code M	Im(User 1, Resource K, Code M)	...
Re(User 2, Resource 1, Code 1)	Im(User 2, Resource 1, Code 1)	...
↪Resource 1, Code M	Im(User 2, Resource 1, Code M)	...
...
↪
Re(User 2, Resource K, Code 1)	Im(User 2, Resource K, Code 1)	...
↪Resource K, Code M	Im(User 2, Resource K, Code M)	...
...
↪
Re(User V, Resource 1, Code 1)	Im(User V, Resource 1, Code 1)	...
↪Resource 1, Code M	Im(User V, Resource 1, Code M)	...
...
↪
Re(User V, Resource K, Code 1)	Im(User V, Resource K, Code 1)	...
↪Resource K, Code M	Im(User V, Resource K, Code M)	...

Descriptions of the codebooks of the configuration files

Codebooks are normalized, so the average power of signal will be equal to 1.

Codebook Set	Description
CS1	From [Pro]
CS2	LDS based on QPSK constellation
CS3	Based on [CWC15] and own optimization for AWGN channel
CS4	From [ZXX+16]
CS5	From [SWC17]
CS6	From [KS17]
CS7	From [KS17]
CS8	From [WZC15]

The simulation results for **CS1-CS7** (AWGN and Rayleigh fading channels) can be found in [KS17]. The simulation results for **CS8** can be found in [KS16] (defined as **CS2** in the paper).

--mdm-rop-est

Type integer

Default 0

Examples `--mdm-rop-est 256`

Set the number of known bits for the ROP estimation in the OOK demodulator on an optical channel.

The estimation is done from a known set of bits that is the output of the modulation. If left to 0, the demodulation is done with the exact applied ROP in the channel.

References

3.2.7 Channel parameters

The channel represents the physical support such as optical fiber, space, water, air, etc. It is during the passage in the channel that the frames are altered/noised and errors can occur. The channel coding theory has been invented to correct errors induced by the channel (or at least reduce the number of errors to an acceptable rate).

--chn-type

Type text

Allowed values NO BEC BSC AWGN RAYLEIGH RAYLEIGH_USER OPTICAL USER
USER_ADD USER_BEC USER_BSC

Default AWGN

Examples `--chn-type AWGN`

Select the channel type.

Description of the allowed values:

Value	Description
NO	Disable the channel noise: $Y = X.$
BEC	Select the Binary Erasure Channel (BEC (Binary Erasure Channel)): $Y_i = \begin{cases} \text{erased} & \text{if } e = 1 \\ X_i & \text{else} \end{cases}, \text{ with } P(e = 1) = p_e \text{ and } P(e = 0) = 1 - p_e.$
BSC	Select the Binary Symmetric Channel (BSC (Binary Symmetric Channel)): $Y_i = \begin{cases} X_i & \text{if } e = 1 \\ \neg X_i & \text{else} \end{cases}, \text{ with } P(e = 1) = p_e \text{ and } P(e = 0) = 1 - p_e.$

Where:

- σ is the *Gaussian noise variance*, p_e is the *event probability* and ROP is the *Received optical power* of the simulated noise points. They are given by the user through the `-sim-noise-range`, `-R` argument.
- X is the original modulated frame and Y the noisy output.
- $\mathcal{N}(\mu, \sigma^2)$ is the **Normal or Gaussian distribution**.
- $\mathcal{U}(a, b)$ is the **Uniform distribution**.

For the OPTICAL channel, the CDF (Cumulative Distribution Function) are computed from the given PDF with the `-sim-pdf-path` argument. This file describes the latter for the different ROP. There must be a PDF for a bit transmitted at 0 and another for a bit transmitted at 1.

Note: The NO, AWGN and RAYLEIGH channels handle complex modulations.

Warning: The BEC, BSC and OPTICAL channels work only with the OOK modulation (see the `-mdm-type` parameter).

--chn-implement

Type text

Allowed values STD FAST GSL MKL

Default STD

Examples `--chn-implement FAST`

Select the implementation of the algorithm to generate the noise.

Description of the allowed values:

Value	Description
STD	Select the standard implementation based on the C++ standard library.
FAST	Select the fast implementation (handwritten and optimized for SIMD architectures).
GSL	Select an implementation based of the GSL (GNU Scientific Library).
MKL	Select an implementation based of the MKL (Intel Math Kernel Library) (only available for x86 architectures).

Note: All the proposed implementations are based on the MT 19937 PRNG algorithm [MN98]. The Gaussian distribution $\mathcal{N}(\mu, \sigma^2)$ is implemented with the Box-Muller method [BM+58] except when using the GSL where the Ziggurat method [MT00] is used instead.

Attention: To enable the GSL or the MKL implementations, you need to have those libraries installed on your system and to turn on specific *CMake Options*.

The Table 3.5, Table 3.6 and Table 3.7 present the throughputs of the different channel implementations depending on the frame size. The testbed for the experiments is an *Intel(R) Xeon(R) CPU E3-1270 v5 @ 3.60GHz* 8 threads CPU (Central Process Unit).

Table 3.5: Comparison of the AWGN channel implementations (throughputs are in Mb/s).

Frame size	STD	FAST	MKL	GSL
16	31,80	99,12	29,80	41,39
32	30,05	134,94	53,72	46,76
64	30,78	165,92	93,80	52,79
128	31,24	188,06	148,31	54,77
256	31,41	199,14	204,53	55,38
512	31,52	199,43	267,74	55,49
1024	31,79	199,71	331,71	56,15
2048	31,61	200,16	342,06	56,32
4096	31,88	198,88	343,40	57,42
8192	30,43	195,78	342,59	56,92

Table 3.6: Comparison of the BEC/BSC channel implementations (throughputs are in Mb/s).

Frame size	STD	FAST	MKL	GSL
16	36,18	114,87	104,1	58,92
32	40,28	170,64	184,99	69,14
64	42,84	223,78	319,65	77,26
128	43,28	252,41	474,18	87,78
256	43,42	272,82	624,92	93,71
512	43,51	273,22	738,72	95,36
1024	43,64	275,41	865,25	97,84
2048	43,63	272,78	996,88	97,25
4096	42,78	274,71	1109,13	97,65
8192	43,67	272,71	1116,41	98,47

Table 3.7: Comparison of the optical channel implementations (throughputs are in Mb/s).

Frame size	STD	FAST	MKL	GSL
16	6,69	7,56	6,71	6,53
32	9,89	10,98	10,28	9,56
64	12,67	14,30	14,05	12,15
128	14,40	16,33	16,33	13,88
256	15,82	17,74	18,22	15,07
512	16,52	18,46	18,29	15,79
1024	17,18	19,14	19,31	16,19
2048	16,96	18,76	20,30	16,42
4096	17,19	18,65	20,29	16,47
8192	17,26	18,98	20,58	16,63

Note: The reported values are the *average* throughputs given by the simulator integrated statistics tool (see the `-sim-stats` parameter).

--chn-blk-fad**Type** text**Allowed values** NO FRAME ONETAP**Default** 1**Examples** --chn-gain-occur 10

Set the block fading policy for the Rayleigh channel.

Note: At this time the FRAME and ONETAP block fading are not implemented.

--chn-gain-occur**Type** integer**Default** 1**Examples** --chn-gain-occur 10

Give the number of times a gain is used on consecutive symbols. It is used in the RAYLEIGH_USER channel while applying gains read from the given file.

--chn-path**Type** file**Rights** read**Examples** --chn-path example/path/to/the/right/file

Give the path to a file containing the noise.

The expected type of noise vary depending of the channel type (see the *-chn-type* parameter for more details):

- USER: the file must contain frame with the noise applied on it,
- USER_ADD: the file must contain only the noise Z ,
- RAYLEIGH_USER: the file must contain the gain values H .

The expected file format is either ASCII or binary (the format is automatically detected). Here is the file structure expected in ASCII:

```
# 'F' has to be replaced by the number of contained frames.
F

# 'N' has to be replaced by the frame size.
N

# a sequence of 'F * N' floating-point values (separated by spaces)
Y_0 Y_1 Y_2 Y_3 Y_4 [...] Y_{F*N-1}
```

In binary mode, F and N have to be 32-bit unsigned integers. The next $F \times N$ floating-point values can be either in 32-bit or in 64-bit.

References

3.2.8 Quantizer parameters

The quantizer is a module that ensures the real numbers transformation from a floating-point representation to a fixed-point representation. This module is enabled only if the receiver part of the communication chain works on a fixed-point representation (cf. the `-sim-prec`, `-p` parameter).

Warning: Some decoders are not *fixed-point ready*, please refer to the decoders documentation for more details.

`--qnt-type`

Type text

Allowed values CUSTOM POW2

Default POW2

Examples `--qnt-type CUSTOM`

Select the quantizer type.

Description of the allowed values (Y_i stands for a floating-point representation and Q_i for the fixed-point representation of a real number):

Value	Description
CUSTOM	$Q_i = \begin{cases} +v_{sat} & \text{when } v_i > +v_{sat} \\ -v_{sat} & \text{when } v_i < -v_{sat}, \text{ with } v_i = \lfloor \frac{Y_i}{\Delta} \rfloor \text{ and } v_{sat} = 2^{p_b-1} - 1 \text{ and } \Delta = \frac{ p_r }{v_{sat}} \\ v_i & \text{else} \end{cases}$
POW2	$Q_i = \begin{cases} +v_{sat} & \text{when } v_i > +v_{sat} \\ -v_{sat} & \text{when } v_i < -v_{sat}, \text{ with } v_i = \lfloor Y_i * F \rfloor \text{ and } v_{sat} = 2^{p_b-1} - 1 \text{ and } F = 2^{p_d} \\ v_i & \text{else} \end{cases}$

Where p_r , p_b and p_d are respectively given through the `-qnt-range`, `-qnt-bits` and `-qnt-dec` parameters.

`--qnt-implement`

Type text

Allowed values STD FAST

Default STD

Examples `--qnt-implement FAST`

Select the implementation of the quantizer.

Description of the allowed values:

Value	Description
STD	Select a standard implementation.
FAST	Select a fast implementation, only available for the POW2 quantizer.

--qnt-range**Type** real number**Examples** `--qnt-range 1.0`

Select the min/max bounds for the CUSTOM quantizer.

--qnt-bits**Type** integer**Default** 8 else see [Table 3.8](#)**Examples** `--qnt-bits 1`

Set the number of bits used in the fixed-point representation.

Note: If the amplitude of the current number exceeds the maximum amplitude that can be represented with the current quantization, then a saturation is applied (c.f. the `-qnt-type` parameter).

Table 3.8: Default values of the total number of bits for the different codes.

Code	Value
LDPC	6
POLAR	6
REP	6
RSC	6
RSC_DB	6
TPC	6 on 8-bit and 8 on 16-bit
TURBO	6
TURBO_DB	6

--qnt-dec**Type** integer**Default** 3 else see [Table 3.9](#)**Examples** `--qnt-dec 1`

Set the position of the decimal point in the quantified representation.

Table 3.9: Default values of the decimal point position for the different codes.

Code	Value
LDPC	2
POLAR	1
REP	2
RSC	1 on 8-bit and 3 on 16-bit
RSC_DB	1 on 8-bit and 3 on 16-bit
TPC	2 on 8-bit and 3 on 16-bit
TURBO	2 on 8-bit and 3 on 16-bit
TURBO_DB	2 on 8-bit and 3 on 16-bit

3.2.9 Monitor parameters

The monitor is the last module in the chain: **it compares the decoded information bits with the initially generated ones from the source**. Furthermore, it can also compute **the mutual information** (MI (Mutual Information)) from the demodulator output.

`--mnt-max-fe, -e`

Type integer

Default 100

Examples `--mnt-max-fe 25`

Set the maximum number of frame errors to simulated for each noise point.

`--mnt-err-hist`

Type integer

Examples `--mnt-err-hist 0`

Enable the construction of the errors per frame histogram. Set also the maximum number of bit errors per frame included in the histogram (0 means no limit).

The histogram is saved in CSV (Comma-Separated Values) format:

```
"Number of error bits per wrong frame"; "Histogram (noise: 5.000000dB, on 10004_
↪frames) "
0; 0
1; 7255
2; 2199
3; 454
4; 84
5; 11
6; 12
```

`--mnt-err-hist-path`

Type file

Rights write only

Default ./hist

Examples `--mnt-err-hist-path my/histogram/root/path/name`

Path to the output histogram. When the files are dumped, the current noise value is added to this name with the `.txt` extension.

An output filename example is `hist_2.000000.txt` for a noise value of 2 dB. For [Gnuplot](#) users you can then simply display the histogram with the following command:

```
gnuplot -e "set key autotitle columnhead; plot 'hist_2.000000.txt' with lines; pause -
↳1"
```

`--mnt-mutinfo`

Enable the computation of the mutual information (MI).

Note: Only available on `BFER` simulation types (see the `-sim-type` parameter for more details).

`--mnt-red-lazy`

Enable the lazy synchronization between the various monitor threads.

Using this parameter can significantly reduce the simulation time, especially for short frame sizes when the monitor synchronizations happen very often.

Note: This parameter is not available if the code has been compiled with MPI (Message Passing Interface).

Note: By default, if the `-mnt-red-lazy-freq` parameter is not specified, the interval/frequency is set to the same value than the `-ter-freq` parameter.

Warning: Be careful, this parameter is known to alter the behavior of the `-sim-max-fra`, `-n` parameter.

`--mnt-red-lazy-freq`

Type integer

Default 1000

Examples `--mnt-red-lazy-freq 200`

Set the time interval (in milliseconds) between the synchronizations of the monitor threads.

Note: This parameter automatically enables the `-mnt-red-lazy` parameter.

Note: This parameter is not available if the code has been compiled with MPI.

`--mnt-mpi-comm-freq`

Type integer

Default 1000

Examples `--mnt-mpi-comm-freq 1`

Set the time interval (in milliseconds) between the MPI communications. Increase this interval will reduce the MPI communications overhead.

Note: Available only when compiling with the MPI support *CMake Options*.

Note: When this parameter is specified, the `-ter-freq` parameter is automatically set to the same value except if the `-ter-freq` is explicitly defined.

3.2.10 Terminal parameters

The terminal is an observer module that reads and display the monitor informations in real time. The terminal displays two types of results: **intermediate results** and **final results**. The intermediate results are printed on the **error output** during the simulation of a noise point and refreshed at a defined frequency (see the `-ter-freq` parameter). On the other hand, the final results are printed on the **standard output** once the simulation of the noise point is over.

`--ter-type`

Type text

Allowed values STD

Default STD

Examples `--ter-type STD`

Select the terminal type (the format to display the results).

Description of the allowed values:

Value	Description
STD	Select the standard format.

Note: For more details on the standard output format see the *Output* section).

--ter-freq**Type** integer**Default** 500**Examples** `--ter-freq 1`

Set the display frequency (refresh time) of the intermediate results in milliseconds. Setting 0 disables the display of the intermediate results.

Note: When MPI is enabled, this value is by default set to the same value than the `-mnt-mpi-comm-freq` parameter.

--ter-no

Disable completely the terminal report.

3.2.11 Other parameters

--help, -h

Print the help with all the required (denoted as {R}) and optional arguments. The latter change depending on the selected simulation type and code.

```
aff3ct -h
```

```
Usage: ./bin/aff3ct -C <text> [optional args...]
```

```
Simulation parameter(s):
```

```
{R} --sim-cde-type, -C <text:including set={BCH|LDPC|POLAR|RA|REP|RS|RSC|RSC_  
→DB|TPC|TURBO|TURBO_DB|UNCODED}>
```

```
    Select the channel code family to simulate.
```

```
--sim-prec, -p      <integer:including set={8|16|32|64}>
```

```
    Specify the representation of the real numbers in the receiver part of the  
    chain.
```

```
--sim-type          <text:including set={BFER|BFERI|EXIT}>
```

```
    Select the type of simulation (or communication chain skeleton).
```

```
Other parameter(s):
```

```
--Help, -H
```

```
    Print the help like with the '--help, -h' parameter plus advanced  
    arguments (denoted as '{A}').
```

```
--help, -h
```

```
    Print the help with all the required (denoted as '{R}') and optional  
    arguments. The latter change depending on the selected simulation type and  
    code.
```

```
--no-colors
```

```
    Disable the colors in the shell.
```

```
--version, -v
```

```
    Print informations about the version of the source code and compilation  
    options.
```

--Help, -H

Print the help like with the `--help, -h` parameter plus advanced arguments (denoted as {A}).

```
aff3ct -H
```

```
Usage: ./bin/aff3ct -C <text> [optional args...]
```

Simulation parameter(s):

```
{R} --sim-cde-type, -C <text:including set={BCH|LDPC|POLAR|RA|REP|RS|RSC|RSC_
↳DB|TPC|TURBO|TURBO_DB|UNCODED}>
    Select the channel code family to simulate.
--sim-prec, -p <integer:including set={8|16|32|64}>
    Specify the representation of the real numbers in the receiver part of the
    chain.
--sim-type <text:including set={BFER|BFERI|EXIT}>
    Select the type of simulation (or communication chain skeleton).
```

Other parameter(s):

```
--Help, -H
    Print the help like with the '--help, -h' parameter plus advanced
    arguments (denoted as '{A}').
{A} --except-a2l
    Enhance the backtrace when displaying exception. This change the program
    addresses into filenames and lines. It may take some seconds to do this
    work.
{A} --except-no-bt
    Disable the backtrace display when running an exception.
{A} --full-legend
    Display the legend with all modules details when launching the simulation.
--help, -h
    Print the help with all the required (denoted as '{R}') and optional
    arguments. The latter change depending on the selected simulation type and
    code.
{A} --keys, -k
    Display the parameter keys in the help.
--no-colors
    Disable the colors in the shell.
{A} --no-legend
    Disable the legend display (remove all the lines beginning by the '#'
    character).
--version, -v
    Print informations about the version of the source code and compilation
    options.
```

--version, -v

Print informations about the version of the source code and compilation options.

```
aff3ct -v
```

```
aff3ct (Linux 64-bit, g++-5.4, AVX2) v2.1.1-48-g1c72c3d
Compilation options:
 * Precision: 8/16/32/64-bit
 * Polar bit packing: on
```

(continues on next page)

(continued from previous page)

```
* Terminal colors: on
* Backtrace: on
* External strings: on
* MPI: off
* GSL: off
* MKL: off
* SystemC: off
```

Copyright (c) 2016-2018 - MIT license.

This is free software; see the source for copying conditions. There is NO warranty; not even for MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE.

--keys, -k ADVANCED

Display the parameter keys in the help.

```
aff3ct -h -k
```

```
Usage: ./bin/aff3ct -C <text> [optional args...]
```

Simulation parameter(s):

```
{R} --sim-cde-type, -C <text:including set={BCH|LDPC|POLAR|RA|REP|RS|RSC|RSC_
↳DB|TPC|TURBO|TURBO_DB|UNCODED}>
```

```
[factory::Launcher::parameters::p+cde-type,C]
```

Select the channel code family to simulate.

```
--sim-prec, -p <integer:including set={8|16|32|64}>
```

```
[factory::Launcher::parameters::p+prec,p]
```

Specify the representation of the real numbers in the receiver part of the chain.

```
--sim-type <text:including set={BFER|BFERI|EXIT}>
```

```
[factory::Launcher::parameters::p+type]
```

Select the type of simulation (or communication chain skeleton).

Other parameter(s):

```
--Help, -H
```

```
[factory::Launcher::parameters::Help,H]
```

Print the help like with the '--help, -h' parameter plus advanced arguments (denoted as '{A}').

```
--help, -h
```

```
[factory::Launcher::parameters::help,h]
```

Print the help with all the required (denoted as '{R}') and optional arguments. The latter change depending on the selected simulation type and code.

```
--no-colors
```

```
[factory::Launcher::parameters::no-colors]
```

Disable the colors in the shell.

```
--version, -v
```

```
[factory::Launcher::parameters::version,v]
```

Print informations about the version of the source code and compilation options.

`--except-a21` **ADVANCED**

Enhance the backtrace when displaying exception. This change the program addresses into filenames and lines. It may take some seconds to do this work.

Note: This option works only on Unix based OS (Operating System) and if AFF3CT has been *compiled* with debug symbols (`-g` compile flag) and **without** `NDEBUG` macro (`-DNDEBUG` flag).

`--except-no-bt` **ADVANCED**

Disable the backtrace display when running an exception.

`--no-legend` **ADVANCED**

Disable the legend display (remove all the lines beginning by the # character).

Tip: Use this option when you want to complete an already existing simulation result file with new noise points. Pay attention to use `>>` instead of `>` to redirect the standard output in order to add results at the end of the file and not overwriting it.

`--full-legend` **ADVANCED**

Display the legend with all modules details when launching the simulation.

This additional information can help to understand a problem in the simulation. Data can of course be redundant from one module to another.


`--no-colors`

Disable the colors in the shell.

3.3 PyBER

PyBER is our Python GUI to display the AFF3CT outputs.

It can be downloaded here: <https://github.com/aff3ct/PyBER>.

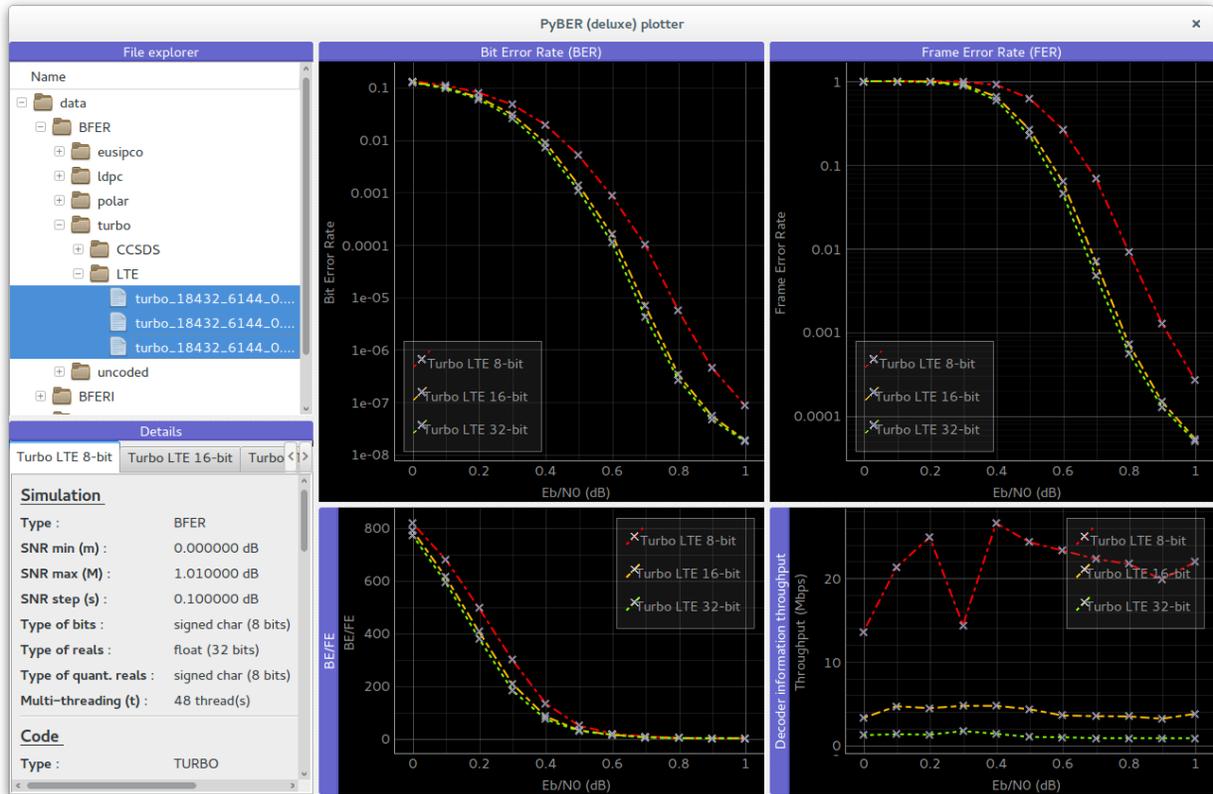

3.3.1 Install Python3

Download and install Anaconda3: <https://www.anaconda.com/download/> (tested on Anaconda3-4.2.0-Windows-x86_64).

Next next next... Install! Pay attention to add Python to the PATH when installing it.

3.3.2 Run PyBER

From your terminal, go to the folder where PyBER is located and run it:

```
python pyBER.py &
```

CHAPTER 4

Library API

Work in progress...

CHAPTER 5

Classes

Work in progress...

Contributing Guidelines

We're really glad you're reading this, because we need volunteer developers to expand this project.

Here are some important resources to communicate with us:

- The official website: <http://aff3ct.github.io>,
- Bugs? Report issues on GitHub: <https://github.com/aff3ct/aff3ct/issues>.

6.1 Submitting changes

Please send a [GitHub Pull Request](#) to AFF3CT with a clear list of what you've done (read more about [pull requests](#)). Please make your modifications on the `development` branch, any pull to the `master` branch will be refused (the `master` is dedicated to the releases).

Always write a clear log message for your commits. One-line messages are fine for small changes, but bigger changes should look like this:

```
git commit -m "A brief summary of the commit  
>  
> A paragraph describing what changed and its impact."
```

6.2 Regression Testing

We maintain a database of BER/FER reference simulations. Please give us some new references which solicit the code you added. We use those references in an [automated regression test script](#). To propose new references please use our [dedicated repository](#) and send us a pull request on it.

6.3 Coding conventions

Start reading our code and you'll get the hang of it. For the readability, we apply some coding conventions:

- we indent using tabulation (hard tabs),
- we ALWAYS put spaces after list items and method parameters (`[1, 2, 3]`, not `[1,2,3]`), around operators (`x += 1`, not `x+=1`), and around hash arrows,
- we use the *snake case* (`my_variable`, not `myVariable`), classes start with an upper case (*My_class*, not *my_class*) and variables/methods/functions start with a lower case,
- the number of characters is limited to 120 per line of code.

This is open source software. Consider the people who will read your code, and make it look nice for them. It's sort of like driving a car: Perhaps you love doing donuts when you're alone, but with passengers the goal is to make the ride as smooth as possible.

Bibliography

- [Ari09] E. Arikan. Channel polarization: a method for constructing capacity-achieving codes for symmetric binary-input memoryless channels. *IEEE Transactions on Information Theory (TIT)*, 55(7):3051–3073, July 2009. doi:10.1109/TIT.2009.2021379.
- [BGT93] C. Berrou, A. Glavieux, and P. Thitimajshima. Near Shannon limit error-correcting coding and decoding: turbo-codes. In *International Conference on Communications (ICC)*, volume 2, 1064–1070 vol.2. IEEE, May 1993. doi:10.1109/ICC.1993.397441.
- [BRC60] R.C. Bose and D.K. Ray-Chaudhuri. On a class of error correcting binary group codes. *Springer Information and Control*, 3(1):68 – 79, 1960. doi:10.1016/S0019-9958(60)90287-4.
- [DHJM98] D. Divsalar, H. Jin, and R. J. McEliece. Coding theorems for “turbo-like” codes. In *Allerton Conference on Communication, Control and Computing*, 201–210. September 1998. URL: <https://pdfs.semanticscholar.org/b5cc/c94d4f9ea6df991190f17359ddd7ac47f005.pdf>.
- [Gal63] R. G. Gallager. Low-density parity-check codes. 1963. URL: <http://web.mit.edu/gallager/www/pages/ldpc.pdf>.
- [MN95] D. J. C. MacKay and R. M. Neal. Good codes based on very sparse matrices. In *IMA International Conference on Cryptography and Coding (IMA-CCC)*, 100–111. UK, December 1995. Springer. doi:10.1007/3-540-60693-9_13.
- [RS60] I. Reed and G. Solomon. Polynomial codes over certain finite fields. *Journal of the Society for Industrial and Applied Mathematics*, 8(2):300–304, 1960. doi:10.1137/0108018.
- [RL09] W. Ryan and S. Lin. *Channel codes: classical and modern*. Cambridge University Press, September 2009. ISBN 978-0-511-64182-4. URL: <http://www.cambridge.org/9780521848688>.
- [MN98] M. Matsumoto and T. Nishimura. Mersenne twister: a 623-dimensionally equidistributed uniform pseudo-random number generator. *ACM Transactions on Modeling and Computer Simulation (TOMACS)*, 8(1):3–30, 1998. doi:10.1145/272991.272995.
- [LST12] B. Li, H. Shen, and D. Tse. An adaptive successive cancellation list decoder for polar codes with cyclic redundancy check. *IEEE Communications Letters (COMML)*, 16(12):2044–2047, December 2012. doi:10.1109/LCOMM.2012.111612.121898.
- [TLLeGal+16] T. Tonnellier, C. Leroux, B. Le Gal, B. Gadat, C. Jégo, and N. Van Wambeke. Lowering the error floor of turbo codes with CRC verification. *IEEE Wireless Communications Letters (WCL)*, 5(4):404–407, August 2016. doi:10.1109/LWC.2016.2571283.

- [Cha72] D. Chase. Class of algorithms for decoding block codes with channel measurement information. *IEEE Transactions on Information Theory (TIT)*, 18(1):170–182, January 1972. doi:10.1109/TIT.1972.1054746.
- [Ber15] E. R. Berlekamp. *Algebraic Coding Theory (Revised Edition)*. World Scientific, May 2015. First edition from 1968. doi:10.1142/9407.
- [Chi64] R. Chien. Cyclic decoding procedures for bose- chaudhuri-hocquenghem codes. *IEEE Transactions on Information Theory (TIT)*, 10(1):357–363, October 1964. doi:10.1109/TIT.1964.1053699.
- [Mas69] J. Massey. Shift-register synthesis and bch decoding. *IEEE Transactions on Information Theory (TIT)*, 15(1):122–127, January 1969. doi:10.1109/TIT.1969.1054260.
- [CF02] J. Chen and M. P. C. Fossorier. Density evolution for two improved bp-based decoding algorithms of ldpc codes. *IEEE Communications Letters (COMML)*, 6(5):208–210, May 2002. doi:10.1109/4234.1001666.
- [DDB14] M. Fossorier D. Declercq and E. Biglieri. *Channel Coding: Theory, Algorithms, and Applications*. Academic Press, 2014. ISBN 978-0-12-396499-1. doi:10.1016/C2011-0-07211-3.
- [FMI99] M. P. C. Fossorier, M. Mihaljevic, and H. Imai. Reduced complexity iterative decoding of low-density parity check codes based on belief propagation. *IEEE Transactions on Communications (TCOM)*, 47(5):673–680, May 1999. doi:10.1109/26.768759.
- [LGK+19] K. Le, F. Ghaffari, L. Kessal, D. Declercq, E. Boutillon, C. Winstead, and B. Vasić. A probabilistic parallel bit-flipping decoder for low-density parity-check codes. *IEEE Transactions on Circuits and Systems I: Regular Papers*, 66(1):403–416, Jan 2019. doi:10.1109/TCSI.2018.2849679.
- [MN95] D. J. C. MacKay and R. M. Neal. Good codes based on very sparse matrices. In *IMA International Conference on Cryptography and Coding (IMA-CCC)*, 100–111. UK, December 1995. Springer. doi:10.1007/3-540-60693-9_13.
- [RL09] W. Ryan and S. Lin. *Channel codes: classical and modern*. Cambridge University Press, September 2009. ISBN 978-0-511-64182-4. URL: <http://www.cambridge.org/9780521848688>.
- [Spi01] M.G. Luby ; M. Mitzenmacher ; M.A. Shokrollahi ; D.A. Spielman. Efficient erasure correcting codes. *IEEE Transactions on Information Theory (TIT)*, 47(2):569 – 584, February 2001. doi:10.1109/18.910575.
- [WNY+10] T. Wadayama, K. Nakamura, M. Yagita, Y. Funahashi, S. Usami, and I. Takumi. Gradient descent bit flipping algorithms for decoding ldpc codes. *IEEE Transactions on Communications (TCOM)*, 58(6):1610–1614, June 2010. doi:10.1109/TCOMM.2010.06.090046.
- [YPNA01] E. Yeo, P. Pakzad, B. Nikolic, and V. Anantharam. High throughput low-density parity-check decoder architectures. In *Global Communications Conference (GLOBECOM)*, volume 5, 3019–3024 vol.5. IEEE, 2001. doi:10.1109/GLOCOM.2001.965981.
- [ZF02] J. Zhang and M. Fossorier. Shuffled belief propagation decoding. In *Asilomar Conference on Signals, Systems, and Computers (ACSSC)*, volume 1, 8–15 vol.1. IEEE, November 2002. doi:10.1109/ACSSC.2002.1197141.
- [TV13] I. Tal and A. Vardy. How to construct polar codes. *IEEE Transactions on Information Theory (TIT)*, 59(10):6562–6582, October 2013. doi:10.1109/TIT.2013.2272694.
- [Tri12] P. Trifonov. Efficient design and decoding of polar codes. *IEEE Transactions on Communications (TCOM)*, 60(11):3221–3227, November 2012. doi:10.1109/TCOMM.2012.081512.110872.
- [Ari09] E. Arıkan. Channel polarization: a method for constructing capacity-achieving codes for symmetric binary-input memoryless channels. *IEEE Transactions on Information Theory (TIT)*, 55(7):3051–3073, July 2009. doi:10.1109/TIT.2009.2021379.

- [CAL+16] A. Cassagne, O. Aumage, C. Leroux, D. Barthou, and B. Le Gal. Energy consumption analysis of software polar decoders on low power processors. In *European Signal Processing Conference (EUSIPCO)*, 642–646. IEEE, August 2016. doi:10.1109/EUSIPCO.2016.7760327.
- [CLeGalL+15] A. Cassagne, B. Le Gal, C. Leroux, O. Aumage, and D. Barthou. An efficient, portable and generic library for successive cancellation decoding of polar codes. In *International Workshop on Languages and Compilers for Parallel Computing (LCPC)*. Springer, September 2015. doi:10.1007/978-3-319-29778-1_19.
- [FB14] U. U. Fayyaz and J. R. Barry. Low-complexity soft-output decoding of polar codes. *IEEE Journal on Selected Areas in Communications (JSAC)*, 32(5):958–966, May 2014. doi:10.1109/JSAC.2014.140515.
- [LST12] B. Li, H. Shen, and D. Tse. An adaptive successive cancellation list decoder for polar codes with cyclic redundancy check. *IEEE Communications Letters (COMML)*, 16(12):2044–2047, December 2012. doi:10.1109/LCOMM.2012.111612.121898.
- [LeonardonCL+17] M. Léonardon, A. Cassagne, C. Leroux, C. Jégo, L.-P. Hamelin, and Y. Savaria. Fast and flexible software polar list decoders. *CoRR*, 2017. URL: <http://arxiv.org/abs/1710.08314>, arXiv:1710.08314.
- [SGV+14] G. Sarkis, P. Giard, A. Vardy, C. Thibeault, and W. J. Gross. Fast polar decoders: algorithm and implementation. *IEEE Journal on Selected Areas in Communications (JSAC)*, 32(5):946–957, May 2014. doi:10.1109/JSAC.2014.140514.
- [TV11] I. Tal and A. Vardy. List decoding of polar codes. In *International Symposium on Information Theory (ISIT)*, 1–5. IEEE, July 2011. doi:10.1109/ISIT.2011.6033904.
- [LeGalLJego15] B. Le Gal, C. Leroux, and C. Jégo. Multi-Gb/s software decoding of polar codes. *IEEE Transactions on Signal Processing (TSP)*, 63(2):349–359, January 2015. doi:10.1109/TSP.2014.2371781.
- [Mil15] V. Miloslavskaya. Shortened polar codes. *IEEE Transactions on Information Theory (TIT)*, 61(9):4852–4865, September 2015. doi:10.1109/TIT.2015.2453312.
- [NCL13] K. Niu, K. Chen, and J. R. Lin. Beyond turbo codes: rate-compatible punctured polar codes. In *International Conference on Communications (ICC)*, 3423–3427. IEEE, June 2013. doi:10.1109/ICC.2013.6655078.
- [WL14] R. Wang and R. Liu. A novel puncturing scheme for polar codes. *IEEE Communications Letters (COMML)*, 18(12):2081–2084, December 2014. doi:10.1109/LCOMM.2014.2364845.
- [Ber15] E. R. Berlekamp. *Algebraic Coding Theory (Revised Edition)*. World Scientific, May 2015. First edition from 1968. doi:10.1142/9407.
- [Chi64] R. Chien. Cyclic decoding procedures for bose-chaudhuri-hocquenghem codes. *IEEE Transactions on Information Theory (TIT)*, 10(4):357–363, October 1964. doi:10.1109/TIT.1964.1053699.
- [ISR60] G. Solomon I. S. Reed. Polynomial codes over certain finite fields. *Society for Industrial and Applied Mathematics*, 8(2):300–304, June 1960. doi:10.1137/0108018.
- [Mas69] J. Massey. Shift-register synthesis and bch decoding. *IEEE Transactions on Information Theory (TIT)*, 15(1):122–127, January 1969. doi:10.1109/TIT.1969.1054260.
- [BCJR74] L. Bahl, J. Cocke, F. Jelinek, and J. Raviv. Optimal decoding of linear codes for minimizing symbol error rate (corresp.). *IEEE Transactions on Information Theory (TIT)*, 20(2):284–287, March 1974. doi:10.1109/TIT.1974.1055186.
- [CTL+16] A. Cassagne, T. Tonnellier, C. Leroux, B. Le Gal, O. Aumage, and D. Barthou. Beyond Gbps turbo decoder on multi-core CPUs. In *International Symposium on Turbo Codes and Iterative Information Processing (ISTC)*, 136–140. IEEE, September 2016. doi:10.1109/ISTC.2016.7593092.
- [WWY+13] M. Wu, G. Wang, B. Yin, C. Studer, and J. R. Cavallaro. HSPA+/LTE-A turbo decoder on GPU and multicore CPU. In *Asilomar Conference on Signals, Systems, and Computers (ACSSC)*, 824–828. IEEE, November 2013. doi:10.1109/ACSSC.2013.6810402.

- [BCJR74] L. Bahl, J. Cocke, F. Jelinek, and J. Raviv. Optimal decoding of linear codes for minimizing symbol error rate (corresp.). *IEEE Transactions on Information Theory (TIT)*, 20(2):284–287, March 1974. doi:10.1109/TIT.1974.1055186.
- [CTL+16] A. Cassagne, T. Tonnellier, C. Leroux, B. Le Gal, O. Aumage, and D. Barthou. Beyond Gbps turbo decoder on multi-core CPUs. In *International Symposium on Turbo Codes and Iterative Information Processing (ISTC)*, 136–140. IEEE, September 2016. doi:10.1109/ISTC.2016.7593092.
- [Ton17] T. Tonnellier. *Contribution to the Improvement of the Decoding Performance of Turbo Codes : Algorithms and Architecture*. PhD thesis, Université de Bordeaux, 2017. URL: <https://tel.archives-ouvertes.fr/tel-01580476>.
- [TLLeGal+16] T. Tonnellier, C. Leroux, B. Le Gal, B. Gadat, C. Jégo, and N. Van Wambeke. Lowering the error floor of turbo codes with CRC verification. *IEEE Wireless Communications Letters (WCL)*, 5(4):404–407, August 2016. doi:10.1109/LWC.2016.2571283.
- [VF00] J. Vogt and A. Finger. Improving the max-log-MAP turbo decoder. *IET Electronics Letters*, 36(23):1937–1939, November 2000. doi:10.1049/el:20001357.
- [TLLeGal+16] T. Tonnellier, C. Leroux, B. Le Gal, C. Jégo, B. Gadat, and N. Van Wambeke. Lowering the error floor of double-binary turbo codes: the flip and check algorithm. In *International Symposium on Turbo Codes and Iterative Information Processing (ISTC)*, 156–160. IEEE, September 2016. doi:10.1109/ISTC.2016.7593096.
- [VF00] J. Vogt and A. Finger. Improving the max-log-MAP turbo decoder. *IET Electronics Letters*, 36(23):1937–1939, November 2000. doi:10.1049/el:20001357.
- [Pyn98] R.M. Pyndiah. Near-optimum decoding of product codes: block turbo codes. *IEEE Transactions on Communications (TCOM)*, 46(8):1003–1010, August 1998. doi:10.1109/26.705396.
- [CLGH99] S. Crozier, J. Lodge, P. Guinand, and A. Hunt. Performance of turbo codes with relative prime and golden interleaving strategies. In *International Mobile Satellite Conference (IMSC)*, 268–275. 1999. URL: <https://www.tib.eu/en/search/id/BLCP%3ACN033129464/Performance-of-Turbo-Codes-with-Relative-Prime/>.
- [MN98] M. Matsumoto and T. Nishimura. Mersenne twister: a 623-dimensionally equidistributed uniform pseudo-random number generator. *ACM Transactions on Modeling and Computer Simulation (TOMACS)*, 8(1):3–30, 1998. doi:10.1145/272991.272995.
- [ARS81] T. Aulin, N. Rydbeck, and C. -. Sundberg. Continuous phase modulation - part ii: partial response signaling. *IEEE Transactions on Communications (TCOM)*, 29(3):210–225, March 1981. doi:10.1109/TCOM.1981.1094985.
- [AS81] T. Aulin and C. Sundberg. Continuous phase modulation - part i: full response signaling. *IEEE Transactions on Communications (TCOM)*, 29(3):196–209, March 1981. doi:10.1109/TCOM.1981.1095001.
- [NB13] H. Nikopour and H. Baligh. Sparse Code Multiple Access. In *International Symposium on Personal, Indoor, and Mobile Radio Communications (PIMRC)*, volume, 332–336. Sept 2013. doi:10.1109/PIMRC.2013.6666156.
- [CWC15] M. Cheng, Y. Wu, and Y. Chen. Capacity analysis for non-orthogonal overloading transmissions under constellation constraints. In *International Conference on Wireless Communications Signal Processing (WCSP)*, 1–5. Oct 2015. doi:10.1109/WCSP.2015.7341294.
- [KS16] V. P. Klimentyev and A. B. Sergienko. Detection of scma signal with channel estimation error. In *Conference of Open Innovations Association and Seminar on Information Security and Protection of Information Technology (FRUCT-ISPIT)*, 106–112. April 2016. doi:10.1109/FRUCT-ISPIT.2016.7561515.
- [KS17] V. P. Klimentyev and A. B. Sergienko. Scma codebooks optimization based on genetic algorithm. In *European Wireless Conference*, 1–6. May 2017. doi:.
- [Pro] Altera University Program. The 1st 5g algorithm innovation competition-scma.

- [SWC17] G. Song, X. Wang, and J. Cheng. Signature design of sparsely spread code division multiple access based on superposed constellation distance analysis. *IEEE Access*, 5:23809–23821, 2017. doi:10.1109/ACCESS.2017.2765346.
- [WZC15] Y. Wu, S. Zhang, and Y. Chen. Iterative multiuser receiver in sparse code multiple access systems. In *IEEE International Conference on Communications (ICC)*, 2918–2923. June 2015. doi:10.1109/ICC.2015.7248770.
- [ZXX+16] S. Zhang, K. Xiao, B. Xiao, Z. Chen, B. Xia, D. Chen, and S. Ma. A capacity-based codebook design method for sparse code multiple access systems. In *International Conference on Wireless Communications Signal Processing (WCSP)*, 1–5. Oct 2016. doi:10.1109/WCSP.2016.7752620.
- [BM+58] G. E. P. Box, M. E. Muller, and others. A note on the generation of random normal deviates. *The Annals of Mathematical Statistics*, 29(2):610–611, 1958. doi:10.1214/aoms/1177706645.
- [MT00] G. Marsaglia and W. W. Tsang. The ziggurat method for generating random variables. *Journal of Statistical Software*, 5(8):1–7, 2000. doi:10.18637/jss.v005.i08.
- [MN98] M. Matsumoto and T. Nishimura. Mersenne twister: a 623-dimensionally equidistributed uniform pseudo-random number generator. *ACM Transactions on Modeling and Computer Simulation (TOMACS)*, 8(1):3–30, 1998. doi:10.1145/272991.272995.